

## Activor® 4-relay Output Receiver - RRR01

### Applications – Alarm & Access Control

This 4-relay output remote control can be used to operate Arm (away/ stay), Disarm, Panic and Garage Door for any alarm control panels, as a typical alarm installation. It also can be used to operate other electric devices such as electric strike and auto gate.



### Default Setting

All 4-relay outputs are defaulted to momentary operation.

### Learn a Remote

1. Press and hold the program button PROG on the receiver for one second; LED on.
2. Press any button on the remote to learn (You must learn the remote in by pressing button 1 to keep Default Setting). The LED should flash 3 times, stay on for 4 seconds and then turn off.

### Delete all Remotes

Press and hold program button PROG on the receiver for 5 seconds till the LED turns off. LED will then flash 10 times.

### Delete an Individual Remote

1. Recall the remote which had been learned into the receiver right before the lost remote
2. Press and hold program button PROG on the receiver for 1 second; LED on.
3. Press Button 1 and Button 2 simultaneously; LED should flash 5 times and then turn off; successfully deleting the lost remote.

### Program Relay Operation

Relay 3 & 4 can be programmed to momentary, latching or delay operation.

When learning a remote into the receiver, pressing different buttons will result in different output operations:

	Relay 1	Relay 2	Relay 3	Relay 4
Press 1 to learn	Momentary	Momentary	Momentary	Momentary
Press 2 to learn	Momentary	Momentary	Momentary	Latching
Press 3 to learn	Momentary	Momentary	Momentary	10s delay
Press 4 to learn	Momentary	Momentary	Latching	10s delay

### Specifications:

- 4-relay output: NC & NO
- Operating voltage: 9-15VDC
- Current: 8mA standby; 100mA maximum (all relays operating)
- Standard capacity: 25 remotes
- Reverse power connection protection
- Mounting plate provided for quick receiver installation