

PARADOX

EVO192

Programming Guide

Version 7.11 or higher

High Security and Access System



Warranty

For complete warranty information on this product please refer to the Limited Warranty Statement found on our website: www.paradox.com. Your use of this Paradox product signifies your acceptance of all warranty terms and conditions.

© 2002-2023 Paradox Security Systems (Bahamas) Ltd. All rights reserved. Specifications may change without prior notice. One or more of the following US patents may apply: 7046142, 6215399, 6111256, 6104319, 5920259, 5886632, 5721542, 5287111, and RE39406 and other pending patents may apply. Canadian and international patents may also apply.

Digiplex, Digiplex EVO, Magellan, PosiPIN and BabyWare are trademarks or registered trademarks of Paradox Ltd. or its affiliates in Canada, the United States and/or other countries. For the latest information on products approvals, such as UL and CE, please visit www.paradox.com.

Limitations of Alarm Systems

It must be understood that while your Paradox alarm system is highly advanced and secure, it does not offer any guaranteed protection against burglary, fire or other emergency (fire and emergency options are only available on certain Paradox models). This is due to a number of reasons, including but not limited to inadequate or improper installation/positioning, sensor limitations, battery performance, wireless signal interruption, inadequate maintenance or the potential for the system or telephone lines to be compromised or circumvented. As a result, Paradox does not represent that the alarm system will prevent personal injury or property damage, or in all cases provide adequate warning or protection.

Your security system should therefore be considered as one of many tools available to reduce risk and/or damage of burglary, fire or other emergencies, such other tools include but are not limited to insurance coverage, fire prevention and extinguish devices, and sprinkler systems.

We also strongly recommend that you regularly maintain your security systems and stay aware of new and improved Paradox products and developments.

Warning for Connections to Non-Traditional Telephony (e.g., VoIP)

Paradox alarm equipment was designed to work effectively around traditional telephone systems. For those customers who are using a Paradox alarm panel connected to a non-traditional telephone system, such as Voice Over Internet Protocol (VoIP) that converts the voice signal from your telephone to a digital signal traveling over the Internet, you should be aware that your alarm system may not function as effectively as with traditional telephone systems.

For example, if your VoIP equipment has no battery back-up, during a power failure your system's ability to transmit signals to the central station may be compromised. Or, if your VoIP connection becomes disabled, your telephone line monitoring feature may also be compromised. Other concerns would include, without limitation, Internet connection failures which may be more frequent than regular telephone line outages.

We therefore strongly recommend that you discuss these and other limitations involved with operating an alarm system on a VoIP or other non-traditional telephone system with your installation company. They should be able to offer or recommend measures to reduce the risks involved and give you a better understanding.

Things You Need to Know

About this Programming Guide

Use this programming guide to record programmed settings for your Digiplex EVO control panel. This guide should be used along with the *Digiplex EVO Installation Guide* (available online only) whenever installing or programming your Digiplex EVO system.

Conventions

The following typographical conventions are used throughout this guide:

Section numbers appear in bold typeface, enclosed by brackets: e.g., <i>Enter a section number between [0501]...</i>	WARNING: Important information
Keypad keys and control panel labels appear in small caps, bold typeface: e.g., <i>Press O, and then ENTER to clear a zone's serial number...</i>	NOTE: Suggestion or reminder
Default Settings: Values which appear in bold typeface and/or are preceded by the symbol ▲, signify the default value: e.g., User code length: <input type="checkbox"/> 6 digits ▲ 4 digits (<i>4 digits</i> is the default value)	

Installer Code

The default installer code is **000000**. This code allows you to enter programming mode, where you can program all features, options, and commands of your EVO control panel. To change the installer code, refer to *Installer Code Programming on page 30*.

System Master Code

The default system master code is **1234** or **123456**. This code allows you to utilize any arming method, as well as program user codes. This code can be either four or six digits long.

Panel Reset

Performing a panel reset will reset all panel settings to their preset, default values, or custom settings (if already programmed). To perform a panel reset, press and hold the panel's **RESET** and **AUX** buttons for four seconds, or refer to *Software Reset on page 59*.

Entering Programming Mode

To enter programming mode, proceed as follows:

1. Press and hold the **O** key.
2. Enter your installer code (default is **000000**). Refer to *Installer Code* for details.
3. Enter the four-digit section you wish to program.
4. Enter the required data and record your settings using the worksheets included in this guide.

Decimal and Hexadecimal Programming Table

Certain sections may require the entry of one or more hexadecimal values from 0 to F.


K641R/K641LX/K641+ Keypads

Table 1: Decimal and Hexadecimal Values Using the K641R, K641LX or K641+ Keypads

Key	Value or Action
0 to 9	0 to 9 (hex and decimal)
STAY	A (hex only)
FORCE	B (hex only)
ARM	C (hex only)
DISARM	D (hex only)
BYP	E (hex only)
MEM	F (hex only)
CLEAR	Exit section without saving (hex and decimal)
ENTER	Save current data and advance to next section (hex only)

K656 Keypad

Table 2: Decimal and Hexadecimal Values Using the K656 Keypad

<i>Key</i>	<i>Value or Action</i>
0 to 9	0 to 9 (hex and decimal)
ARM	A (hex only)
SLEEP	B (hex only)
STAY	C (hex only)
OFF	D (hex only)
MENU	E (hex only)
	F (hex only)
CLEAR	Exit section without saving (hex and decimal)
ENTER	Save current data and advance to next section (hex only)

Contents

Serial Number List	7
Zone Programming	10
EOL and ATZ Options	18
Selectable Inputs	18
Resistor Values for EOL and Tamper	18
<i>Selectable Inputs</i>	<i>18</i>
Keyswitch Programming	19
<i>Keyswitch Numbering</i>	<i>19</i>
<i>Keyswitch Parameters</i>	<i>19</i>
<i>Keyswitch Arming/Disarming Report Codes</i>	<i>19</i>
<i>Panic Input Option</i>	<i>19</i>
Programmable Outputs	21
<i>PGM Programming</i>	<i>21</i>
<i>Event and Feature Groups</i>	<i>21</i>
<i>Utility Keys</i>	<i>30</i>
<i>Input Speeds</i>	<i>30</i>
<i>Installer Code Programming</i>	<i>30</i>
User Code Options	31
Arming and Disarming Report Codes	32
Access Control Sections	33
<i>Assigning Doors to the System</i>	<i>33</i>
<i>Schedule Programming</i>	<i>34</i>
<i>Backup Schedules</i>	<i>35</i>
<i>Access Levels</i>	<i>36</i>
<i>Holidays</i>	<i>36</i>
Keypad Numbering	37
Wireless Siren Programming	38
<i>Limitation</i>	<i>38</i>
<i>Certifications</i>	<i>38</i>
Remote Control Programming	38
<i>Remote Control Templates</i>	<i>38</i>
Control Panel Settings	40
System Options	40
Dialer Options	42
Additional Options	43
<i>Schedule Tolerance Window</i>	<i>43</i>
<i>AutoTest Report Settings</i>	<i>43</i>
<i>Timings</i>	<i>43</i>
Communication Settings	43
<i>Account Numbers</i>	<i>43</i>
<i>Reporting Formats</i>	<i>44</i>
System Event Call Direction	45
VDMP3 Voice Module	45
PCS GSM/GPRS Communicator Module	46
<i>BabyWare/PCS Module Connection</i>	<i>46</i>
<i>PCS Module Programming</i>	<i>46</i>
<i>PCS Module Programming</i>	<i>46</i>
<i>SMS Site Name</i>	<i>47</i>
<i>IP/PCS Module (GPRS) Options</i>	<i>47</i>
<i>IP/GPRS Reporting Account Programming</i>	<i>47</i>
<i>IP/PCS Module Report Code Programming</i>	<i>48</i>
Unlock Panel Serial Ports	49
Partition Settings	49
<i>Auto-arm Times</i>	<i>49</i>
<i>Arming/Disarming Report Schedules</i>	<i>49</i>
<i>Partition Timers</i>	<i>50</i>
<i>Partition Options 1</i>	<i>51</i>
<i>Partition Arming/Disarming Options</i>	<i>52</i>
<i>Partition Panic Alarm Options</i>	<i>52</i>
<i>Partition Bell Squawk Options</i>	<i>53</i>
<i>Partition One-touch Options</i>	<i>53</i>
<i>Partition Special Options</i>	<i>53</i>
<i>Partition Arming/Disarming Event Call Direction</i>	<i>54</i>
<i>Partition Alarm/Alarm Restore Event Call Direction</i>	<i>54</i>
<i>Partition Tamper/Tamper Restore Event Call Direction</i>	<i>55</i>
<i>Special Arming Exit Delay</i>	<i>55</i>
<i>No Movement Schedule</i>	<i>56</i>
Special and Trouble Report Codes	56
<i>Special Report Codes</i>	<i>56</i>
<i>Trouble Report Codes</i>	<i>57</i>
Additional Settings and Modes	57
<i>Paradox PMCS Memory Key</i>	<i>58</i>
<i>Automatic Report Code Programming</i>	<i>58</i>
<i>Software Reset</i>	<i>59</i>
<i>Installer Function Keys</i>	<i>59</i>
<i>Automatic Report Codes</i>	<i>60</i>
<i>Contact ID Report Codes</i>	<i>63</i>
Keypad Programming	65
<i>K641R/K641LX/K641+ and K656</i>	<i>65</i>
<i>TM50 and TM70</i>	<i>67</i>
<i>Wireless Receiver Options</i>	<i>68</i>
<i>Remote Control Options</i>	<i>68</i>
<i>Viewing Serial Numbers</i>	<i>68</i>
<i>Previous Battery Life</i>	<i>69</i>
<i>2WPGM Delays</i>	<i>70</i>
<i>2WPGM Options</i>	<i>70</i>
<i>Label Programming</i>	<i>71</i>
<i>Using the Memory Key</i>	<i>72</i>
<i>Combus Voltmeter</i>	<i>72</i>
<i>Updating Firmware Using BabyWare</i>	<i>72</i>
Hardware Connections for the Control Panel	73
<i>Milliamp Consumption</i>	<i>73</i>
<i>Connecting the Combus in Noisy Environments</i>	<i>74</i>
<i>Built-in RTC</i>	<i>74</i>
Trouble Display	75
<i>K641R/K641LX/K641+</i>	<i>75</i>
<i>K656</i>	<i>75</i>
<i>Trouble Groups</i>	<i>75</i>
EN50131 Compliancy	76
.....	79

List of Worksheets

Worksheet 1: System Planning	7
Worksheet 2: Zone Report Codes for EVO192	10
Worksheet 3: Zone Information	12
Worksheet 4: Zone Report Codes	16
Worksheet 5: Zone Labels	17
Worksheet 6: Zone Input Options	18
Worksheet 7: Zone Input Options	18
Worksheet 8: Keyswitch Numbering and Parameters	20
Worksheet 9: Arming and Disarming with Keyswitch Report Codes	20
Worksheet 10: Input Speeds	30
Worksheet 11: Installer Code Programming	30
Worksheet 12: Arming and Disarming Report Codes	32
Worksheet 13: Assigning Doors	33
Worksheet 14: Programming Primary Schedules	34
Worksheet 15: Programming Secondary Schedules	35
Worksheet 16: Programming Backup Schedules	35
Worksheet 17: Programming Access Levels	36
Worksheet 18: Programming Holidays	36
Worksheet 19: Numbering Keypads	37
Worksheet 20: Programming Remote Controls	39
Worksheet 21: Control Panel Settings	40
Worksheet 22: Schedule Tolerance Window	43
Worksheet 23: AutoTest Report Settings	43
Worksheet 24: Timings Settings	43
Worksheet 25: Account Number Settings	44
Worksheet 26: Reporting Formats for Section [3070]	44
Worksheet 27: Reporting Formats for Sections [3071] to [3074]	44
Worksheet 28: VDMP3 Settings	45
Worksheet 29: VDMP3 functions for Sections [3091] to [3098]	45
Worksheet 30: BabyWare/PCS Module Connection Settings	46
Worksheet 31: PCS Module Settings	46
Worksheet 32: SMS Site Name Settings	47
Worksheet 33: IP Account Number Settings	47
Worksheet 34: IP Receiver 1 Configuration	48
Worksheet 35: IP Receiver 2 Configuration	48
Worksheet 36: IP Receiver 3 Configuration	48
Worksheet 37: IP Receiver 4 Configuration	48
Worksheet 38: PCS Module Report Codes	48
Worksheet 39: IP Module Report Codes	49
Worksheet 40: Partition Label Settings for Sections [3100] to [3800]	49
Worksheet 41: Auto-arm Time Settings	49
Worksheet 42: Arming Report Schedule Settings	49
Worksheet 43: Disarming Report Schedule Settings	50
Worksheet 44: Partition Timer Settings	50
Worksheet 45: Special Arming Exit Delay Settings	55
Worksheet 46: No Movement Schedule Settings	56
Worksheet 47: Special Report Code Settings	56
Worksheet 48: Trouble Report Code Settings	57
Worksheet 49: Keypad Settings for Sections [007] to [013]	66
Worksheet 50: Door Unlocked Schedule (K641R only)	66
Worksheet 51: PGM Activation and Deactivation	66
Worksheet 52: Keypad options 2	66
Worksheet 53: TM50/TM70 Keypad Settings for Sections [004] to [005]	67
Worksheet 54: Wireless Zones	68
Worksheet 55: 2WPGM Serial Numbers	69
Worksheet 56: 2WPGM Activation/Deactivation Events	70
Worksheet 57: 2WPGM Delays	70
Worksheet 58: Milliamp Consumption of Various Devices	73
Worksheet 59: Partition Timers (Partitions 1 - 4)	78
Worksheet 60: Partition Timers (Partitions 5 - 8)	78

Serial Number List

Worksheet 1: System Planning

<i>Serial # Sticker</i>	<i>Serial # Sticker</i>	<i>Serial # Sticker</i>	<i>Serial # Sticker</i>	<i>Serial # Sticker</i>	<i>Serial # Sticker</i>
1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18
19	20	21	22	23	24
25	26	27	28	29	30
31	32	33	34	35	36
37	38	39	40	41	42
43	44	45	46	47	48
49	50	51	52	53	54
55	56	57	58	59	60
61	62	63	64	65	66
67	68	69	70	71	72
73	74	75	76	77	78
79	80	81	82	83	84
85	86	87	88	89	90

Worksheet 1: System Planning (Continued)

<i>Serial # Sticker</i>	<i>Serial # Sticker</i>	<i>Serial # Sticker</i>	<i>Serial # Sticker</i>	<i>Serial # Sticker</i>	<i>Serial # Sticker</i>
91	92	93	94	95	96
97	98	99	100	101	102
103	104	105	106	107	108
109	110	111	112	113	114
115	116	117	118	119	120
121	122	123	124	125	126
127	128	129	130	131	132
133	134	135	136	137	138
139	140	141	142	143	144
145	146	147	148	149	150
151	152	153	154	155	156
157	158	159	160	161	162
163	164	165	166	167	168
169	170	171	172	173	174
175	176	177	178	179	180
181	182	183	184	185	186

Worksheet 1: System Planning (Continued)

<i>Serial # Sticker</i>	<i>Serial # Sticker</i>	<i>Serial # Sticker</i>	<i>Serial # Sticker</i>	<i>Serial # Sticker</i>	<i>Serial # Sticker</i>
187	188	189	190	191	192
193	194	195	196	197	198
199	200	201	202	203	204
205	206	207	208	209	210
211	212	213	214	215	216
217	218	219	220	221	222
223	224	225	226	227	228
229	230	231	232	233	234
235	236	237	238	239	240
241	242	243	244	245	246
247	248	249	250	251	252
253	254				

Zone Programming

Use the following section to program all zones on your EVO192 control panel.

To program zones:

1. Enter section **[0400]**.
2. Enter the zone number you wish to program.
NOTE: In any zone programming option, pressing **ACC** on the K641R/K641LX/K641+, or **▲** on the K656, will save the data and access the next zone on the same option screen. Pressing **TRBL/TBL** on the K641R/K641LX/K641+, or **△** on the K656, will save the data and return to the previous zone on the same option screen. In addition, if you are using a keypad other than a K641R, K641LX, K641+, K656, use the section numbers outlined in *Table 6 on page 10* to program zones. Without a K641R, K641LX, K641+, or K656 keypad, you can only program zones 1 to 96.
3. Enter the zone's eight-digit serial number, then its three-digit input number (the input number is not needed for modules with only one input). Press **0**, and then **ENTER** to clear a zone's serial number.
NOTE: When programming a keypad zone for the K641R/K641+, K656, or the TM50/TM70 keypads, enter the input number 001. For the K641LX, enter input number 033.
4. Enter the following zone parameters; default setting is **(01) (*2*4***):**
 - a. Zone definition, by referring to *Table 3 on page 10*
 - b. Partition, by referring to *Table 4 on page 10*
 - c. Zone option, by referring to *Table 5 on page 10*
 - d. Zone extended option (1*****), by referring to *Table 7 on page 11*
5. Enter the zone's report codes, by referring to *Worksheet 2 on page 10*
 default: **(00) (00) (00) (00)**.
6. Enter the zone's label.
7. Press **ENTER** to save and proceed to the next zone.
8. Pressing **CLEAR** twice will exit the zone programming menus. To save your modifications, make sure to press **ENTER** before pressing **CLEAR**.

Table 3: Zone Definitions for EVO192

Input Value	Description
0	Disabled (default)
1	Entry delay 1
2	Entry delay 2
3	Follow
4	Instant
5	24 hr. buzzer
6	24 hr. burglary
7	24 hr. hold-up
8	24 hr. gas
9	24 hr. heat
A	24 hr. water
B	24 hr. freeze
C	Delayed 24 hr. fire
D	Standard 24 hr. fire
E	Stay delay 1
F	Stay delay 2/ Anti-Mask*

Table 4: Partition Assignment for EVO192

Input Value	Description
1	Assign to partition 1
2	Assign to partition 2
3	Assign to partition 3
4	Assign to partition 4
5	Assign to partition 5
6	Assign to partition 6
7	Assign to partition 7
8	Assign to partition 8

Table 5: Zone Options for EVO192

Input Value	Description	
1	Auto zone shutdown enabled*	
2	Bypass enabled (default: ON)	
3	Stay zone	
4	Force zone (default: ON)	
7	Intellizone	
8	Delay before transmission	
Zone Alarm Type		
Input Value	Zone Alarm Type	
5	6	
OFF	OFF	Steady alarm
OFF	ON	Pulsed alarm
ON	OFF	Silent alarm
ON	ON	Report only

***When EN 50131 is enabled, the zone option Auto-zone shutdown (option 1) is enabled for all zones. The zone definition option F (Stay delay 2) is replaced by an anti-masking trouble.**

Worksheet 2: Zone Report Codes for EVO192

Alarm Report Code	Alarm Restore Report Code	Tamper Report Code	Tamper Restore Report Code
__ / __	__ / __	__ / __	__ / __

For Ademco Slow, Silent Knight Fast, SESCOA, or Ademco Express, key-in desired two-digit hex values from 00 to FF.

Ademco Format

Use section **[4032]** to program a set of default Ademco report codes from the *Automatic Report Code Programming on page 58*. Then, to program the remaining report codes or to change some of the defaults, enter the individual sections and key-in the desired two-digit hex value found in the *Contact ID Report Codes*.

SIA Format

Use section **[4032]** to program a set of SIA report codes from the *Automatic Report Code Programming on page 58*. Codes that have not been set to default can be set to default manually by entering FF in the appropriate section. To disable the reporting of an event, enter **00** in the appropriate section.

Table 6: Section Numbers Used for Zone Programming

Zone Number	Zone Serial & Input Numbers	Zone Parameters	Zone Report Codes	Zone Label
1	[0001]	[0101]	[0201]	[0301]
2	[0002]	[0102]	[0202]	[0302]
	+ 1 per zone	+ 1 per zone	+ 1 per zone	+ 1 per zone
96	[0096]	[0196]	[0296]	[0396]

Table 7: Zone Extended Options

Option	Description	OFF		ON	
1	Zone tamper (follow global settings in section [3034] option 5 & 6)	<input type="checkbox"/>	Disabled	▲	Enabled
2 & 3	Zone tamper supervision		Refer to <i>Table 9 on page 11</i>		Refer to <i>Table 9 on page 11</i>
4	Anti-mask trouble (follow global settings in section [3029] option 5 & 6)	<input type="checkbox"/>	Disabled	▲	Enabled
5 & 6	Anti-mask supervision	-	Refer to <i>Table 10 on page 11</i>	-	Refer to <i>Table 10 on page 11</i>
7	Future use	-	-	-	-

Table 9: Zone Tamper Options

Option		Description
2	3	
OFF	OFF	Disabled (default)
OFF	ON	Generates trouble only (when armed or disarmed)
ON	OFF	When armed: alarm When disarmed: generates trouble only
ON	ON	When armed: alarm When disarmed: generates audible alarm

Table 10: Anti-Mask Supervision Options

Option		Description
5	6	
OFF	OFF	Disabled (default)
OFF	ON	Generates trouble only (when armed or disarmed)
ON	OFF	When armed: alarm When disarmed: generates trouble only
ON	ON	When armed: alarm When disarmed: generates audible alarm

Worksheet 3: Zone Information

Zone	Description	Module	Eight-digit Serial Number	Input Number	Zone Definition	Partition Assignment	Zone Options
1			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
2			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
3			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
4			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
5			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
6			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
7			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
8			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
9			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
10			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
11			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
12			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
13			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
14			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
15			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
16			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
17			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
18			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
19			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
20			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
21			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
22			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
23			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
24			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
25			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
26			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
27			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
28			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
29			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
30			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
31			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
32			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
33			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
34			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
35			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
36			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
37			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
38			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
39			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
40			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
41			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
42			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
43			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
44			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
45			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
46			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
47			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8
48			/ / / / / / / /	/ /			1 2 3 4 5 6 7 8

Worksheet 3: Zone Information (Continued)

Zone	Description	Module	Eight-digit Serial Number	Input Number	Zone Definition	Partition Assignment	Zone Options
49			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
50			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
51			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
52			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
53			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
54			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
55			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
56			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
57			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
58			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
59			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
60			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
61			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
62			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
63			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
64			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
65			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
66			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
67			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
68			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
69			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
70			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
71			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
72			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
73			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
74			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
75			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
76			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
77			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
78			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
79			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
80			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
81			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
82			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
83			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
84			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
85			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
86			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
87			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
88			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
89			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
90			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
91			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
92			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
93			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
94			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
95			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
96			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8

Worksheet 3: Zone Information (Continued)

Zone	Description	Module	Eight-digit Serial Number	Input Number	Zone Definition	Partition Assignment	Zone Options
97			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
98			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
99			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
100			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
101			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
102			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
103			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
104			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
105			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
106			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
107			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
108			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
109			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
110			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
111			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
112			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
113			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
114			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
115			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
116			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
117			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
118			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
119			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
120			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
121			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
122			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
123			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
124			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
125			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
126			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
127			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
128			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
129			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
130			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
131			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
132			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
133			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
134			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
135			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
136			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
137			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
138			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
139			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
140			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
141			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
142			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
143			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
144			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8

Worksheet 3: Zone Information (Continued)

Zone	Description	Module	Eight-digit Serial Number	Input Number	Zone Definition	Partition Assignment	Zone Options
145			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
146			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
147			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
148			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
149			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
150			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
151			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
152			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
153			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
154			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
155			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
156			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
157			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
158			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
159			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
160			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
161			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
162			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
163			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
164			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
165			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
166			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
167			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
168			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
169			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
170			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
171			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
172			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
173			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
174			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
175			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
176			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
177			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
178			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
179			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
180			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
181			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
182			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
183			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
184			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
185			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
186			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
187			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
188			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
189			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
190			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
191			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8
192			/ / / / / / / /	/ / /			1 2 3 4 5 6 7 8

Worksheet 4: Zone Report Codes

Zone #	Alarm Report Codes	Alarm Restore Report Codes	Tamper Report Codes	Tamper Restore Report Codes	Zone #	Alarm Report Codes	Alarm Restore Report Codes	Tamper Report Codes	Tamper Restore Report Codes	Zone #	Alarm Report Codes	Alarm Restore Report Codes	Tamper Report Codes	Tamper Restore Report Codes	Zone #	Alarm Report Codes	Alarm Restore Report Codes	Tamper Report Codes	Tamper Restore Report Codes
1	/	/	/	/	49	/	/	/	/	97	/	/	/	/	145	/	/	/	/
2	/	/	/	/	50	/	/	/	/	98	/	/	/	/	146	/	/	/	/
3	/	/	/	/	51	/	/	/	/	99	/	/	/	/	147	/	/	/	/
4	/	/	/	/	52	/	/	/	/	100	/	/	/	/	148	/	/	/	/
5	/	/	/	/	53	/	/	/	/	101	/	/	/	/	149	/	/	/	/
6	/	/	/	/	54	/	/	/	/	102	/	/	/	/	150	/	/	/	/
7	/	/	/	/	55	/	/	/	/	103	/	/	/	/	151	/	/	/	/
8	/	/	/	/	56	/	/	/	/	104	/	/	/	/	152	/	/	/	/
9	/	/	/	/	57	/	/	/	/	105	/	/	/	/	153	/	/	/	/
10	/	/	/	/	58	/	/	/	/	106	/	/	/	/	154	/	/	/	/
11	/	/	/	/	59	/	/	/	/	107	/	/	/	/	155	/	/	/	/
12	/	/	/	/	60	/	/	/	/	108	/	/	/	/	156	/	/	/	/
13	/	/	/	/	61	/	/	/	/	109	/	/	/	/	157	/	/	/	/
14	/	/	/	/	62	/	/	/	/	110	/	/	/	/	158	/	/	/	/
15	/	/	/	/	63	/	/	/	/	111	/	/	/	/	159	/	/	/	/
16	/	/	/	/	64	/	/	/	/	112	/	/	/	/	160	/	/	/	/
17	/	/	/	/	65	/	/	/	/	113	/	/	/	/	161	/	/	/	/
18	/	/	/	/	66	/	/	/	/	114	/	/	/	/	162	/	/	/	/
19	/	/	/	/	67	/	/	/	/	115	/	/	/	/	163	/	/	/	/
20	/	/	/	/	68	/	/	/	/	116	/	/	/	/	164	/	/	/	/
21	/	/	/	/	69	/	/	/	/	117	/	/	/	/	165	/	/	/	/
22	/	/	/	/	70	/	/	/	/	118	/	/	/	/	166	/	/	/	/
23	/	/	/	/	71	/	/	/	/	119	/	/	/	/	167	/	/	/	/
24	/	/	/	/	72	/	/	/	/	120	/	/	/	/	168	/	/	/	/
25	/	/	/	/	73	/	/	/	/	121	/	/	/	/	169	/	/	/	/
26	/	/	/	/	74	/	/	/	/	122	/	/	/	/	170	/	/	/	/
27	/	/	/	/	75	/	/	/	/	123	/	/	/	/	171	/	/	/	/
28	/	/	/	/	76	/	/	/	/	124	/	/	/	/	172	/	/	/	/
29	/	/	/	/	77	/	/	/	/	125	/	/	/	/	173	/	/	/	/
30	/	/	/	/	78	/	/	/	/	126	/	/	/	/	174	/	/	/	/
31	/	/	/	/	79	/	/	/	/	127	/	/	/	/	175	/	/	/	/
32	/	/	/	/	80	/	/	/	/	128	/	/	/	/	176	/	/	/	/
33	/	/	/	/	81	/	/	/	/	129	/	/	/	/	177	/	/	/	/
34	/	/	/	/	82	/	/	/	/	130	/	/	/	/	178	/	/	/	/
35	/	/	/	/	83	/	/	/	/	131	/	/	/	/	179	/	/	/	/
36	/	/	/	/	84	/	/	/	/	132	/	/	/	/	180	/	/	/	/
37	/	/	/	/	85	/	/	/	/	133	/	/	/	/	181	/	/	/	/
38	/	/	/	/	86	/	/	/	/	134	/	/	/	/	182	/	/	/	/
39	/	/	/	/	87	/	/	/	/	135	/	/	/	/	183	/	/	/	/
40	/	/	/	/	88	/	/	/	/	136	/	/	/	/	184	/	/	/	/
41	/	/	/	/	89	/	/	/	/	137	/	/	/	/	185	/	/	/	/
42	/	/	/	/	90	/	/	/	/	138	/	/	/	/	186	/	/	/	/
43	/	/	/	/	91	/	/	/	/	139	/	/	/	/	187	/	/	/	/
44	/	/	/	/	92	/	/	/	/	140	/	/	/	/	188	/	/	/	/
45	/	/	/	/	93	/	/	/	/	141	/	/	/	/	189	/	/	/	/
46	/	/	/	/	94	/	/	/	/	142	/	/	/	/	190	/	/	/	/
47	/	/	/	/	95	/	/	/	/	143	/	/	/	/	191	/	/	/	/
48	/	/	/	/	96	/	/	/	/	144	/	/	/	/	192	/	/	/	/

Worksheet 5: Zone Labels

Zone #	Zone Label	Zone #	Zone Label	Zone #	Zone Label	Zone #	Zone Label
1	_____	49	_____	97	_____	145	_____
2	_____	50	_____	98	_____	146	_____
3	_____	51	_____	99	_____	147	_____
4	_____	52	_____	100	_____	148	_____
5	_____	53	_____	101	_____	149	_____
6	_____	54	_____	102	_____	150	_____
7	_____	55	_____	103	_____	151	_____
8	_____	56	_____	104	_____	152	_____
9	_____	57	_____	105	_____	153	_____
10	_____	58	_____	106	_____	154	_____
11	_____	59	_____	107	_____	155	_____
12	_____	60	_____	108	_____	156	_____
13	_____	61	_____	109	_____	157	_____
14	_____	62	_____	110	_____	158	_____
15	_____	63	_____	111	_____	159	_____
16	_____	64	_____	112	_____	160	_____
17	_____	65	_____	113	_____	161	_____
18	_____	66	_____	114	_____	162	_____
19	_____	67	_____	115	_____	163	_____
20	_____	68	_____	116	_____	164	_____
21	_____	69	_____	117	_____	165	_____
22	_____	70	_____	118	_____	166	_____
23	_____	71	_____	119	_____	167	_____
24	_____	72	_____	120	_____	168	_____
25	_____	73	_____	121	_____	169	_____
26	_____	74	_____	122	_____	170	_____
27	_____	75	_____	123	_____	171	_____
28	_____	76	_____	124	_____	172	_____
29	_____	77	_____	125	_____	173	_____
30	_____	78	_____	126	_____	174	_____
31	_____	79	_____	127	_____	175	_____
32	_____	80	_____	128	_____	176	_____
33	_____	81	_____	129	_____	177	_____
34	_____	82	_____	130	_____	178	_____
35	_____	83	_____	131	_____	179	_____
36	_____	84	_____	132	_____	180	_____
37	_____	85	_____	133	_____	181	_____
38	_____	86	_____	134	_____	182	_____
39	_____	87	_____	135	_____	183	_____
40	_____	88	_____	136	_____	184	_____
41	_____	89	_____	137	_____	185	_____
42	_____	90	_____	138	_____	186	_____
43	_____	91	_____	139	_____	187	_____
44	_____	92	_____	140	_____	188	_____
45	_____	93	_____	141	_____	189	_____
46	_____	94	_____	142	_____	190	_____
47	_____	95	_____	143	_____	191	_____
48	_____	96	_____	144	_____	192	_____

EOL and ATZ Options

Use the following section to configure EOL and ATZ for EVO's on-board inputs.

Selectable Inputs

1. Enter panel section **[3033]**.
2. Enter the module's serial number.
3. Enter module section **[0401]** (refer to *Worksheet 7 on page 18*). Each of the 8 digits represent one of the 8 inputs.

Worksheet 6: Zone Input Options

Section	Input 1 / Input 2	Input 3 / Input 4	Input 5 / Input 6	Input 7 / Input 8
[0401]	— / —	— / —	— / —	— / —
Zone Input Options	(0/0)	(0/0)	(0/0)	(0/0)

Resistor Values for EOL and Tamper

Use the following section to select different resistor values for EOL and tamper.

Selectable Inputs

1. Enter panel section **[4003]**.
2. Enter the module's serial number.
3. Enter module section **[402]** (refer to *Worksheet 7 on page 18*). Each of the 8 digits represent one of the 8 inputs.


Worksheet 7: Zone Input Options

Section	Input 1 / Input 2	Input 3 / Input 4	Input 5 / Input 6	Input 7 / Input 8
[0402]	— / —	— / —	— / —	— / —
Zone Input Options	(0/0)	(0/0)	(0/0)	(0/0)

Table 11: Zone Input Option Individual Settings

Option	EOL Value	Zone A Value	Zone B Value (ATZ)
0	1K	1K	2K2
1	2K2	1K5	N/A
2	3K3	3K3	N/A
3	4K7	4K7	N/A
4	4K7	6K8	N/A
5	2K2	4K7	N/A
6	8K2	8K2	N/A

Figure 1: Selectable Input Resistor for EOL and Tamper

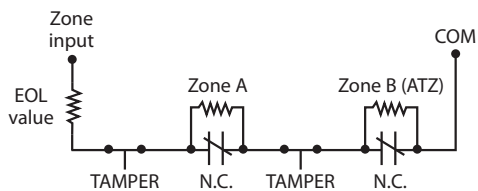

Keyswitch Programming

Use the following section to program keyswitches on your EVO192 control panel. Keyswitch programming information is entered in *Worksheet 8 on page 20* and *Worksheet 9 on page 20*.

Keyswitch Numbering

This feature allows the installer to assign a keyswitch to an addressable or hardwired detection device. To assign keyswitch numbering, proceed as follows:

1. Enter a section number between **[0501]** and **[0532]**. These sections represent keyswitches 1 to 32, respectively.
2. In column A, of *Worksheet 8 on page 20*, enter the eight-digit serial number of the module, to which the keyswitch is connected.
3. In column B, of *Worksheet 8 on page 20*, enter the three-digit input number of the module, to which the keyswitch is connected.

Keyswitch Parameters

This feature defines the keyswitch's partition assignment and arming method. To assign keyswitch parameters, proceed as follows:

1. Enter a section number between **[0601]** and **[0632]**. These sections represent keyswitches 1 to 32, respectively.
2. In column C, of *Worksheet 8 on page 20*, enter the keyswitch definition (refer to *Table 12 on page 19* for details). The default setting is set to **disabled**.
3. In column D, of *Worksheet 8 on page 20*, enter the desired partition to which the keyswitch is assigned (refer to *Table 13 on page 19* for details). By default, keyswitches are not assigned to a partition.
4. In column E, of *Worksheet 8 on page 20*, enter the keyswitch option (refer to *Table 14 on page 19* for details). By default, all settings are set to OFF.

Table 12: Keyswitch Definitions

Input Value	Description
0	Disabled (default)
1	Momentary keyswitch
2	Maintained keyswitch
3	Generates a utility key event on <i>open</i> *
4	Generates a utility key event on <i>open and close</i> *
5	Panic input option**

* To use this keyswitch definition, one or more PGMs must be programmed with the *Utility Key* event (refer to *Event Group 048 in Table 16 on page 21*).

** To use this keyswitch definition, refer to *Panic Input Option on page 19*.

Table 13: Keyswitch Partition/Panic Type Assignment

Input Value	Description
0	<ul style="list-style-type: none"> • Not assigned to a partition (default) • Panic type 1: police*
1	<ul style="list-style-type: none"> • Assign keyswitch to partition 1 • Panic type 2: medical*
2	<ul style="list-style-type: none"> • Assign keyswitch to partition 2 • Panic type 3: fire*
3	Assign keyswitch to partition 3
4	Assign keyswitch to partition 4
5	Assign keyswitch to partition 5
6	Assign keyswitch to partition 6
7	Assign keyswitch to partition 7
8	Assign keyswitch to partition 8

* Only applicable for keyswitch definition 5 (*panic input option in Table 12 on page 19*). Refer to *Panic Input Option on page 19* for details.

Table 14: Keyswitch Options/Partition Assignment

Input Value	Description
1	Assign keyswitch to partition 1*
2	Assign keyswitch to partition 2*
3	<ul style="list-style-type: none"> • Disarm only • Assign keyswitch to partition 3*
4	<ul style="list-style-type: none"> • OFF: disarm; ON: disarm only if Stay/Instant armed • Assign keyswitch to partition 4*
5	<ul style="list-style-type: none"> • Arm only • Assign keyswitch to partition 5*
6	<ul style="list-style-type: none"> • Stay arming** • Assign keyswitch to partition 6*
7	<ul style="list-style-type: none"> • Force arming** • Assign keyswitch to partition 7*
8	<ul style="list-style-type: none"> • Instant arming** • Assign keyswitch to partition 8*

* Only applicable for keyswitch definition 5 (*panic input option in Table 12 on page 19*). Refer to *Panic Input Option on page 19* for details.

** Select only one of these arming types. If all are OFF, keyswitch will use regular arming by default.

Keyswitch Arming/Disarming Report Codes

For Ademco Slow, Silent Knight Fast, SESCOA, or Ademco Express, key-in desired two-digit hex values from 00 to FF. Use *Worksheet 9 on page 20* to record settings.

Ademco Contact ID

- Use section **[4033]** to program a set of default Ademco report codes, using *Table 55 on page 58*.
- To program the remaining report codes or change certain defaults, access the individual sections and key-in the desired two-digit hex value, found in *Table 59 on page 63*.

SIA Format

- Use section **[4033]** to program a set of SIA report codes, using *Table 55 on page 58*.
- Codes that have not been set to *default* can be set as such manually, by entering FF in the appropriate section.
- To disable the reporting of an event, enter **00** in the appropriate section.

Panic Input Option

To use the panic input option when programming keyswitch parameters in sections **[0601]** to **[0632]**, proceed as follows:

1. Enable partition panic alarm options, by referring to *Table 46 on page 52*.
2. Enter **5** to access the panic input option (refer to *Table 12 on page 19*).
3. Enter **0**, **1**, or **2** to assign the type of panic. As shown in *Table 13 on page 19*, 0 = police; 1 = medical; 2 = fire.
4. Enter **1** to **8** to assign the keyswitch to partitions 1 through 8, respectively (refer to *Table 14 on page 19*).

Worksheet 8: Keyswitch Numbering and Parameters

Keyswitch #	Description	Module	Section	A	B	Section	C	D	E
				Eight-digit Serial Number	Input Number		Keyswitch Definition	Keyswitch Partition	Keyswitch Options
1			[0501]	_/_/_/_/_/_/_/	_/_/	[0601]	___	___	1 2 3 4 5 6 7 8
2			[0502]	_/_/_/_/_/_/_/	_/_/	[0602]	___	___	1 2 3 4 5 6 7 8
3			[0503]	_/_/_/_/_/_/_/	_/_/	[0603]	___	___	1 2 3 4 5 6 7 8
4			[0504]	_/_/_/_/_/_/_/	_/_/	[0604]	___	___	1 2 3 4 5 6 7 8
5			[0505]	_/_/_/_/_/_/_/	_/_/	[0605]	___	___	1 2 3 4 5 6 7 8
6			[0506]	_/_/_/_/_/_/_/	_/_/	[0606]	___	___	1 2 3 4 5 6 7 8
7			[0507]	_/_/_/_/_/_/_/	_/_/	[0607]	___	___	1 2 3 4 5 6 7 8
8			[0508]	_/_/_/_/_/_/_/	_/_/	[0608]	___	___	1 2 3 4 5 6 7 8
9			[0509]	_/_/_/_/_/_/_/	_/_/	[0609]	___	___	1 2 3 4 5 6 7 8
10			[0510]	_/_/_/_/_/_/_/	_/_/	[0610]	___	___	1 2 3 4 5 6 7 8
11			[0511]	_/_/_/_/_/_/_/	_/_/	[0611]	___	___	1 2 3 4 5 6 7 8
12			[0512]	_/_/_/_/_/_/_/	_/_/	[0612]	___	___	1 2 3 4 5 6 7 8
13			[0513]	_/_/_/_/_/_/_/	_/_/	[0613]	___	___	1 2 3 4 5 6 7 8
14			[0514]	_/_/_/_/_/_/_/	_/_/	[0614]	___	___	1 2 3 4 5 6 7 8
15			[0515]	_/_/_/_/_/_/_/	_/_/	[0615]	___	___	1 2 3 4 5 6 7 8
16			[0516]	_/_/_/_/_/_/_/	_/_/	[0616]	___	___	1 2 3 4 5 6 7 8
17			[0517]	_/_/_/_/_/_/_/	_/_/	[0617]	___	___	1 2 3 4 5 6 7 8
18			[0518]	_/_/_/_/_/_/_/	_/_/	[0618]	___	___	1 2 3 4 5 6 7 8
19			[0519]	_/_/_/_/_/_/_/	_/_/	[0619]	___	___	1 2 3 4 5 6 7 8
20			[0520]	_/_/_/_/_/_/_/	_/_/	[0620]	___	___	1 2 3 4 5 6 7 8
21			[0521]	_/_/_/_/_/_/_/	_/_/	[0621]	___	___	1 2 3 4 5 6 7 8
22			[0522]	_/_/_/_/_/_/_/	_/_/	[0622]	___	___	1 2 3 4 5 6 7 8
23			[0523]	_/_/_/_/_/_/_/	_/_/	[0623]	___	___	1 2 3 4 5 6 7 8
24			[0524]	_/_/_/_/_/_/_/	_/_/	[0624]	___	___	1 2 3 4 5 6 7 8
25			[0525]	_/_/_/_/_/_/_/	_/_/	[0625]	___	___	1 2 3 4 5 6 7 8
26			[0526]	_/_/_/_/_/_/_/	_/_/	[0626]	___	___	1 2 3 4 5 6 7 8
27			[0527]	_/_/_/_/_/_/_/	_/_/	[0627]	___	___	1 2 3 4 5 6 7 8
28			[0528]	_/_/_/_/_/_/_/	_/_/	[0628]	___	___	1 2 3 4 5 6 7 8
29			[0529]	_/_/_/_/_/_/_/	_/_/	[0629]	___	___	1 2 3 4 5 6 7 8
30			[0530]	_/_/_/_/_/_/_/	_/_/	[0630]	___	___	1 2 3 4 5 6 7 8
31			[0531]	_/_/_/_/_/_/_/	_/_/	[0631]	___	___	1 2 3 4 5 6 7 8
32			[0532]	_/_/_/_/_/_/_/	_/_/	[0632]	___	___	1 2 3 4 5 6 7 8

Worksheet 9: Arming and Disarming with Keyswitch Report Codes

Section	Keyswitch #	Arming	Section	Keyswitch #	Arming	Section	Keyswitch #	Arming	Section	Keyswitch #	Disarming	Section	Keyswitch #	Disarming	Section	Keyswitch #	Disarming
[0701]	1	_/	[0715]	15	_/	[0729]	29	_/	[0801]	1	_/	[0815]	15	_/	[0829]	29	_/
[0702]	2	_/	[0716]	16	_/	[0730]	30	_/	[0802]	2	_/	[0816]	16	_/	[0830]	30	_/
[0703]	3	_/	[0717]	17	_/	[0731]	31	_/	[0803]	3	_/	[0817]	17	_/	[0831]	31	_/
[0704]	4	_/	[0718]	18	_/	[0732]	32	_/	[0804]	4	_/	[0818]	18	_/	[0832]	32	_/
[0705]	5	_/	[0719]	19	_/				[0805]	5	_/	[0819]	19	_/			
[0706]	6	_/	[0720]	20	_/				[0806]	6	_/	[0820]	20	_/			
[0707]	7	_/	[0721]	21	_/				[0807]	7	_/	[0821]	21	_/			
[0708]	8	_/	[0722]	22	_/				[0808]	8	_/	[0822]	22	_/			
[0709]	9	_/	[0723]	23	_/				[0809]	9	_/	[0823]	23	_/			
[0710]	10	_/	[0724]	24	_/				[0810]	10	_/	[0824]	24	_/			
[0711]	11	_/	[0725]	25	_/				[0811]	11	_/	[0825]	25	_/			
[0712]	12	_/	[0726]	26	_/				[0812]	12	_/	[0826]	26	_/			
[0713]	13	_/	[0727]	27	_/				[0813]	13	_/	[0827]	27	_/			
[0714]	14	_/	[0728]	28	_/				[0814]	14	_/	[0828]	28	_/			

Programmable Outputs

PGM Programming

1. Enter section [0901] - [0932].
2. Enter the eight-digit module or panel serial number and three-digit output number.
3. Enter the three-digit Event Group, Feature Group, Start #, and End # for PGM activation.
4. Enter the three-digit Event Group, Feature Group, Start # and End # for PGM deactivation.
5. Define the PGM Delay value (001 to 255 x 1 sec./min.). Default is set to 15 minutes.
6. Set your PGM options. Refer to table 15.

Table 15: PGM Options

Option	Description	PGM #	
		OFF	ON
1	PGM deactivation after (OFF = deactivation event; ON = PGM timer)	<input type="checkbox"/>	<input checked="" type="checkbox"/>
2	PGM base time (OFF = seconds; ON = minutes)	<input type="checkbox"/>	<input checked="" type="checkbox"/>
3	Flexible PGM deactivation option (OFF = PGM timer only; ON = PGM timer and/or deactivation event)	<input checked="" type="checkbox"/>	<input type="checkbox"/>
4	PGM initial state (OFF = normally open; ON = normally closed)	<input checked="" type="checkbox"/>	<input type="checkbox"/>
5	PGM time base (OFF = follow options 2, ON = hour)	<input checked="" type="checkbox"/>	<input type="checkbox"/>
6 to 8	Future use	-	-

Event and Feature Groups

Notes for Table 16

000 = Occurs in all partitions enabled in the system (refer to section [3031], in Table 27 on page 40)	001 = Partition 1	002 = Partition 2	003 = Partition 3	004 = Partition 4
255 = Occurs in at least one partition enabled in the system	005 = Partition 5	006 = Partition 6	007 = Partition 7	008 = Partition 8

Table 16: List of Event and Feature Groups

A Event Group	Event	B Feature Group	Feature	C Start #	D End #
000	Zone is OK	000 255 = any zone #	Zone numbers	001 to 192	001 to 192
001	Zone is open			001 to 192	001 to 192
002	Zone is tampered			001 to 192	001 to 192
003	Zone is in fire loop trouble			001 to 192	001 to 192
004	Non-reportable event	000	TLM trouble	000	000

Table 16: List of Event and Feature Groups (Continued)

A Event Group	Event	B Feature Group	Feature	C Start #	D End #
004	Non-reportable event	000	Smoke detector reset	001	001
			Arm with no entry delay	002	002
			Arm in Stay mode	003	003
			Arm in Away mode	004	004
			Full arm when in Stay mode	005	005
			Voice module access	006	006
			Remote control access	007	007
			Pc fail to communicate	008	008
			Midnight	009	009
			Neware user login	010	010
			Neware user logout	011	011
			User initiated call-up	012	012
			Force answer	013	013
			Force hangup	014	014
			Future use	015	015
			Auxiliary output manually activated	016	016
			Auxiliary output manually deactivated	017	017
			Voice reporting failed	018	018
			FTC restore	019	019
			Software access (VDMP3, IP Module, Neware, BabyWare)	020	020
			IPR512 1 Registration Status	021	021
			IPR512 2 registration status	022	022
			IPR512 3 registration status	023	023
			IPR512 4 registration status	024	024
		255	Any non-reportable event	Not Used	Not Used
005	User code entered on keypad	000	User codes 000 to 255	000 to 255	000 to 255
		001	User codes 256 to 511	000 to 255	000 to 255
		002	User codes 512 to 767	000 to 255	000 to 255
		003	User codes 768 to 999	000 to 231	000 to 231
		255	Any user code	Not Used	Not Used
006	User/card access on door	000	Door numbers	001 to 032	001 to 032
		255	Any door number	Not Used	Not Used
007	Bypass programming access	000	One-touch bypass programming	000	000
		000	User codes 001 to 255	001 to 255	001 to 255
		001	User codes 256 to 511	000 to 255	000 to 255
		002	User codes 512 to 767	000 to 255	000 to 255
		003	User codes 768 to 999	000 to 231	000 to 231
		255	Any user code	Not Used	Not Used
008	TX delay zone alarm	000	Zone numbers	001 to 192	001 to 192
		255	Any zone number	Not Used	Not Used
009	Arming with master	000	User codes 001 to 255	001 to 255	001 to 255
		001	User codes 256 to 511	000 to 255	000 to 255
		002	User codes 512 to 767	000 to 255	000 to 255
		003	User codes 768 to 999	000 to 231	000 to 231
		255	Any user code	Not Used	Not Used

Table 16: List of Event and Feature Groups (Continued)

A Event Group	Event	B Feature Group	Feature	C Start #	D End #
010	Arming with user code	000	User codes 001 to 255	001 to 255	001 to 255
		001	User codes 256 to 511	000 to 255	000 to 255
		002	User codes 512 to 767	000 to 255	000 to 255
		003	User codes 768 to 999	000 to 231	000 to 231
		255	Any user code	Not Used	Not Used
011	Arming with keyswitch	000	Keyswitch numbers	001 to 032	001 to 032
		255	Any keyswitch	Not Used	Not Used
012	Special arming	000	Auto arming	000	000
			Arming with BabyWare	001	001
			Late to close	002	002
			No movement arming	003	003
			Partial arming	004	004
			One-touch arming	005	005
			Future use	006	006
			Future use	007	007
			(InTouch) voice module arming	008	008
		Delinquency closing	009	009	
255	Any special arming event	Not Used	Not Used		
013	Disarm with master	000	User codes 001 to 255	001 to 255	001 to 255
		001	User codes 256 to 511	000 to 255	000 to 255
		002	User codes 512 to 767	000 to 255	000 to 255
		003	User codes 768 to 999	000 to 231	000 to 231
		255	Any user code	Not Used	Not Used
014	Disarm with user code	000	User codes 001 to 255	001 to 255	001 to 255
		001	User codes 256 to 511	000 to 255	000 to 255
		002	User codes 512 to 767	000 to 255	000 to 255
		003	User codes 768 to 999	000 to 231	000 to 231
		255	Any user code	Not Used	Not Used
015	Disarm with keyswitch	000	Keyswitch numbers	001 to 032	001 to 032
		255	Any keyswitch	Not Used	Not Used
016	Disarm after alarm with master	000	User codes 001 to 255	001 to 255	001 to 255
		001	User codes 256 to 511	000 to 255	000 to 255
		002	User codes 512 to 767	000 to 255	000 to 255
		003	User codes 768 to 999	000 to 231	000 to 231
		255	Any user code	Not Used	Not Used
017	Disarm after alarm with user code	000	User codes 001 to 255	001 to 255	001 to 255
		001	User codes 256 to 511	000 to 255	000 to 255
		002	User codes 512 to 767	000 to 255	000 to 255
		003	User codes 768 to 999	000 to 231	000 to 231
		255	Any user code	Not Used	Not Used
018	Disarm after alarm with keyswitch	000	Keyswitch numbers	001 to 032	001 to 032
		255	Any keyswitch	Not Used	Not Used
019	Alarm cancelled with master	000	User codes 001 to 255	001 to 255	001 to 255
		001	User codes 256 to 511	000 to 255	000 to 255
		002	User codes 512 to 767	000 to 255	000 to 255
		003	User codes 768 to 999	000 to 231	000 to 231
		255	Any user code	Not Used	Not Used

Table 16: List of Event and Feature Groups (Continued)

A Event Group	Event	B Feature Group	Feature	C Start #	D End #
020	Alarm cancelled with user code	000	User codes 001 to 255	001 to 255	001 to 255
		001	User codes 256 to 511	000 to 255	000 to 255
		002	User codes 512 to 767	000 to 255	000 to 255
		003	User codes 768 to 999	000 to 231	000 to 231
		255	Any user code	Not Used	Not Used
021	Alarm cancelled with keyswitch	000	Keyswitch numbers	001 to 032	001 to 032
		255	Any keyswitch	Not Used	Not Used
022	Special disarming	000	Auto arm cancelled	000	000
			One-touch Stay/Instant disarm	001	001
			Disarming with BabyWare	002	002
			Disarming with BabyWare after alarm	003	003
			BabyWare canceled alarm	004	004
			Future use	005	005
			Future use	006	006
			Future use	007	007
255	Any special disarming event	Not Used	Not Used		
023	Zone bypassed	000 255 = any zone #	Zone numbers	001 to 192	001 to 192
024	Zone in alarm			001 to 192	001 to 192
025	Fire alarm			001 to 192	001 to 192
026	Zone alarm restore			001 to 192	001 to 192
027	Fire alarm restore			001 to 192	001 to 192
028	Early to disarm by user	000	User codes 001 to 255	001 to 255	001 to 255
		001	User codes 256 to 511	000 to 255	000 to 255
		002	User codes 512 to 767	000 to 255	000 to 255
		003	User codes 768 to 999	000 to 231	000 to 231
		255	Any user code	Not Used	Not Used
029	Late to disarm by user	000	User codes 001 to 255	001 to 255	001 to 255
		001	User codes 256 to 511	000 to 255	000 to 255
		002	User codes 512 to 767	000 to 255	000 to 255
		003	User codes 768 to 999	000 to 231	000 to 231
		255	Any user code	Not Used	Not Used
030	Special alarm	000	Emergency panic (Keys 1 & 3)	000	000
			Medical panic (Keys 4 & 6)	001	001
			Fire panic (Keys 7 & 9)	002	002
			Recent closing	003	003
			Police code	004	004
			Zone shutdown	005	005
			Future use	006	006
			Future use	007	007
			TLM alarm	008	008
			Central communication failure alarm	009	009
			Module tamper alarm	010	010
			Missing GSM module alarm	011	011
030 (cont.)	Special alarm (cont.)	000 (cont.)	GSM no service alarm	012	012
			Missing IP module alarm	013	013
			IP no service alarm	014	014
			Missing voice module alarm	015	015
		255	Any special alarm event	Not Used	Not Used

Table 16: List of Event and Feature Groups (Continued)

A Event Group	Event	B Feature Group	Feature	C Start #	D End #
031	Duress alarm by user	000	User codes 001 to 255	001 to 255	001 to 255
		001	User codes 256 to 511	000 to 255	000 to 255
		002	User codes 512 to 767	000 to 255	000 to 255
		003	User codes 768 to 999	000 to 231	000 to 231
		255	Any user code	Not Used	Not Used
032	Zone shutdown	000 255 = any zone #	Zone numbers	001 to 192	001 to 192
033	Zone tamper			001 to 192	001 to 192
034	Zone tamper restore			001 to 192	001 to 192
035	Special tamper	000	Keypad lockout	000	000
			Voice lockout	001	001
036	Trouble event	000	Future use	000	000
			AC failure	001	001
			Battery failure	002	002
			Auxiliary current limit	003	003
			Bell current limit	004	004
			Bell absent	005	005
			Clock trouble	006	006
			Global fire loop	007	007
		255	Any trouble event	Not Used	Not Used
037	Trouble restore	000	TLM trouble	000	000
			AC failure	001	001
			Battery failure	002	002
			Auxiliary current limit	003	003
			Bell current limit	004	004
			Bell absent	005	005
			Clock trouble	006	006
			Global fire loop	007	007
		255	Any trouble restore event	Not Used	Not Used
038	Module trouble	000	Combus fault	000	000
			Module tamper	001	001
			ROM/RAM error	002	002
			TLM trouble	003	003
			Fail to communicate	004	004
			Printer fault	005	005
			AC failure	006	006
			Battery failure	007	007
		Auxiliary failure	008	008	
		001	Missing PCS module	000	000
			GSM RF jam	002	002
			GSM no service	003	003
			Fail to communicate IPR512 1	004	004
			Fail to communicate IPR512 2	005	005
			Fail to communicate IPR512 3	006	006
Fail to communicate IPR512 4	007		007		

Table 16: List of Event and Feature Groups (Continued)

A Event Group	Event	B Feature Group	Feature	C Start #	D End #
038 (cont.)	Module trouble (cont.)	001 (cont.)	Missing voice module	032	032
		002	Missing IP module	000	000
			IP no service	001	001
			Fail to communicate IPR512 1	002	002
			Fail to communicate IPR512 2	003	003
			Fail to communicate IPR512 3	004	004
		Fail to communicate IPR512 4	005	005	
255	Any module trouble event	Not Used	Not Used		
039	Module trouble restore	000	Combus fault	000	000
			Module tamper	001	001
			ROM/RAM error	002	002
			TLM trouble	003	003
			Fail to communicate	004	004
			Printer fault	005	005
			AC failure	006	006
			Battery failure	007	007
			Auxiliary failure	008	008
		001	Missing PCS module	000	000
			GSM RF jam supervision	002	002
			GSM no service	003	003
			Fail to communicate IPR512 1	004	004
			Fail to communicate IPR512 2	005	005
			Fail to communicate IPR512 3	006	006
			Fail to communicate IPR512 4	007	007
		002	Missing voice module	032	032
			Missing IP module	000	000
			IP no service	001	001
			Fail to communicate IPR512 1	002	002
			Fail to communicate IPR512 2	003	003
			Fail to communicate IPR512 3	004	004
		255	Any module trouble restore event	Not Used	Not Used
040	Fail to communicate on telephone number	000	Telephone number	001 to 004	001 to 004
		255	Any telephone number	Not Used	Not Used
041	Low battery on zone	000 255 = any zone #	Zone numbers	001 to 192	001 to 192
042	Zone supervision trouble			001 to 192	001 to 192
043	Low battery on zone restored			001 to 192	001 to 192
044	Zone supervision trouble restored			001 to 192	001 to 192
045	Special events	000	Power-up after total power down	000	000
			Software reset (watchdog)	001	001
			Test report	002	002
			Listen-in request	003	003
			BabyWare In (connected)	004	004
			BabyWare Out (disconnected)	005	005
			Installer In programming	006	006
		Installer Out of programming	007	007	
255	Any special event	Not Used	Not Used		
046	Early to arm by user	000	User codes 001 to 255	001 to 255	001 to 255
		001	User codes 256 to 511	000 to 255	000 to 255

Table 16: List of Event and Feature Groups (Continued)

A Event Group	Event	B Feature Group	Feature	C Start #	D End #
046 (cont.)	Early to arm by user (cont.)	002	User codes 512 to 767	000 to 255	000 to 255
		003	User codes 768 to 999	000 to 231	000 to 231
		255	Any user code	Not Used	Not Used
047	Late to arm by user	000	User codes 001 to 255	001 to 255	001 to 255
		001	User codes 256 to 511	000 to 255	000 to 255
		002	User codes 512 to 767	000 to 255	000 to 255
		003	User codes 768 to 999	000 to 231	000 to 231
		255	Any user code	Not Used	Not Used
048	Utility key	000	Utility key 001 to 064*†	001 to 064	001 to 064
		255	Any utility key*†	Not Used	Not Used
049	Request for exit	000 255 = any door number	Door numbers	001 to 032	001 to 032
050	Access denied			001 to 032	001 to 032
051	Door left open alarm			001 to 032	001 to 032
052	Door forced alarm			001 to 032	001 to 032
053	Door left open restore			001 to 032	001 to 032
054	Door forced open restore			001 to 032	001 to 032
055	Intellizone triggered			000	Zone numbers
		255	Any zone number	Not Used	Not Used
056	Zone excluded on Force arming	000 255 = any zone	Zone numbers	001 to 192	001 to 192
057	Zone went back to arm status		Zone numbers	001 to 192	001 to 192
058	New module assigned on combus	000 255 = any module	Module address	001 to 254	001 to 254
059	Module manually removed from combus		Module address	001 to 254	001 to 254
060	Non-saved event	000	Remote control rejected	000	000
061	Future use	Future use	Future use	Future Use	Future Use
062	Access granted to user	000	User codes 001 to 255	001 to 255	001 to 255
		001	User codes 256 to 511	000 to 255	000 to 255
		002	User codes 512 to 767	000 to 255	000 to 255
		003	User codes 768 to 999	000 to 231	000 to 231
		255	Any user code	Not Used	Not Used
063	Access denied to user	000	Unregistered access code	000	000
		000	User codes 001 to 255	001 to 255	001 to 255
		001	User codes 256 to 511	000 to 255	000 to 255
		002	User codes 512 to 767	000 to 255	000 to 255
		003	User codes 768 to 999	000 to 231	000 to 231
		255	Any user code	Not Used	Not Used
064	Status 1	Refer to Notes for Table 16 on page 21	Armed	000	000
			Force armed	001	001
			Stay armed	002	002
			Instant armed	003	003
			Strobe alarm	004	004
			Silent alarm	005	005
			Audible alarm	006	006
			Fire alarm	007	007
065	Status 2	Refer to Notes for Table 16 on page 21	Ready	000	000
			Exit delay	001	001
			Entry delay	002	002
			System in trouble	003	003
			Alarm in memory	004	004
			Zones bypassed	005	005

Table 16: List of Event and Feature Groups (Continued)

A Event Group	Event	B Feature Group	Feature	C Start #	D End #
065 (cont.)	Status 2 (cont.)	Refer to Notes for Table 16 on page 21	Bypass, master, installer programming	006	006
			Keypad lockout	007	007
066	Status 3	Refer to Notes for Table 16 on page 21	Intellizone delay engaged**	000	000
			Fire delay engaged	001	001
			Auto arm	002	002
			Arming with voice module (set until exit delay finishes)	003	003
			Tamper	004	004
			Zone low battery	005	005
			Fire loop trouble	006	006
			Zone supervision trouble	007	007
067**	Special status	-	Chime in partition 1 to 4 (000 to 003 = system 1 to 4)	000 to 003	000 to 003
			Smoke detector power reset	004	004
			Ground start	005	005
			Kiss off	006	006
			Telephone ring	007	007
			Bell on partition 1 to 8 (008 to 015 = partitions 1 to 8)	008 to 015	008 to 015
			Pulsed alarm in partition 1 to 8 (016 to 023 = partitions 1 to 8)	016 to 023	016 to 023
			Open/close Kiss off in partition 1 to 8 (024 to 031 = partitions 1 to 8)	024 to 031	024 to 031
			Keyswitch/PGM inputs # 01 to 32 (032 to 063 = Keyswitch/PGM inputs # 01 to 32)	032 to 063	032 to 063
			Status of access door 01 to 32 (064 to 095 = access doors 01 to 32)	064 to 095	064 to 095
			Trouble in system	096	096
			Trouble in dialer	097	097
			Trouble in module	098	098
			Trouble in combus	099	099
			Future use	100 to 102	100 to 102
			Time and date trouble	103	103
			AC failure	104	104
			Battery failure	105	105
			Auxiliary current limit	106	106
			Bell current limit	107	107
			Bell absent	108	108
			ROM error	109	109
			RAM error	110	110
			Future use	111	111
			TLM 1 trouble	112	112
			Fail to communicate 1	113	113
			Fail to communicate 2	114	114
			Fail to communicate 3	115	115
			Fail to communicate 4	116	116
			Fail to communicate with PC	117	117
			Future use	118	118
			Future use	119	119
Module tamper trouble	120	120			
Module ROM error	121	121			
Module TLM error	122	122			

Table 16: List of Event and Feature Groups (Continued)

A Event Group	Event	B Feature Group	Feature	C Start #	D End #
067** (cont.)	Special status (cont.)	-	Module Failure to communicate	123	123
			Module printer trouble	124	124
			Module AC failure	125	125
			Module battery trouble	126	126
			Module auxiliary failure	127	127
			Missing keypad	128	128
			Missing module	129	129
			Future use	130 to 132	130 to 132
			Global combus failure	133	133
			Combus overload	134	134
			Future use	135	135
			Dialer relay	136	136
			070	Clock	-

* If a keyswitch input is used, the input must be defined as *Generates a Utility Key Event on Open* or *Generates a Utility Key Event on Open and Close*. If a remote control is used, the remote control button must be defined as a utility key button.

** These events or event groups cannot be used for a module's PGM programming.

† Actions that activate a utility key event.

Utility Keys

Table 17: Description of Utility Keys

Utility Key Event	Keypad Utility Keys	Keyswitch Inputs (definition = [3])	Keyswitch Inputs (definition = [4])	Remote Control
1	1 & 2	Keyswitch input 1 opens	Keyswitch input 1 opens	Utility key 1 remote control button
2	4 & 5	Keyswitch input 2 opens	Keyswitch input 1 closes	Utility key 2 remote control button
3	7 & 8	Keyswitch input 3 opens	Keyswitch input 2 opens	Utility key 3 remote control button
4	CLEAR & 0 or * & 0	Keyswitch input 4 opens	Keyswitch input 2 closes	Utility key 4 remote control button
5	2 & 3	Keyswitch input 5 opens	Keyswitch input 3 opens	Utility key 5 remote control button
6	5 & 6	Keyswitch input 6 opens	Keyswitch input 3 closes	-
7	8 & 9	Keyswitch input 7 opens	Keyswitch input 4 opens	-
8	0 & ENTER or 0 & #	Keyswitch input 8 opens	Keyswitch input 4 closes	-
9	-	Keyswitch input 9 opens	Keyswitch input 5 opens	-
10	-	Keyswitch input 10 opens	Keyswitch input 5 closes	-
11	-	Keyswitch input 11 opens	Keyswitch input 6 opens	-
12	-	Keyswitch input 12 opens	Keyswitch input 6 closes	-
13	-	Keyswitch input 13 opens	Keyswitch input 7 opens	-
14	-	Keyswitch input 14 opens	Keyswitch input 7 closes	-
15	-	Keyswitch input 15 opens	Keyswitch input 8 opens	-
16	-	Keyswitch input 16 opens	Keyswitch input 8 closes	-
17	-	Keyswitch input 17 opens	Keyswitch input 9 opens	-
18	-	Keyswitch input 18 opens	Keyswitch input 9 closes	-
↓	-	↓	↓	-
31	-	Keyswitch input 31 opens	Keyswitch input 16 opens	-
32	-	Keyswitch input 32 opens	Keyswitch input 16 closes	-
33	-	-	Keyswitch input 17 opens	-
34	-	-	Keyswitch input 17 closes	-
↓	-	-	↓	-
63	-	-	Keyswitch input 32 opens	-
64	-	-	Keyswitch input 32 closes	-

NOTE: Refer to the *RTX3 Reference and Installation Manual* for instructions on how to program remote control buttons.

Input Speeds

Worksheet 10: Input Speeds

Section	Data: Decimal Value (001 to 255 x 30 msec.)	Description (Default Setting: 600 msec.)	Section	Data: Decimal Value (001 to 255 x 30 msec.)	Description (Default Setting: 600 msec.)
[0961]	___/___/___	Input speed of input 01	[0969]	___/___/___	Input speed of input 09 (ATZ of input 01)
[0962]	___/___/___	Input speed of input 02	[0970]	___/___/___	Input speed of input 10 (ATZ of input 02)
[0963]	___/___/___	Input speed of input 03	[0971]	___/___/___	Input speed of input 11 (ATZ of input 03)
[0964]	___/___/___	Input speed of input 04	[0972]	___/___/___	Input speed of input 12 (ATZ of input 04)
[0965]	___/___/___	Input speed of input 05	[0973]	___/___/___	Input speed of input 13 (ATZ of input 05)
[0966]	___/___/___	Input speed of input 06	[0974]	___/___/___	Input speed of input 14 (ATZ of input 06)
[0967]	___/___/___	Input speed of input 07	[0975]	___/___/___	Input speed of input 15 (ATZ of input 07)
[0968]	___/___/___	Input speed of input 08	[0976]	___/___/___	Input speed of input 16 (ATZ of input 08)

Installer Code Programming

Worksheet 11: Installer Code Programming

Section	Data	Description (Default Setting: 000000)
[1000]	___/___/___/___/___	Installer code (refer to section [3001], in <i>Worksheet 21 on page 40</i>)

User Code Options

Use the following section to program access codes when using the K641R/K641LX/K641+ or K656 keypads. With this section you can program user codes options, partition assignment, and access control features for users 001 to 999. Always refer to the keypad's respective user manual for additional, pertinent information on how to program users, as well as user labels. Complete user manuals are available on our website at paradox.com.

To program user code options:

1. Press and hold **0**.
2. Enter the installer code.
3. Enter the section you wish to program. Sections **[1001]** to **[1999]** represent user numbers 001 to 999.
4. In *User Code Options*, set the desired options, by referring to *Table 19 on page 31*. Press **ENTER** or **▲** to save your settings and advance to the next section.
5. In *User Area Assignment*, set the desired options, by referring to *Table 20 on page 31*. Press **ENTER** or **▲** to save your settings and advance to the next section.
6. In *Access Level and Schedule Assignment*, enter the desired settings, by referring to *Figure 2 on page 31*.
7. In *Access Control User Options*, set the desired options, by referring to *Table 21 on page 31*. Press **ENTER** or **▲** to save your settings and advance to the next section.
8. In *Access Card*, enter the access card's serial number manually, or present the card to the reader which is connected to the keypad.
9. In *Remote Control Assignment*, enter the remote's serial number manually, or press a remote button twice. Remotes can also be assigned using a master code.

Table 19: User Options for EVO192

Input Value		Description
1	2	(Master Feature)
OFF	ON	Disabled
ON	OFF	Master: user can only program user access codes
ON	ON	Full Master: user can program user access codes, options, and assignments
Input Value		Description
3		Duress
4		Bypass
5		Arm only
6		Stay & Instant
7		Force
8		OFF: access keypad's partition only ON: access any partition assigned to user

Table 20: User Area Assignment for EVO192

Input Value	Description
1	User has access to area 1
2	User has access to area 2
3	User has access to area 3
4	User has access to area 4
5	User has access to area 5
6	User has access to area 6
7	User has access to area 7
8	User has access to area 8

The default setting depends on the programming user's assigned partitions. For example, when a Master user – who is already assigned to partitions 1 and 2 – programs a user code, partitions 1 and 2 will be the default setting for the new user.

Figure 2: Description of the Access Level and Schedule Assignment Setting

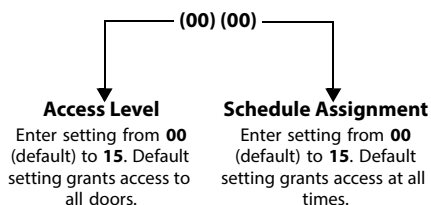


Table 21: Access Control User Options for EVO192

Input Value		Description
1		Access control
2		Disarm on access granted
3		Extended unlock delay on access
6		Add tolerance window to schedule
7		Access code follows schedule
8		OFF: unlock and disarm area(s) on access granted ON: code must be entered at security keypad, to disarm
Input Value		Description
		(Arming upon Access Granted)
4	5	
OFF	OFF	Disabled
ON	OFF	Regular arm
OFF	ON	Stay arm
ON	ON	Force arm

Arming and Disarming Report Codes

Use the following section to program arming and disarming report codes on your EVO192 control panel. Use *Worksheet 12 on page 32* to record your settings. For Ademco Slow, Silent Knight Fast, Sescos, or Ademco Express, key-in desired two-digit hex values from 00 to FF.

Ademco Format

- Use section **[4033]** to program a set of default Ademco report codes, using *Table 55 on page 58*.
- To program the remaining report codes or change certain defaults, access the individual sections and key-in the desired two-digit hex value, found in *Table 59 on page 63*.

SIA Format

- Use section **[4033]** to program a set of SIA report codes, using *Table 55 on page 58*.
- Codes that have not been set to *default* can be set as such manually, by entering FF in the appropriate section.
- To disable the reporting of an event, enter **00** in the appropriate section.

Worksheet 12: Arming and Disarming Report Codes

Section	Access Code	Arming	Section	Access Code	Arming	Section	Access Code	Arming	Section	Access Code	Disarming	Section	Access Code	Disarming	Section	Access Code	Disarming
[2001]	1	___/___	[2048]	48	___/___	[2095]	95	___/___	[2101]	1	___/___	[2148]	48	___/___	[2195]	95	___/___
[2002]	2	___/___	[2049]	49	___/___	[2096]	96	___/___	[2102]	2	___/___	[2149]	49	___/___	[2196]	96	___/___
[2003]	3	___/___	[2050]	50	___/___	[2097]	97	___/___	[2103]	3	___/___	[2150]	50	___/___	[2197]	97	___/___
[2004]	4	___/___	[2051]	51	___/___	[2098]	98	___/___	[2104]	4	___/___	[2151]	51	___/___	[2198]	98	___/___
[2005]	5	___/___	[2052]	52	___/___	[2099]	99-999	___/___	[2105]	5	___/___	[2152]	52	___/___	[2199]	99-999	___/___
[2006]	6	___/___	[2053]	53	___/___				[2106]	6	___/___	[2153]	53	___/___			
[2007]	7	___/___	[2054]	54	___/___				[2107]	7	___/___	[2154]	54	___/___			
[2008]	8	___/___	[2055]	55	___/___				[2108]	8	___/___	[2155]	55	___/___			
[2009]	9	___/___	[2056]	56	___/___				[2109]	9	___/___	[2156]	56	___/___			
[2010]	10	___/___	[2057]	57	___/___				[2110]	10	___/___	[2157]	57	___/___			
[2011]	11	___/___	[2058]	58	___/___				[2111]	11	___/___	[2158]	58	___/___			
[2012]	12	___/___	[2059]	59	___/___				[2112]	12	___/___	[2159]	59	___/___			
[2013]	13	___/___	[2060]	60	___/___				[2113]	13	___/___	[2160]	60	___/___			
[2014]	14	___/___	[2061]	61	___/___				[2114]	14	___/___	[2161]	61	___/___			
[2015]	15	___/___	[2062]	62	___/___				[2115]	15	___/___	[2162]	62	___/___			
[2016]	16	___/___	[2063]	63	___/___				[2116]	16	___/___	[2163]	63	___/___			
[2017]	17	___/___	[2064]	64	___/___				[2117]	17	___/___	[2164]	64	___/___			
[2018]	18	___/___	[2065]	65	___/___				[2118]	18	___/___	[2165]	65	___/___			
[2019]	19	___/___	[2066]	66	___/___				[2119]	19	___/___	[2166]	66	___/___			
[2020]	20	___/___	[2067]	67	___/___				[2120]	20	___/___	[2167]	67	___/___			
[2021]	21	___/___	[2068]	68	___/___				[2121]	21	___/___	[2168]	68	___/___			
[2022]	22	___/___	[2069]	69	___/___				[2122]	22	___/___	[2169]	69	___/___			
[2023]	23	___/___	[2070]	70	___/___				[2123]	23	___/___	[2170]	70	___/___			
[2024]	24	___/___	[2071]	71	___/___				[2124]	24	___/___	[2171]	71	___/___			
[2025]	25	___/___	[2072]	72	___/___				[2125]	25	___/___	[2172]	72	___/___			
[2026]	26	___/___	[2073]	73	___/___				[2126]	26	___/___	[2173]	73	___/___			
[2027]	27	___/___	[2074]	74	___/___				[2127]	27	___/___	[2174]	74	___/___			
[2028]	28	___/___	[2075]	75	___/___				[2128]	28	___/___	[2175]	75	___/___			
[2029]	29	___/___	[2076]	76	___/___				[2129]	29	___/___	[2176]	76	___/___			
[2030]	30	___/___	[2077]	77	___/___				[2130]	30	___/___	[2177]	77	___/___			
[2031]	31	___/___	[2078]	78	___/___				[2131]	31	___/___	[2178]	78	___/___			
[2032]	32	___/___	[2079]	79	___/___				[2132]	32	___/___	[2179]	79	___/___			
[2033]	33	___/___	[2080]	80	___/___				[2133]	33	___/___	[2180]	80	___/___			
[2034]	34	___/___	[2081]	81	___/___				[2134]	34	___/___	[2181]	81	___/___			
[2035]	35	___/___	[2082]	82	___/___				[2135]	35	___/___	[2182]	82	___/___			
[2036]	36	___/___	[2083]	83	___/___				[2136]	36	___/___	[2183]	83	___/___			
[2037]	37	___/___	[2084]	84	___/___				[2137]	37	___/___	[2184]	84	___/___			
[2038]	38	___/___	[2085]	85	___/___				[2138]	38	___/___	[2185]	85	___/___			
[2039]	39	___/___	[2086]	86	___/___				[2139]	39	___/___	[2186]	86	___/___			
[2040]	40	___/___	[2087]	87	___/___				[2140]	40	___/___	[2187]	87	___/___			
[2041]	41	___/___	[2088]	88	___/___				[2141]	41	___/___	[2188]	88	___/___			
[2042]	42	___/___	[2089]	89	___/___				[2142]	42	___/___	[2189]	89	___/___			
[2043]	43	___/___	[2090]	90	___/___				[2143]	43	___/___	[2190]	90	___/___			
[2044]	44	___/___	[2091]	91	___/___				[2144]	44	___/___	[2191]	91	___/___			
[2045]	45	___/___	[2092]	92	___/___				[2145]	45	___/___	[2192]	92	___/___			
[2046]	46	___/___	[2093]	93	___/___				[2146]	46	___/___	[2193]	93	___/___			
[2047]	47	___/___	[2094]	94	___/___				[2147]	47	___/___	[2194]	94	___/___			

Access Control Sections

Use the following section to program access control features, such as assigning doors, as well as schedule and holiday programming.

Assigning Doors to the System

These doors are used to program the access levels in sections [2601] to [2615]. If a door must be linked to the alarm system, install a door contact and assign it to a zone (refer to *Zone Programming on page 10*). Use *Worksheet 13 on page 33* to record your settings.

NOTE: Under the *Door Numbering* column of *Worksheet 13 on page 33*, enter the eight-digit serial number of the access control module or keypad.

Table 22: Description of the Different Door Options

Door Option	Name	Description
1	OR/AND door access	Each door can be programmed to grant access only to cards assigned to at least one of the door's partitions (<i>OR Door Access</i>), or to cards assigned to all the door's assigned partitions (<i>AND Door Access</i>). Enabling option 1 will set the door in <i>OR</i> mode; disabling it will set the door in <i>AND</i> mode.
2	User code access	When option 2 is disabled, the access control door is accessed by presenting the access card to the reader. When option 2 is enabled, a reader is not needed to access the controlled door. To access the controlled door, the user must enter an access code and then press ACC on the K641R/K641LX/K641+ keypads, or MENU > 8 , and then enter access code, when using the K656 keypad.
3	Card and code access	When option 3 is enabled, both a valid access control card and user access code must be used. The access control card and user access code must belong to the same user. When option 3 is disabled, either a valid access control card or user access code must be used to access the controlled door (keypad with reader, and PosiPIN™ reader only).
4	Restrict arming on door	When option 4 is enabled, that door's reader cannot be used to arm the system, even if the access control card has the arming option enabled.
5	Restrict disarming on door	When option 5 is enabled, that door's reader cannot be used to disarm the system, even if the access control card has the disarming option enabled.

Worksheet 13: Assigning Doors

Section	Door Numbering		Door Options		Door Labels	
	Door #	Eight-digit Serial Number	Section	Option	Section	Label
[2201]	1	____/____/____/____/____/____/____/____	[2251]	1 2 3 4 5 * * *	[2301]	____/____/____/____/____/____/____/____
[2202]	2	____/____/____/____/____/____/____/____	[2252]	1 2 3 4 5 * * *	[2302]	____/____/____/____/____/____/____/____
[2203]	3	____/____/____/____/____/____/____/____	[2253]	1 2 3 4 5 * * *	[2303]	____/____/____/____/____/____/____/____
[2204]	4	____/____/____/____/____/____/____/____	[2254]	1 2 3 4 5 * * *	[2304]	____/____/____/____/____/____/____/____
[2205]	5	____/____/____/____/____/____/____/____	[2255]	1 2 3 4 5 * * *	[2305]	____/____/____/____/____/____/____/____
[2206]	6	____/____/____/____/____/____/____/____	[2256]	1 2 3 4 5 * * *	[2306]	____/____/____/____/____/____/____/____
[2207]	7	____/____/____/____/____/____/____/____	[2257]	1 2 3 4 5 * * *	[2307]	____/____/____/____/____/____/____/____
[2208]	8	____/____/____/____/____/____/____/____	[2258]	1 2 3 4 5 * * *	[2308]	____/____/____/____/____/____/____/____
[2209]	9	____/____/____/____/____/____/____/____	[2259]	1 2 3 4 5 * * *	[2309]	____/____/____/____/____/____/____/____
[2210]	10	____/____/____/____/____/____/____/____	[2260]	1 2 3 4 5 * * *	[2310]	____/____/____/____/____/____/____/____
[2211]	11	____/____/____/____/____/____/____/____	[2261]	1 2 3 4 5 * * *	[2311]	____/____/____/____/____/____/____/____
[2212]	12	____/____/____/____/____/____/____/____	[2262]	1 2 3 4 5 * * *	[2312]	____/____/____/____/____/____/____/____
[2213]	13	____/____/____/____/____/____/____/____	[2263]	1 2 3 4 5 * * *	[2313]	____/____/____/____/____/____/____/____
[2214]	14	____/____/____/____/____/____/____/____	[2264]	1 2 3 4 5 * * *	[2314]	____/____/____/____/____/____/____/____
[2215]	15	____/____/____/____/____/____/____/____	[2265]	1 2 3 4 5 * * *	[2315]	____/____/____/____/____/____/____/____
[2216]	16	____/____/____/____/____/____/____/____	[2266]	1 2 3 4 5 * * *	[2316]	____/____/____/____/____/____/____/____
[2217]	17	____/____/____/____/____/____/____/____	[2267]	1 2 3 4 5 * * *	[2317]	____/____/____/____/____/____/____/____
[2218]	18	____/____/____/____/____/____/____/____	[2268]	1 2 3 4 5 * * *	[2318]	____/____/____/____/____/____/____/____
[2219]	19	____/____/____/____/____/____/____/____	[2269]	1 2 3 4 5 * * *	[2319]	____/____/____/____/____/____/____/____
[2220]	20	____/____/____/____/____/____/____/____	[2270]	1 2 3 4 5 * * *	[2320]	____/____/____/____/____/____/____/____
[2221]	21	____/____/____/____/____/____/____/____	[2271]	1 2 3 4 5 * * *	[2321]	____/____/____/____/____/____/____/____
[2222]	22	____/____/____/____/____/____/____/____	[2272]	1 2 3 4 5 * * *	[2322]	____/____/____/____/____/____/____/____
[2223]	23	____/____/____/____/____/____/____/____	[2273]	1 2 3 4 5 * * *	[2323]	____/____/____/____/____/____/____/____
[2224]	24	____/____/____/____/____/____/____/____	[2274]	1 2 3 4 5 * * *	[2324]	____/____/____/____/____/____/____/____
[2225]	25	____/____/____/____/____/____/____/____	[2275]	1 2 3 4 5 * * *	[2325]	____/____/____/____/____/____/____/____
[2226]	26	____/____/____/____/____/____/____/____	[2276]	1 2 3 4 5 * * *	[2326]	____/____/____/____/____/____/____/____
[2227]	27	____/____/____/____/____/____/____/____	[2277]	1 2 3 4 5 * * *	[2327]	____/____/____/____/____/____/____/____
[2228]	28	____/____/____/____/____/____/____/____	[2278]	1 2 3 4 5 * * *	[2328]	____/____/____/____/____/____/____/____
[2229]	29	____/____/____/____/____/____/____/____	[2279]	1 2 3 4 5 * * *	[2329]	____/____/____/____/____/____/____/____
[2230]	30	____/____/____/____/____/____/____/____	[2280]	1 2 3 4 5 * * *	[2330]	____/____/____/____/____/____/____/____
[2231]	31	____/____/____/____/____/____/____/____	[2281]	1 2 3 4 5 * * *	[2331]	____/____/____/____/____/____/____/____
[2232]	32	____/____/____/____/____/____/____/____	[2282]	1 2 3 4 5 * * *	[2332]	____/____/____/____/____/____/____/____

Schedule Programming

Each schedule determines when users are permitted access. Schedules 001 to 015 (sections [2401] to [2415]) are primary schedules. Primary schedules are the only schedules that can be assigned to a user access code. Schedules 016 to 032 (sections [2416] to [2432]) are secondary schedules. Secondary schedules cannot be assigned to a user access code and can only be used as backup schedules. Use *Worksheet 14 on page 34* to record your settings for primary schedules and *Worksheet 15 on page 35*, for secondary schedules.

WARNING: The Start and End Time of a schedule cannot cross over into another day. For example, to program a shift from 10 PM to 6 AM the next morning, you must program the schedule as follows: Schedule A – start time: 22:00 and end time: 23:59; then program Schedule B – start time: 00:00 and end time: 06:00. The schedule will not be interrupted between 23:59 and 00:00.

Primary Schedules

Worksheet 14: Programming Primary Schedules

Section	Schedule	Interval	Start Time (From)	End Time (To)	Days of the Week (Turn ON or OFF)							
					S	M	T	W	T	F	S	H
[2401]	001	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[2402]	002	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[2403]	003	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[2404]	004	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[2405]	005	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[2406]	006	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[2407]	007	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[2408]	008	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[2409]	009	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[2410]	010	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[2411]	011	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[2412]	012	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[2413]	013	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[2414]	014	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[2415]	015	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8

Secondary Schedules

Worksheet 15: Programming Secondary Schedules

Section	Schedule	Interval	Start Time (From)	End Time (To)	Days of the Week (Turn ON or OFF)							
					S	M	T	W	T	F	S	H
[2401]	016	Schedule A	___:___	___:___	1	2	3	4	5	6	7	8
		Schedule B	___:___	___:___	1	2	3	4	5	6	7	8
[2402]	017	Schedule A	___:___	___:___	1	2	3	4	5	6	7	8
		Schedule B	___:___	___:___	1	2	3	4	5	6	7	8
[2403]	018	Schedule A	___:___	___:___	1	2	3	4	5	6	7	8
		Schedule B	___:___	___:___	1	2	3	4	5	6	7	8
[2404]	019	Schedule A	___:___	___:___	1	2	3	4	5	6	7	8
		Schedule B	___:___	___:___	1	2	3	4	5	6	7	8
[2405]	020	Schedule A	___:___	___:___	1	2	3	4	5	6	7	8
		Schedule B	___:___	___:___	1	2	3	4	5	6	7	8
[2406]	021	Schedule A	___:___	___:___	1	2	3	4	5	6	7	8
		Schedule B	___:___	___:___	1	2	3	4	5	6	7	8
[2407]	022	Schedule A	___:___	___:___	1	2	3	4	5	6	7	8
		Schedule B	___:___	___:___	1	2	3	4	5	6	7	8
[2408]	023	Schedule A	___:___	___:___	1	2	3	4	5	6	7	8
		Schedule B	___:___	___:___	1	2	3	4	5	6	7	8
[2409]	024	Schedule A	___:___	___:___	1	2	3	4	5	6	7	8
		Schedule B	___:___	___:___	1	2	3	4	5	6	7	8
[2410]	025	Schedule A	___:___	___:___	1	2	3	4	5	6	7	8
		Schedule B	___:___	___:___	1	2	3	4	5	6	7	8
[2411]	026	Schedule A	___:___	___:___	1	2	3	4	5	6	7	8
		Schedule B	___:___	___:___	1	2	3	4	5	6	7	8
[2412]	027	Schedule A	___:___	___:___	1	2	3	4	5	6	7	8
		Schedule B	___:___	___:___	1	2	3	4	5	6	7	8
[2413]	028	Schedule A	___:___	___:___	1	2	3	4	5	6	7	8
		Schedule B	___:___	___:___	1	2	3	4	5	6	7	8
[2414]	029	Schedule A	___:___	___:___	1	2	3	4	5	6	7	8
		Schedule B	___:___	___:___	1	2	3	4	5	6	7	8
[2415]	030	Schedule A	___:___	___:___	1	2	3	4	5	6	7	8
		Schedule B	___:___	___:___	1	2	3	4	5	6	7	8
[2415]	031	Schedule A	___:___	___:___	1	2	3	4	5	6	7	8
		Schedule B	___:___	___:___	1	2	3	4	5	6	7	8
[2415]	032	Schedule A	___:___	___:___	1	2	3	4	5	6	7	8
		Schedule B	___:___	___:___	1	2	3	4	5	6	7	8

Backup Schedules

Each programmed schedule (refer to *Schedule Programming on page 34*) can be backed-up or linked to another schedule. The backup will be used in the event that the first schedule is invalid. In *Worksheet 16 on page 35*, enter the three-digit number of the schedule you wish to use as the backup. For instance, if you wish to back-up Schedule 001 to Schedule 011, enter **011** in section **[2501]**.

The control panel will verify up to eight linked schedules, one after another, until it determines whether the card or code is valid. For example, if Schedule 001 is linked to Schedule 005, and Schedule 005 is linked to Schedule 030, then the control panel will verify Schedules 001, 005 and 030.

Worksheet 16: Programming Backup Schedules

Section	Schedule	Backup Schedule	Section	Schedule	Backup Schedule
[2501]	001	___/___/___	[2517]	017	___/___/___
[2502]	002	___/___/___	[2518]	018	___/___/___
[2503]	003	___/___/___	[2519]	019	___/___/___
[2504]	004	___/___/___	[2520]	020	___/___/___
[2505]	005	___/___/___	[2521]	021	___/___/___
[2506]	006	___/___/___	[2522]	022	___/___/___
[2507]	007	___/___/___	[2523]	023	___/___/___
[2508]	008	___/___/___	[2524]	024	___/___/___
[2509]	009	___/___/___	[2525]	025	___/___/___
[2510]	010	___/___/___	[2526]	026	___/___/___
[2511]	011	___/___/___	[2527]	027	___/___/___
[2512]	012	___/___/___	[2528]	028	___/___/___
[2513]	013	___/___/___	[2529]	029	___/___/___
[2514]	014	___/___/___	[2530]	030	___/___/___
[2515]	015	___/___/___	[2531]	031	___/___/___
[2516]	016	___/___/___	[2532]	032	___/___/___

Access Levels

Each access level is a combination of access control doors. For example, if option 1 in the first screen is enabled in section [2601], Level 01 will allow access only to Door 01. Use *Worksheet 17* on page 36 to record your settings.

Worksheet 17: Programming Access Levels

Section	Level	Access to Doors (Turn ON or OFF access)																															
		First Screen (Doors 01 to 08)								Second Screen (Doors 09 to 16)								Third Screen (Doors 17 to 24)								Fourth Screen (Doors 25 to 32)							
[2601]	01	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8
[2602]	02	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8
[2603]	03	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8
[2604]	04	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8
[2605]	05	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8
[2606]	06	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8
[2607]	07	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8
[2608]	08	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8
[2609]	09	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8
[2610]	10	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8
[2611]	11	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8
[2612]	12	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8
[2613]	13	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8
[2614]	14	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8
[2615]	15	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8

Holidays

When *H* is enabled in a schedule, access is permitted to users during the days programmed in the sections below. Use *Worksheet 18* on page 36 to record your settings.

Worksheet 18: Programming Holidays

Section	Month	Days																															
		First Screen (Days 01 to 08)								Second Screen (Days 09 to 16)								Third Screen (Days 17 to 24)								Fourth Screen (Days 25 to 31)							
[2701]	January	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	*
[2702]	February	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	*
[2703]	March	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	*
[2704]	April	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	*
[2705]	May	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	*
[2706]	June	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	*
[2707]	July	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	*
[2708]	August	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	*
[2709]	September	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	*
[2710]	October	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	*
[2711]	November	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	*
[2712]	December	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	*

Keypad Numbering

Use the following section to number the different keypads configured to your system.

Sections **[2801]** to **[2832]** are used solely for the purpose of identifying a keypad in the event buffer. Enter the eight-digit serial number of the keypad you wish to label as Keypad *x*, where *x* represents numbers 1 to 32 (e.g., Keypad 12). The event buffer will then display any events pertaining to this keypad, as Keypad 12. Use *Worksheet 19* on page 37 to record your settings.

Worksheet 19: Numbering Keypads

Section	Keypad #	Eight-digit Serial Number	Section	Keypad #	Eight-digit Serial Number
[2801]	1	____/____/____/____/____/____/____/____	[2817]	17	____/____/____/____/____/____/____/____
[2802]	2	____/____/____/____/____/____/____/____	[2818]	18	____/____/____/____/____/____/____/____
[2803]	3	____/____/____/____/____/____/____/____	[2819]	19	____/____/____/____/____/____/____/____
[2804]	4	____/____/____/____/____/____/____/____	[2820]	20	____/____/____/____/____/____/____/____
[2805]	5	____/____/____/____/____/____/____/____	[2821]	21	____/____/____/____/____/____/____/____
[2806]	6	____/____/____/____/____/____/____/____	[2822]	22	____/____/____/____/____/____/____/____
[2807]	7	____/____/____/____/____/____/____/____	[2823]	23	____/____/____/____/____/____/____/____
[2808]	8	____/____/____/____/____/____/____/____	[2824]	24	____/____/____/____/____/____/____/____
[2809]	9	____/____/____/____/____/____/____/____	[2825]	25	____/____/____/____/____/____/____/____
[2810]	10	____/____/____/____/____/____/____/____	[2826]	26	____/____/____/____/____/____/____/____
[2811]	11	____/____/____/____/____/____/____/____	[2827]	27	____/____/____/____/____/____/____/____
[2812]	12	____/____/____/____/____/____/____/____	[2828]	28	____/____/____/____/____/____/____/____
[2813]	13	____/____/____/____/____/____/____/____	[2829]	29	____/____/____/____/____/____/____/____
[2814]	14	____/____/____/____/____/____/____/____	[2830]	30	____/____/____/____/____/____/____/____
[2815]	15	____/____/____/____/____/____/____/____	[2831]	31	____/____/____/____/____/____/____/____
[2816]	16	____/____/____/____/____/____/____/____	[2832]	32	____/____/____/____/____/____/____/____

Wireless Siren Programming

Use the following section to program the SR130 and the SR150 wireless sirens.

Limitation

Only one RTX3 per system can support the wireless siren.

Certifications

Refer to the Paradox website for product certifications.

WARNING: Adding a wireless siren to the EVO192 Alarm System decreases the security level of the system from Grade 3 to Grade 2.

To program wireless sirens with a keypad:

1. Assign the RTX3 that the sirens will be configured to in section [2850].
2. Program the 6-digit TX number of each wireless siren (corresponding to serial numbers for wireless sirens1-8) in sections [2851]-[2858].
3. Assign partitions to each siren (corresponding to partitions 1-8) in sections [2861]-[2868].

WARNING: Wireless sirens can only be assigned to either a single partition or to all partitions.

4. Display the wireless siren signal strength (corresponding to wireless siren 1-8) in sections [2871]-[2878].

NOTE: The signal strength level is measured from 1-10. An acceptable signal strength is signal level 4. Signal strength level is displayed on the keypad by an asterisk (*). For example, (****) represents signal level 4 on the keypad.

Table 23: Wireless Program Options

Option	Section	Option	Section	Option	Section	Option	Section
Assign RTX3	[2850]	TX Serial #	[2851]-[2858]	Assign Partition(s)	[2861]-[2868]	TX Signal Strength	[2871]-[2878]

Remote Control Programming

Use the following section to program the various remote controls in your EVO system.

It is possible to configure up to 16 different button templates, which are then assigned to individual users. Each user is pre-programmed with a default button pattern for their remote control: **(1 B) (C 0) (template 0)**.

NOTE: Button definitions and partition/one-touch definitions are linked together to create a button template. For example, Template 0 is comprised of button definition [2900] together with partition/one-touch definition [2916].

Remote Control Templates

To use REM3 templates:

1. Define the 16-button definitions in sections [2900] to [2915].
2. Define the 16-partition/one-touch definitions in sections [2916] to [2931].
3. Define which button template is used as the default for remotes in section [2940].
4. Assign button templates to users in section [2941].

Use the information in Table 24 and Table 25, as well as Figure 3, to enter data in Worksheet 20 on page 39.


Table 24: Template Data for Remote Control Programming

Entry		Function
K641R/K641LX/ K641+	K656	
0	0	Button disabled
1	1	Regular arm
2	2	Stay arm
3	3	Instant arm
4	4	Force arm
5	5	Utility key 5
6	6	Utility key 6
7	7	-
8	8	Panic 1
9	9	Panic 2
A = STAY	A = ARM	Panic 3
B = FORCE	B = SLEEP	Utility key 1
C = ARM	C = STAY	Utility key 2
D = DISARM	D = OFF	Utility key 3
E = BYP	E = MENU	Utility key 4
F = MEM	F = ☐	-




 
Table 25: Test PGMs and their Section Numbers

Section	Name	Description
[2940]	Default button template	To select a button template as the default template, enter 00 to 15 , representing button templates in sections [2900] to [2915].
[2941]	Assign button template	To assign a button template to a user, select the user when prompted, then enter 00 to 15 , representing button templates in sections [2900] to [2915]. If user 000 is selected, all users are modified.

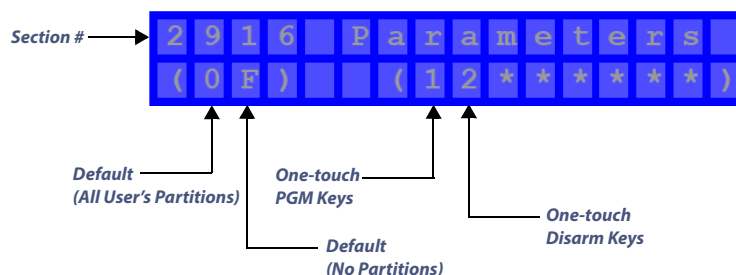Figure 3: Entering Data for Section [2916] on a LCD Keypad (Worksheet 20 on page 39)



Worksheet 20: Programming Remote Controls

Template	Default Data Section	REM3 Remote Control								Section	REM1/REM2/REM25/RAC1/RAC2			
		PGM 1 [9]	PGM 2 [0]	PGM 3 [x]	PGM 4 [✓]	PGM 5 [●]	PGM 6 [●]	PGM 3 & 4 [x] + [✓]	PGM 5 & 6 [●] + [●]					
		1*	B*	C*	0*	5	6	0	0		1	B	C	Disabled
0	[2900]	___	___	___	___	___	___	___	___	[2900]	___	___	___	___
1	[2901]	___	___	___	___	___	___	___	___	[2901]	___	___	___	___
2	[2902]	___	___	___	___	___	___	___	___	[2902]	___	___	___	___
3	[2903]	___	___	___	___	___	___	___	___	[2903]	___	___	___	___
4	[2904]	___	___	___	___	___	___	___	___	[2904]	___	___	___	___
5	[2905]	___	___	___	___	___	___	___	___	[2905]	___	___	___	___
6	[2906]	___	___	___	___	___	___	___	___	[2906]	___	___	___	___
7	[2907]	___	___	___	___	___	___	___	___	[2907]	___	___	___	___
8	[2908]	___	___	___	___	___	___	___	___	[2908]	___	___	___	___
9	[2909]	___	___	___	___	___	___	___	___	[2909]	___	___	___	___
10	[2910]	___	___	___	___	___	___	___	___	[2910]	___	___	___	___
11	[2911]	___	___	___	___	___	___	___	___	[2911]	___	___	___	___
12	[2912]	___	___	___	___	___	___	___	___	[2912]	___	___	___	___
13	[2913]	___	___	___	___	___	___	___	___	[2913]	___	___	___	___
14	[2914]	___	___	___	___	___	___	___	___	[2914]	___	___	___	___
15	[2915]	___	___	___	___	___	___	___	___	[2915]	___	___	___	___

Template	Section	Partitions **		One-touch Keys	
		 1 Default = 0 (All user's partitions)	 2 Default = F (No partitions)	One-touch PGM Keys	One-touch Disarm Keys
				▲ = Disabled (default) □ = Enabled	
0	[2916]	___	___	<input type="checkbox"/>	<input type="checkbox"/>
1	[2917]	___	___	<input type="checkbox"/>	<input type="checkbox"/>
2	[2918]	___	___	<input type="checkbox"/>	<input type="checkbox"/>
3	[2919]	___	___	<input type="checkbox"/>	<input type="checkbox"/>
4	[2920]	___	___	<input type="checkbox"/>	<input type="checkbox"/>
5	[2921]	___	___	<input type="checkbox"/>	<input type="checkbox"/>
6	[2922]	___	___	<input type="checkbox"/>	<input type="checkbox"/>
7	[2923]	___	___	<input type="checkbox"/>	<input type="checkbox"/>
8	[2924]	___	___	<input type="checkbox"/>	<input type="checkbox"/>
9	[2925]	___	___	<input type="checkbox"/>	<input type="checkbox"/>
10	[2926]	___	___	<input type="checkbox"/>	<input type="checkbox"/>
11	[2927]	___	___	<input type="checkbox"/>	<input type="checkbox"/>
12	[2928]	___	___	<input type="checkbox"/>	<input type="checkbox"/>
13	[2929]	___	___	<input type="checkbox"/>	<input type="checkbox"/>
14	[2930]	___	___	<input type="checkbox"/>	<input type="checkbox"/>
15	[2931]	___	___	<input type="checkbox"/>	<input type="checkbox"/>

* REM1/RAC1 and REM2/RAC2 remotes only use the data in these columns.

** If 0 is entered, the associated buttons will control all partitions to which the user is assigned. If F is entered, the associated buttons will be disabled.

Table 27: Description of Sections [3029] to [3035] (Continued)

Section	Option	Description	OFF		ON	
Section [3033] System Options 3	1	Multiple actions in user menu	▲	Disabled	<input type="checkbox"/>	Enabled
	2	User code length	▲	Fixed	<input type="checkbox"/>	Flexible
	3	User code length (if option 2 is OFF)	▲	4 digits	<input type="checkbox"/>	6 digits
	4	Power save mode	<input type="checkbox"/>	Disabled	▲	Enabled
	5	Bypass not displayed while system is armed	<input type="checkbox"/>	Disabled	▲	Enabled
	6	Trouble latch	▲	Disabled	<input type="checkbox"/>	Enabled
	7	EOL resistor on hardwire zones	▲	Disabled	<input type="checkbox"/>	Manually
	8	Zone doubling (ATZ)	▲	Disabled	<input type="checkbox"/>	Enabled
Section [3035] System Options 5	1	Restrict arming on AC failure	▲	Disabled	<input type="checkbox"/>	Enabled
	2	Restrict arming on battery failure	▲	Disabled	<input type="checkbox"/>	Enabled
	3	Restrict arming on bell or auxiliary failure	▲	Disabled	<input type="checkbox"/>	Enabled
	4	Restrict arming on TLM failure	▲	Disabled	<input type="checkbox"/>	Enabled
	5	Restrict arming on module troubles	▲	Disabled	<input type="checkbox"/>	Enabled
	6	Account number transmission	▲	Partition #	<input type="checkbox"/>	Tel #
	7	Transmit zone status on serial port**	▲	Disabled	<input type="checkbox"/>	Enabled
	8	Serial port baud rate	<input type="checkbox"/>	38,400	▲	57,600

Section	Option	Description	OFF		ON	
Section [3034] System Options 4	1 & 2	Wireless Transmitter Supervision Options (refer to Table 28 on page 41)	<input type="checkbox"/>	Refer to Table 28 on page 41	<input type="checkbox"/>	Refer to Table 28 on page 41
	3	Generate supervision failure if detected on a bypassed wireless zone	▲	Yes	<input type="checkbox"/>	No
	4	Restrict arming on a wireless transmitter supervision failure	▲	Disabled	<input type="checkbox"/>	Enabled
	5 & 6	Zone & Module Tamper Recognition Options (refer to Table 29 on page 41)	<input type="checkbox"/>	Refer to Table 29 on page 41	<input type="checkbox"/>	Refer to Table 29 on page 41
	7	Generate tamper if detected on bypass zone	<input type="checkbox"/>	Yes	▲	No
	8	Restrict arming on tamper trouble	▲	Disabled	<input type="checkbox"/>	Enabled

▲ = Default
 * When the combus speed is changed, all operations on the system will be suspended for approximately one minute, while the system adjusts itself.
 ** This option is used by certain event monitoring softwares, such as Hyperterminal. With BabyWare and printers, it is always being transmitted.

WARNING: In option 5 of section [3030], a 40 VA transformer is required when selecting the 850 mA battery charge current. Using a 20 VA transformer with a battery charge current of 850 mA may damage the system.

Table 28: Wireless Transmitter Supervision Options; Options 1 and 2 for Section [3034]

Option		Description
1	2	
OFF	OFF	Disabled (default)
OFF	ON	Generates trouble only (when armed or disarmed)
ON	OFF	When armed: follows zone types (refer to Zone Programming on page 10) When disarmed: generates trouble only
ON	ON	When armed: follows zone types (refer to Zone Programming on page 10) When disarmed: generates audible alarm

Table 29: Zone and Module Tamper Recognition Options; Options 5 and 6 for Section [3034]

Option		Description
5	6	
OFF	OFF	Disabled (default)
OFF	ON	Generates trouble only (when armed or disarmed)
ON	OFF	When armed: follows zone types (refer to Zone Programming on page 10) for zone tamper; generates trouble for module tamper When disarmed: generates trouble only
ON	ON	When armed: follows zone types (refer to Zone Programming on page 10) When disarmed: generates audible alarm

NOTE: For instructions on wiring a panel for tamper recognition, refer to the *Digiplex Evo Installation Guide* (available online only).

Table 30: Anti-Mask Supervision Options; Options 5 and 6 for Section [3029]

Option		Description
5	6	
OFF	OFF	Disabled (default)
OFF	ON	Generates trouble only (when armed or disarmed)
ON	OFF	When armed: alarm When disarmed: generates trouble only
ON	ON	When armed: alarm When disarmed: generates audible alarm

Dialer Options

Use the following section to program dialer options on your EVO system. Table 31 on page 42 provides information on sections [3036] and [3037].

Table 31: Description of Sections 3036 to 3037

Section	Option	Description	OFF	ON	Section	Option	Description	OFF	ON			
Section [3036] Dialer Options 1	1 & 2	Telephone line monitoring (TLM; refer to Table 32 on page 42)	<input type="checkbox"/>	Refer to Table 32 on page 42	Section [3037] Dialer Options 2	1	Call back	▲	Disabled	<input type="checkbox"/>	Enabled	
			<input type="checkbox"/>	Refer to Table 32 on page 42		2	Automatic event buffer transmission	▲	Disabled	<input type="checkbox"/>	Enabled	
	3	Dialer (reporting to monitoring station)	▲	Disabled	<input type="checkbox"/>	Refer to Table 33 on page 42	<input type="checkbox"/>	Refer to Table 33 on page 42				
	4	Dialing method	<input type="checkbox"/>	Pulse	▲	Tone (DTMF)	5	Keypad beep on successful arming/disarming report	▲	Disabled	<input type="checkbox"/>	Enabled
	5	Pulse ratio (E.U. = Europe; N.A. = North America)	<input type="checkbox"/>	1:2 (E.U.)	▲	1:1.5 (N.A.)	6	Alternate dialing	▲	Disabled	<input type="checkbox"/>	Enabled
	6	Busy tone detection	<input type="checkbox"/>	Disabled	▲	Enabled	7	Dial tone delay (if no dial tone)	▲	Force dial	<input type="checkbox"/>	Hang up
	7	Switch to pulse dialing on fifth attempt	▲	Disabled	<input type="checkbox"/>	Enabled	8	Report zone restore ON = Upon zone closure OFF = Upon bell cut-off	▲	Disabled	<input type="checkbox"/>	Enabled
	8	Bell/siren upon communication failure, if system is armed	▲	Disabled	<input type="checkbox"/>	Enabled						

▲ = Default

Table 32: Telephone Line Monitoring (TLM) Options; Options 1 and 2 for Section [3036]

Option		Description
1	2	
OFF	OFF	Disabled (default)
OFF	ON	When armed: generates an audible alarm
ON	OFF	When armed: generates a trouble
ON	ON	TLM silent alarm: becomes an audible alarm

Table 33: AutoTest Report Transmission Options; Options 3 and 4 for Section [3037]

Option		Description
3	4	
OFF	OFF	Transmit the test report code every time the days programmed in section [3040] have elapsed, at the time programmed in section [3041]; (default)
OFF	ON	When armed: transmit test report code every time the time programmed in section [3042] has elapsed When disarmed: transmit test report code every time the time programmed in section [3043] has elapsed
ON	OFF	The control panel will transmit the test report code every hour, on the minute value programmed in section [3041] (the last two digits); the first two digits of section [3041] will be ignored; for example, if 10:25 was programmed in section [3041], the test report code would be transmitted at the 25th minute of every hour; i.e., 11:25, 12:25, etc.
ON	ON	The test report code will be transmitted when one or more of the conditions of the second and third options, listed above, are met; i.e., option 3 = OFF and option 4 = ON, or option 3 = ON and option 4 = OFF

Additional Options

Use the following section to program additional options on your EVO system. *Table 34 on page 43* provides information on sections [3038]. Use *Worksheet 22*, *Worksheet 23*, and *Worksheet 24* to record your settings.

Table 34: Description of Section [3038]

Section	Option	Description	OFF		ON	
Section [3038] Access Control Options	1	Access control feature	▲	Disabled	<input type="checkbox"/>	Enabled
	2	Log <i>Request for Exit</i> in event buffer*	▲	Disabled	<input type="checkbox"/>	Enabled
	3	Log <i>Door Left Open Restore</i> in event buffer	▲	Disabled	<input type="checkbox"/>	Enabled
	4	Log <i>Door Forced Restore</i> in event buffer	▲	Disabled	<input type="checkbox"/>	Enabled
	5	Burglar alarm on forced door	▲	Disabled	<input type="checkbox"/>	Enabled
	6	Skip exit delay when arming with access card	▲	Disabled	<input type="checkbox"/>	Enabled
	7	Burglar alarm on door left open	▲	Disabled	<input type="checkbox"/>	Enabled
	8	Who has access during clock loss	▲	All users	<input type="checkbox"/>	Masters*

▲ = Default
* Also includes users with 00 for schedule access.

WARNING: Since *Request for Exit* events can occur often, the event buffer may fill up quickly.

Schedule Tolerance Window

Worksheet 22: Schedule Tolerance Window

Section	Data	Description	Default Setting
[3039]	__/__/__ (x 1 min.)	Schedule tolerance window	000

AutoTest Report Settings

Worksheet 23: AutoTest Report Settings

Section	Data	Description	Default Setting
[3040]	__/__/__ (x 1 day; 000 = disabled)	Schedule tolerance window	000
[3041]	__/__:__/__ (hr. 00-23 & min. 00-59)	AutoTest report time of day	00:00
[3042]	__/__/__ (000-255 x 1 min.)	Armed report delay	5 minutes
[3043]	__/__/__ (000-255 x 1 min.)	Disarmed report delay	60 minutes

NOTE: Refer to *Table 33 on page 42* for details

Timings

Worksheet 24: Timings Settings

Section	Data	Description	Default Setting
[3051]	__/__/__ (000-255)	Ring counter	008
[3052]	__/__/__ (000-255 x 4 sec.)	Answering machine delay override delay	32 seconds
[3053]	__/__/__ (000-255 x 2sec.)	TLM fail timer	32 seconds
[3054]	__/__/__ (000-127 x 1sec.)	Delay between dialing attempts	20 seconds
[3055]	__/__/__ (000-255 x 1 sec.; 000 = instant report)	Delay alarm transmission timer	000
[3056]	__/__/__ (000-255 x 1 attempt)	Maximum dialing attempts	8 attempts
[3058]	__/__/__ (000-255 x 1 min.; 000 = instant report)	Delay power failure report	30 minutes
[3060]	__/__/__ (000-255 x 1 min.)	Power failure restore delay report	030 minutes

Communication Settings

Use the following section to program communication settings on your EVO system.

Account Numbers

Use *Worksheet 25 on page 44* to record your settings.

WARNING: Only the SIA format supports the 0 = 0 digit in its account numbers. Account numbers that use other reporting formats do not support the 0 = 0 digit. In its place, enter A by pressing STAY (for the K641R/K641LX/K641+ keypads), or by pressing ARM (for the K656 keypad). When using the SIA format, and the *account number transmission* (see option 6, in section [3035] on page 41) corresponds to the partition, the control panel only uses the *partition 1 account number* programmed in section [3061], but the report code includes the partition number.

Worksheet 25: Account Number Settings

Section	Data (Hex Value: 0000-FFFF)	Description	Default Setting
[3061]	__/_/__/__ (If less than four digits, press ENTER)	Account number 1 (partition 1* / MSTN 1**)	0000
[3062]	__/_/__/__ (If less than four digits, press ENTER)	Account number 2 (partition 2* / MSTN 2**)	0000
[3063]	__/_/__/__ (If less than four digits, press ENTER)	Account number 3 (partition 3* / MSTN 3**)	0000
[3064]	__/_/__/__ (If less than four digits, press ENTER)	Account number 4 (partition 4* / MSTN 4**)	0000
[3065]	__/_/__/__ (If less than four digits, press ENTER)	Account number 5 (partition 5* / NA**)	0000
[3066]	__/_/__/__ (If less than four digits, press ENTER)	Account number 6 (partition 6* / NA**)	0000
[3067]	__/_/__/__ (If less than four digits, press ENTER)	Account number 7 (partition 7* / NA**)	0000
[3068]	__/_/__/__ (If less than four digits, press ENTER)	Account number 8 (partition 8* / NA**)	0000

* Option 6 in section [3035] is disabled.
 ** Option 6 in section [3035] is enabled.

NOTE: MSTN is the abbreviation for *Monitoring Station Telephone Number*.

Reporting Formats

Use *Worksheet 26* on page 44 and *Worksheet 27* on page 44 to record your settings.

Table 35: Reporting Formats for Section [3070]

Input Value	Description	Input Value	Description
0	Ademco Slow (1400 Hz, 1900 Hz, 10 BPS)	5	Ademco contact ID
1	Silent Knight Fast (1400 Hz, 1900 Hz, 20 BPS)	6	SIA FSK (level 2)
2	Sescoa (2300 Hz, 1800 Hz, 20 BPS)		
3	Ademco Express (DTMF 4+2)		
4	-		

NOTE: For more information on contact ID and SIA reporting formats, refer to *Table 55* on page 58.

Worksheet 26: Reporting Formats for Section [3070]

Section	Tel. # 1 Format	Tel. # 2 Format	Tel. # 3 Format	Tel. # 4 Format	Description
[3070]	__	__	__	__	Reporting formats for telephone numbers 1 to 4 / IP Receiver 1 to 4

NOTE: Use the same format for each number.

Table 36: Special Telephone Number Keys for the Different Keypads

Function	K641R/K641LX/K641+	K656
*	STAY	STAY
#	FORCE	SLEEP
Switch to tone dialing (T)	ARM	ARM
Wait for second dial tone (W)	DISARM	OFF
4-second pause (P)	BYP	MENU
Clear	CLEAR	CLEAR
Delete	TRBL/TBL	TRBL
Delete from cursor to the end	ACC	ACC
Insert space	MEM	MEM
Dial 9 for outside line	9 + STAY	9 + STAY

WARNING: To disable call-waiting for North American installations using either contact ID or SIA reporting formats, enter *70, and then either P (4-second pause) or W (wait for second dial tone) before entering the phone number. This applies to sections [3071] to [3074] (refer to *Worksheet 27* on page 44).

Worksheet 27: Reporting Formats for Sections [3071] to [3074]

Section	Data (Press ENTER if less than 32 digits)	Description
[3071]	__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__	Monitoring station telephone # 1
[3072]	__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__	Monitoring station telephone # 2
[3073]	__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__	Monitoring station telephone # 3
[3074]	__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__/_/__/__	Monitoring station telephone # 4

Table 39: Description of Sections [3133] to [3833]

Option	Description	Partition 1 [3133]		Partition 2 [3233]		Partition 3 [3333]		Partition 4 [3433]		Partition 5 [3533]		Partition 6 [3633]		Partition 7 [3733]		Partition 8 [3833]	
		OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON
1	Telephone number 1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
2	Telephone number 2	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
3	Telephone number 3	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
4	Telephone number 4	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
5	Telephone number 5	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
6	Telephone number 6	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
7	Telephone number 7	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
8	Telephone number 8	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>

▲= Default

PCS GSM/GPRS Communicator Module

Use the following section to program the PCS GSM/GPRS Communicator Module on your EVO system. Use *Worksheet 30 on page 46 to Worksheet 39 on page 49* to record your settings.

BabyWare/PCS Module Connection

Worksheet 30: BabyWare/PCS Module Connection Settings

Section	Data	Description
[2960]	____/____/____/____/____/____/____/____/____/____/____	Access point name (APN) part 1 (e.g., internet.com)
[2961]	____/____/____/____/____/____/____/____/____/____/____	Access point name (APN) part 2 (e.g., wap.provider.com)
[2962]	____/____/____/____/____/____/____/____/____/____/____	User name part 1
[2963]	____/____/____/____/____/____/____/____/____/____/____	User name part 2
[2964]	____/____/____/____/____/____/____/____/____/____/____	Password part 1
[2965]	____/____/____/____/____/____/____/____/____/____/____	Password part 2
[2966]	____/____/____/____	Port (default = 10000)
[3013]	____/____/____/____/____/____/____/____/____/____/____	Installer software password (BabyWare) (default = admin)

PCS Module Programming

Table 40: Section [2950] GSM Options

Option		Description (GSM Reporting)		Option		Description	
1	2	Primary	Backup	3		Future use	
OFF	OFF	Landline	Landline	4		Future use	
OFF	ON	Landline	GSM				
ON	OFF	GSM	Landline				
ON	ON	GSM	GSM				
5	6	Description (GSM/GPRS No Service Supervision)		7		GSM/GPRS module tamper (need PCS250 version 1.2 and higher)	
OFF	OFF	Disabled		OFF	ON		
ON	OFF	When disarmed: trouble only; when armed: trouble only					
OFF	ON	When disarmed: trouble only; when armed: audible only		8		GSM/GPRS RF jamming supervision	
ON	ON	Silent alarm becomes audible alarm		OFF	ON		

PCS Module Programming

Worksheet 31: PCS Module Settings

Section	Data	Description
[2951]	___/___	Default: 00 Panel supervision lost (reporting code)
[2952]	___/___/___	(000 to 255) x 2 seconds GSM no service timer (default: 016)

PCS265 LTE Module SMS Language

Table 41: PCS265 LTE SMS Languages

ID	Language	ID	Language	ID	Language	ID	Language
000	English	009	Hungarian	018	Slovak	027	Belgian
001	French	010	Czech	019	Chinese	028	Latvian
002	Spanish	011	Dutch	020	Serbian	029	Albanian
003	Italian	012	Croatian	021	Malay	030	Macedonian
004	Swedish	013	Greek	022	Slovenian		
005	Polish	014	Hebrew	023	Lithuanian		
006	Portuguese	015	Russian	024	Finnish		
007	German	016	Bulgarian	025	Estonian		
008	Turkish	017	Romanian	026	French Canadian		

PCS250/PCS250G Module SMS Language

SMS languages can be upgraded locally using the “Firmware” section of the PCS Module on paradox.com. It allows you to download version 4.20 (or higher) in the language of your choice. The following table lists the available languages.

Table 42: PCS250/PCS250G SMS Languages

Language					
English (default)	Czech	German	Lithuanian	Russian	Turkish
Albanian	Dutch	Greek	Macedonian	Serbian	
Belgian	Estonian	Hebrew	Malay	Slovak	
Bulgarian	Finnish	Hungarian	Polish	Slovenian	
Chinese	French	Italian	Portuguese	Spanish	
Croatian	French Canadian	Latvian	Romanian	Swedish	

SMS Site Name

Worksheet 32: SMS Site Name Settings

Section	Label
[2954]	____/____

IP/PCS Module (GPRS) Options

Table 43: Section [2975] IP/GPRS Options

Option		Description (IP No Service Trouble Feedback)
5	6	
OFF	OFF	Disabled
ON	OFF	When disarmed: trouble only; when armed: trouble only
OFF	ON	When disarmed: trouble only; when armed: audible alarm
ON	ON	Silent alarm becomes audible alarm
Option		Description
7		
OFF ▲ As IP/GPRS reporting backup	ON <input type="checkbox"/> In addition to IP/GPRS reporting	Use dialer reporting
8		
OFF ▲ Disabled	ON <input type="checkbox"/> Enabled	Enable IP/GPRS reporting

IP/GPRS Reporting Account Programming

Worksheet 33: IP Account Number Settings

Section	Data	Description
[2976]	____/____/____/____	IP account partition 1/account 1 number
[2977]	____/____/____/____	IP account partition 2/account 2 number
[2978]	____/____/____/____	IP account partition 3/account 3 number

Worksheet 33: IP Account Number Settings

Section	Data	Description
[2979]	__/__/__/__	IP account partition 4/account 4 number
[2980]	__/__/__/__	IP account partition 5/account 5 number
[2981]	__/__/__/__	IP account partition 6/account 6 number
[2982]	__/__/__/__	IP account partition 7/account 7 number
[2983]	__/__/__/__	IP account partition 8/account 8 number

Worksheet 34: IP Receiver 1 Configuration

Section	Data	Description
[2984]	__/__/__/__ . __/__/__/__ . __/__/__/__ . __/__/__/__	WAN1 IP address (e.g., 100.100.100.100); for one or two-digit numbers, add 0s before the first digit
	__/__/__/__	WAN1 IP port (default: 10000)
	__/__/__/__ . __/__/__/__ . __/__/__/__ . __/__/__/__	WAN2 IP address
	__/__/__/__	WAN2 IP port
	____/____/____/____/____/____/____/____/____/____/____/____/____/____/____/____	IP password (e.g., 123456)
	__	IP profile (e.g., 01)
[2985]	To register IP/GPRS module, press ARM	

Worksheet 35: IP Receiver 2 Configuration

Section	Data	Description
[2986]	__/__/__/__ . __/__/__/__ . __/__/__/__ . __/__/__/__	WAN1 IP address (e.g., 100.100.100.100); for one or two-digit numbers, add 0s before the first digit
	__/__/__/__	WAN1 IP port (default: 10000)
	__/__/__/__ . __/__/__/__ . __/__/__/__ . __/__/__/__	WAN2 IP address
	__/__/__/__	WAN2 IP port
	____/____/____/____/____/____/____/____/____/____/____/____/____/____/____/____	IP password (e.g., 123456)
	__	IP profile (e.g., 01)
[2987]	To register IP/GPRS module, press ARM	

Worksheet 36: IP Receiver 3 Configuration

Section	Data	Description
[2988]	__/__/__/__ . __/__/__/__ . __/__/__/__ . __/__/__/__	WAN1 IP address (e.g., 100.100.100.100); for one or two-digit numbers, add 0s before the first digit
	__/__/__/__	WAN1 IP port (default: 10000)
	__/__/__/__ . __/__/__/__ . __/__/__/__ . __/__/__/__	WAN2 IP address
	__/__/__/__	WAN2 IP port
	____/____/____/____/____/____/____/____/____/____/____/____/____/____/____/____	IP password (e.g., 123456)
	__	IP profile (e.g., 01)
[2989]	To register IP/GPRS module, press ARM	

Worksheet 37: IP Receiver 4 Configuration

Section	Data	Description
[2990]	__/__/__/__ . __/__/__/__ . __/__/__/__ . __/__/__/__	WAN1 IP address (e.g., 100.100.100.100); for one or two-digit numbers, add 0s before the first digit
	__/__/__/__	WAN1 IP port (default: 10000)
	__/__/__/__ . __/__/__/__ . __/__/__/__ . __/__/__/__	WAN2 IP address
	__/__/__/__	WAN2 IP port
	____/____/____/____/____/____/____/____/____/____/____/____/____/____/____/____	IP password (e.g., 123456)
	__	IP profile (e.g., 01)
[2991]	To register IP/GPRS module, press ARM	

IP/PCS Module Report Code Programming**Worksheet 38: PCS Module Report Codes**

Section	Data	Description
[2967]	__/__	Missing GSM module
	__/__	Missing GSM module restore
	__/__	Future use
	__/__	Future use
[2968]	__/__	GSM RF jam
	__/__	GSM RF jam restore
	__/__	GSM no service
[2969]	__/__	GSM no service restore
	__/__	Fail to communicate IPR512 1
	__/__	Fail to communicate IPR512 1 restore
	__/__	Fail to communicate IPR512 2
	__/__	Fail to communicate IPR512 2 restore

Worksheet 38: PCS Module Report Codes

Section	Data	Description
[2970]	___/___	Fail to communicate IPR512 3
	___/___	Fail to communicate IPR512 3 restore
	___/___	Fail to communicate IPR512 4
	___/___	Fail to communicate IPR512 4 restore

Worksheet 39: IP Module Report Codes

Section	Data	Description
[2992]	___/___	Missing IP module
	___/___	Missing IP Restore
	___/___	IP no service
	___/___	IP no service restore
[2993]	___/___	Fail to communicate IPR512 1
	___/___	Fail to communicate IPR512 1 restore
	___/___	Fail to communicate IPR512 2
	___/___	Fail to communicate IPR512 2 restore
[2994]	___/___	Fail to communicate IPR512 3
	___/___	Fail to communicate IPR512 3 restore
	___/___	Fail to communicate IPR512 4
	___/___	Fail to communicate IPR512 4 restore

Unlock Panel Serial Ports

Enter section [3000] to unlock your EVO192’s panel serial ports for use with third-party devices using a TM70/TM50 Touch or K641+/K641R/K656 keypad. For a step-by-step procedure, refer to the Insite Gold Installer Menu Guide.

Partition Settings

Use the following section to program the various partitions on your EVO system. Use *Worksheet 40 on page 49* to **Worksheet 46 on page 56** to record your settings.

Worksheet 40: Partition Label Settings for Sections [3100] to [3800]

Section	Partition Label	Partition #
[3100]	___/___/___/___/___/___/___/___/___/___/___/___/___/___/___/___	1
[3200]	___/___/___/___/___/___/___/___/___/___/___/___/___/___/___/___	2
[3300]	___/___/___/___/___/___/___/___/___/___/___/___/___/___/___/___	3
[3400]	___/___/___/___/___/___/___/___/___/___/___/___/___/___/___/___	4
[3500]	___/___/___/___/___/___/___/___/___/___/___/___/___/___/___/___	5
[3600]	___/___/___/___/___/___/___/___/___/___/___/___/___/___/___/___	6
[3700]	___/___/___/___/___/___/___/___/___/___/___/___/___/___/___/___	7
[3800]	___/___/___/___/___/___/___/___/___/___/___/___/___/___/___/___	8

Auto-arm Times

Worksheet 41: Auto-arm Time Settings

Section	Data (Hours 00-23; Minutes 00-59)	Partition #	Section	Data (Hours 00-23; Minutes 00-59)	Partition #
[3101]	___/___ : ___/___	1	[3501]	___/___ : ___/___	5
[3201]	___/___ : ___/___	2	[3601]	___/___ : ___/___	6
[3301]	___/___ : ___/___	3	[3701]	___/___ : ___/___	7
[3401]	___/___ : ___/___	4	[3801]	___/___ : ___/___	8

Arming/Disarming Report Schedules

Worksheet 42: Arming Report Schedule Settings

Section	Partition #	Schedule	Interval	Start Time (From)	End Time (To)	Days of the Week (Turn ON or OFF)							
						S	M	T	W	T	F	S	H
[3102]	1	001	Schedule A	___ : ___	___ : ___	1	2	3	4	5	6	7	8
			Schedule B	___ : ___	___ : ___	1	2	3	4	5	6	7	8
[3202]	2	002	Schedule A	___ : ___	___ : ___	1	2	3	4	5	6	7	8
			Schedule B	___ : ___	___ : ___	1	2	3	4	5	6	7	8
[3302]	3	003	Schedule A	___ : ___	___ : ___	1	2	3	4	5	6	7	8
			Schedule B	___ : ___	___ : ___	1	2	3	4	5	6	7	8
[3402]	4	004	Schedule A	___ : ___	___ : ___	1	2	3	4	5	6	7	8
			Schedule B	___ : ___	___ : ___	1	2	3	4	5	6	7	8
[3502]	5	005	Schedule A	___ : ___	___ : ___	1	2	3	4	5	6	7	8
			Schedule B	___ : ___	___ : ___	1	2	3	4	5	6	7	8
[3602]	6	006	Schedule A	___ : ___	___ : ___	1	2	3	4	5	6	7	8
			Schedule B	___ : ___	___ : ___	1	2	3	4	5	6	7	8
[3702]	7	007	Schedule A	___ : ___	___ : ___	1	2	3	4	5	6	7	8
			Schedule B	___ : ___	___ : ___	1	2	3	4	5	6	7	8

Worksheet 42: Arming Report Schedule Settings

Section	Partition #	Schedule	Interval	Start Time (From)	End Time (To)	Days of the Week (Turn ON or OFF)							
						S	M	T	W	T	F	S	H
[3802]	8	008	Schedule A	___ : ___	___ : ___	1	2	3	4	5	6	7	8
			Schedule B	___ : ___	___ : ___	1	2	3	4	5	6	7	8

NOTE: If a partition is armed outside a schedule, the panel will send an *Early to Close* [3916] and/or *Late to Close* [3917] report code (refer to *Worksheet 47* on page 56).

Worksheet 43: Disarming Report Schedule Settings

Section	Partition #	Schedule	Interval	Start Time (From)	End Time (To)	Days of the Week (Turn ON or OFF)							
						S	M	T	W	T	F	S	H
[3103]	1	001	Schedule A	___ : ___	___ : ___	1	2	3	4	5	6	7	8
			Schedule B	___ : ___	___ : ___	1	2	3	4	5	6	7	8
[3203]	2	002	Schedule A	___ : ___	___ : ___	1	2	3	4	5	6	7	8
			Schedule B	___ : ___	___ : ___	1	2	3	4	5	6	7	8
[3303]	3	003	Schedule A	___ : ___	___ : ___	1	2	3	4	5	6	7	8
			Schedule B	___ : ___	___ : ___	1	2	3	4	5	6	7	8
[3403]	4	004	Schedule A	___ : ___	___ : ___	1	2	3	4	5	6	7	8
			Schedule B	___ : ___	___ : ___	1	2	3	4	5	6	7	8
[3503]	5	005	Schedule A	___ : ___	___ : ___	1	2	3	4	5	6	7	8
			Schedule B	___ : ___	___ : ___	1	2	3	4	5	6	7	8
[3603]	6	006	Schedule A	___ : ___	___ : ___	1	2	3	4	5	6	7	8
			Schedule B	___ : ___	___ : ___	1	2	3	4	5	6	7	8
[3703]	7	007	Schedule A	___ : ___	___ : ___	1	2	3	4	5	6	7	8
			Schedule B	___ : ___	___ : ___	1	2	3	4	5	6	7	8
[3803]	8	008	Schedule A	___ : ___	___ : ___	1	2	3	4	5	6	7	8
			Schedule B	___ : ___	___ : ___	1	2	3	4	5	6	7	8

NOTE: If partition is disarmed outside schedule, panel will send an *Early to Open* [3926] and/or *Late to Open* [3927] report code (refer to *Worksheet 47* on page 56).

Partition Timers

Worksheet 44: Partition Timer Settings

Description (Decimal Values from 000 to 255)	Partition 1		Partition 2		Partition 3		Partition 4		Partition 5		Partition 6		Partition 7		Partition 8	
	Section	Data	Section	Data	Section	Data	Section	Data	Section	Data	Section	Data	Section	Data	Section	Data
Arming/disarming schedule tolerance window (Data x 1 min.; Default: 000)	[3104]	___/___	[3204]	___/___	[3304]	___/___	[3404]	___/___	[3504]	___/___	[3604]	___/___	[3704]	___/___	[3804]	___/___
Number of invalid codes before lockout (Data x 1 attempt; Default: 005)	[3105]	___/___	[3205]	___/___	[3305]	___/___	[3405]	___/___	[3505]	___/___	[3605]	___/___	[3705]	___/___	[3805]	___/___
Keypad lockout duration (Data x 1 min.; Report only: 000; Default: 015)	[3106]	___/___	[3206]	___/___	[3306]	___/___	[3406]	___/___	[3506]	___/___	[3606]	___/___	[3706]	___/___	[3806]	___/___
No movement timer (Data x 5 min.; Default: disabled)	[3107]	___/___	[3207]	___/___	[3307]	___/___	[3407]	___/___	[3507]	___/___	[3607]	___/___	[3707]	___/___	[3807]	___/___
Exit delay timer (Data x 1 sec.; Default: 060 sec.)	[3108]	___/___	[3208]	___/___	[3308]	___/___	[3408]	___/___	[3508]	___/___	[3608]	___/___	[3708]	___/___	[3808]	___/___
Recent closing delay (Data x 1 sec.; Default: disabled)	[3109]	___/___	[3209]	___/___	[3309]	___/___	[3409]	___/___	[3509]	___/___	[3609]	___/___	[3709]	___/___	[3809]	___/___
Intellizone delay (Data x 1 sec.; Default: 032 sec.)	[3110]	___/___	[3210]	___/___	[3310]	___/___	[3410]	___/___	[3510]	___/___	[3610]	___/___	[3710]	___/___	[3810]	___/___
Entry delay 1 (Data x 1 sec.; Default: 030 sec.)	[3111]	___/___	[3211]	___/___	[3311]	___/___	[3411]	___/___	[3511]	___/___	[3611]	___/___	[3711]	___/___	[3811]	___/___
Entry delay 2 (Data x 1 sec.; Default: 060 sec.)	[3112]	___/___	[3212]	___/___	[3312]	___/___	[3412]	___/___	[3512]	___/___	[3612]	___/___	[3712]	___/___	[3812]	___/___
Bell cut-off timer (Data x 1 min.; Default: 4 min.)	[3113]	___/___	[3213]	___/___	[3313]	___/___	[3413]	___/___	[3513]	___/___	[3613]	___/___	[3713]	___/___	[3813]	___/___
Auto zone shutdown (000 to 015 alarms; Default: disabled)	[3114]	___/___	[3214]	___/___	[3314]	___/___	[3414]	___/___	[3514]	___/___	[3614]	___/___	[3714]	___/___	[3814]	___/___
Maximum number of zones that can be bypassed (Data x 1 zone; Default: unlimited)	[3115]	___/___	[3215]	___/___	[3315]	___/___	[3415]	___/___	[3515]	___/___	[3615]	___/___	[3715]	___/___	[3815]	___/___
Recycle delay (Data x 1 min.; Default: disabled)	[3116]	___/___	[3216]	___/___	[3316]	___/___	[3416]	___/___	[3516]	___/___	[3616]	___/___	[3716]	___/___	[3816]	___/___

Worksheet 44: Partition Timer Settings

Description (Decimal Values from 000 to 255)	Partition 1		Partition 2		Partition 3		Partition 4		Partition 5		Partition 6		Partition 7		Partition 8	
	Section	Data	Section	Data	Section	Data	Section	Data	Section	Data	Section	Data	Section	Data	Section	Data
Number of recycles (Data x 1 attempt; Default: unlimited)	[3117]	__/_/___	[3217]	__/_/___	[3317]	__/_/___	[3417]	__/_/___	[3517]	__/_/___	[3617]	__/_/___	[3717]	__/_/___	[3817]	__/_/___
Police code timer (Data x 1 min.; Default: disabled)	[3118]	__/_/___	[3218]	__/_/___	[3318]	__/_/___	[3418]	__/_/___	[3518]	__/_/___	[3618]	__/_/___	[3718]	__/_/___	[3818]	__/_/___
Closing delinquency timer (Data x 1 day; Default: disabled)	[3119]	__/_/___	[3219]	__/_/___	[3319]	__/_/___	[3419]	__/_/___	[3519]	__/_/___	[3619]	__/_/___	[3719]	__/_/___	[3819]	__/_/___
Postpone auto-arm delay (Data x 15 min.; Default: 0)	[3120]	__/_/___	[3220]	__/_/___	[3320]	__/_/___	[3420]	__/_/___	[3520]	__/_/___	[3620]	__/_/___	[3720]	__/_/___	[3820]	__/_/___

Partition Options 1

Table 44: Description of Sections [3121] to [3821]

Section	Option	Description	OFF		ON	
Section [3121] Partition 1	1	Switch to Stay arm (if no delay zone is opened)	▲	Disabled	<input type="checkbox"/>	Enabled
	2	Arm/disarm with partition 2	▲	Disabled	<input type="checkbox"/>	Enabled
	3	Arm/disarm with partition 3	▲	Disabled	<input type="checkbox"/>	Enabled
	4	Arm/disarm with partition 4	▲	Disabled	<input type="checkbox"/>	Enabled
	5	Arm/disarm with partition 5	▲	Disabled	<input type="checkbox"/>	Enabled
	6	Arm/disarm with partition 6	▲	Disabled	<input type="checkbox"/>	Enabled
	7	Arm/disarm with partition 7	▲	Disabled	<input type="checkbox"/>	Enabled
	8	Arm/disarm with partition 8	▲	Disabled	<input type="checkbox"/>	Enabled
Section [3321] Partition 3	1	Arm/disarm with partition 1	▲	Disabled	<input type="checkbox"/>	Enabled
	2	Arm/disarm with partition 2	▲	Disabled	<input type="checkbox"/>	Enabled
	3	Switch to Stay arm (if no delay zone is opened)	▲	Disabled	<input type="checkbox"/>	Enabled
	4	Arm/disarm with partition 4	▲	Disabled	<input type="checkbox"/>	Enabled
	5	Arm/disarm with partition 5	▲	Disabled	<input type="checkbox"/>	Enabled
	6	Arm/disarm with partition 6	▲	Disabled	<input type="checkbox"/>	Enabled
	7	Arm/disarm with partition 7	▲	Disabled	<input type="checkbox"/>	Enabled
	8	Arm/disarm with partition 8	▲	Disabled	<input type="checkbox"/>	Enabled
Section [3521] Partition 5	1	Arm/disarm with partition 1	▲	Disabled	<input type="checkbox"/>	Enabled
	2	Arm/disarm with partition 2	▲	Disabled	<input type="checkbox"/>	Enabled
	3	Arm/disarm with partition 3	▲	Disabled	<input type="checkbox"/>	Enabled
	4	Arm/disarm with partition 4	▲	Disabled	<input type="checkbox"/>	Enabled
	5	Switch to Stay arm (if no delay zone is opened)	▲	Disabled	<input type="checkbox"/>	Enabled
	6	Arm/disarm with partition 6	▲	Disabled	<input type="checkbox"/>	Enabled
	7	Arm/disarm with partition 7	▲	Disabled	<input type="checkbox"/>	Enabled
	8	Arm/disarm with partition 8	▲	Disabled	<input type="checkbox"/>	Enabled

Section	Option	Description	OFF		ON	
Section [3221] Partition 2	1	Arm/disarm with partition 1	▲	Disabled	<input type="checkbox"/>	Enabled
	2	Switch to Stay arm (if no delay zone is opened)	▲	Disabled	<input type="checkbox"/>	Enabled
	3	Arm/disarm with partition 3	▲	Disabled	<input type="checkbox"/>	Enabled
	4	Arm/disarm with partition 4	▲	Disabled	<input type="checkbox"/>	Enabled
	5	Arm/disarm with partition 5	▲	Disabled	<input type="checkbox"/>	Enabled
	6	Arm/disarm with partition 6	▲	Disabled	<input type="checkbox"/>	Enabled
	7	Arm/disarm with partition 7	▲	Disabled	<input type="checkbox"/>	Enabled
	8	Arm/disarm with partition 8	▲	Disabled	<input type="checkbox"/>	Enabled
Section [3421] Partition 4	1	Arm/disarm with partition 1	▲	Disabled	<input type="checkbox"/>	Enabled
	2	Arm/disarm with partition 2	▲	Disabled	<input type="checkbox"/>	Enabled
	3	Arm/disarm with partition 3	▲	Disabled	<input type="checkbox"/>	Enabled
	4	Switch to Stay arm (if no delay zone is opened)	▲	Disabled	<input type="checkbox"/>	Enabled
	5	Arm/disarm with partition 5	▲	Disabled	<input type="checkbox"/>	Enabled
	6	Arm/disarm with partition 6	▲	Disabled	<input type="checkbox"/>	Enabled
	7	Arm/disarm with partition 7	▲	Disabled	<input type="checkbox"/>	Enabled
	8	Arm/disarm with partition 8	▲	Disabled	<input type="checkbox"/>	Enabled
Section [3621] Partition 6	1	Arm/disarm with partition 1	▲	Disabled	<input type="checkbox"/>	Enabled
	2	Arm/disarm with partition 2	▲	Disabled	<input type="checkbox"/>	Enabled
	3	Arm/disarm with partition 3	▲	Disabled	<input type="checkbox"/>	Enabled
	4	Arm/disarm with partition 4	▲	Disabled	<input type="checkbox"/>	Enabled
	5	Arm/disarm with partition 5	▲	Disabled	<input type="checkbox"/>	Enabled
	6	Switch to Stay arm (if no delay zone is opened)	▲	Disabled	<input type="checkbox"/>	Enabled
	7	Arm/disarm with partition 7	▲	Disabled	<input type="checkbox"/>	Enabled
	8	Arm/disarm with partition 8	▲	Disabled	<input type="checkbox"/>	Enabled

Table 44: Description of Sections [3121] to [3821] (Continued)

Section	Option	Description	OFF		ON		Section	Option	Description	OFF		ON	
Section [3721] Partition 7	1	Arm/disarm with partition 1	▲	Disabled	<input type="checkbox"/>	Enabled	Section [3821] Partition 8	1	Arm/disarm with partition 1	▲	Disabled	<input type="checkbox"/>	Enabled
	2	Arm/disarm with partition 2	▲	Disabled	<input type="checkbox"/>	Enabled		2	Arm/disarm with partition 2	▲	Disabled	<input type="checkbox"/>	Enabled
	3	Arm/disarm with partition 3	▲	Disabled	<input type="checkbox"/>	Enabled		3	Arm/disarm with partition 3	▲	Disabled	<input type="checkbox"/>	Enabled
	4	Arm/disarm with partition 4	▲	Disabled	<input type="checkbox"/>	Enabled		4	Arm/disarm with partition 4	▲	Disabled	<input type="checkbox"/>	Enabled
	5	Arm/disarm with partition 5	▲	Disabled	<input type="checkbox"/>	Enabled		5	Arm/disarm with partition 5	▲	Disabled	<input type="checkbox"/>	Enabled
	6	Arm/disarm with partition 6	▲	Disabled	<input type="checkbox"/>	Enabled		6	Arm/disarm with partition 6	▲	Disabled	<input type="checkbox"/>	Enabled
	7	Switch to Stay arm (if no delay zone is opened)	▲	Disabled	<input type="checkbox"/>	Enabled		7	Arm/disarm with partition 7	▲	Disabled	<input type="checkbox"/>	Enabled
	8	Arm/disarm with partition 8	▲	Disabled	<input type="checkbox"/>	Enabled		8	Switch to Stay arm (if no delay zone is opened)	▲	Disabled	<input type="checkbox"/>	Enabled

▲ = Default

Partition Arming/Disarming Options

Table 45: Description of Partition Arming/Disarming Options

Option	Description	Partition 1 [3122]		Partition 2 [3222]		Partition 3 [3322]		Partition 4 [3422]		Partition 5 [3522]		Partition 6 [3622]		Partition 7 [3722]		Partition 8 [3822]	
		OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON
1	Timed auto-arming	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>
2	No Movement auto-arming	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>
3	Arming method for auto arm (OFF = Force arming; ON = Stay arming)	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>
4	Exit delay termination	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲
5	Future use	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
6	Future use	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
7	Future use	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
8	Follow zone switches to <i>Entry Delay 2</i> , when delay zone is bypassed	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲

▲ = Default

Partition Panic Alarm Options

Table 46: Description of Partition Panic Alarm Options

Option	Description	Partition 1 [3123]		Partition 2 [3223]		Partition 3 [3323]		Partition 4 [3423]		Partition 5 [3523]		Partition 6 [3623]		Partition 7 [3723]		Partition 8 [3823]	
		OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON
1	Panic 1 (K641R/K641LX/K641+: keys 1 & 3; K656: [□])	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>
2	Panic 2 (K641R/K641LX/K641+: keys 4 & 6; K656: [△])	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>
3	Panic 3 (K641R/K641LX/K641+: keys 7 & 9; K656: [▲])	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>
4	Panic 1 alarm type (OFF = report only; ON = audible alarm)	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>
5	Panic 2 alarm type (OFF = report only; ON = audible alarm)	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>
6	Panic 3 alarm type (OFF = report only; ON = fire alarm)	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>
7	Always report disarming (OFF = always; ON = only after alarm)	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>
8	Auto-force on regular arming	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>	▲	<input type="checkbox"/>

▲ = Default

Partition Bell Squawk Options

Table 47: Description of Partition Bell Squawk Options

Option	Description	Partition 1 [3124]		Partition 2 [3224]		Partition 3 [3324]		Partition 4 [3424]		Partition 5 [3524]		Partition 6 [3624]		Partition 7 [3724]		Partition 8 [3824]	
		OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON
1	Bell squawk upon disarming	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
2	Bell squawk upon arming	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
3	Bell squawk upon auto-arming	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
4	Bell squawk during exit delay	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
5	Bell squawk during entry delay	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
6	Bell squawk upon remote arming/disarming	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲
7	Ring back: bell squawk if disarmed after alarm	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
8	Ring back: keypad beeps if disarmed after alarm	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲

▲= Default

Partition One-touch Options

Table 48: Description of Partition One-Touch Options

Option	Description	Partition 1 [3125]		Partition 2 [3225]		Partition 3 [3325]		Partition 4 [3425]		Partition 5 [3525]		Partition 6 [3625]		Partition 7 [3725]		Partition 8 [3825]	
		OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON
1	One-touch regular arming	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
2	One-touch Stay arming	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
3	One-touch Instant arming	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
4	One-touch Force arming	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
5	One-touch Stay or Instant disarming	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
6	One-touch bypass programming	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
7	One-touch event display	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
8	No exit delay when arming with remote control	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲

▲= Default

WARNING: If a keypad is assigned to more than one partition, the one-touch feature must be enabled in all the keypad's assigned partitions. For instance, to enable the one-touch Regular Arming feature of a keypad assigned to partitions 1, 2, and 5, enable option 1 of sections [3125], [3225], and [3525].

Partition Special Options

Table 49: Description of Partition Special Options

Option	Description	Partition 1 [3126]		Partition 2 [3226]		Partition 3 [3326]		Partition 4 [3426]		Partition 5 [3526]		Partition 6 [3626]		Partition 7 [3726]		Partition 8 [3826]	
		OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON
1	Intellizone delay	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲
2	Intellizone double knockout and zone crossing	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲
3	Intellizone zone crossing	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲
4	Auto-force on Stay arming	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
5	Police code is generated on zone crossing only	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
6	Future use	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
7	Future use	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
8	Future use	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

▲= Default

Partition Arming/Disarming Event Call Direction

Table 50: Description of Partition Arming/Disarming Event Call Direction

Option	Description	Partition 1 [3127]		Partition 2 [3227]		Partition 3 [3327]		Partition 4 [3427]		Partition 5 [3527]		Partition 6 [3627]		Partition 7 [3727]		Partition 8 [3827]	
		OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON
1	Call telephone number 1/IP receiver 1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
2	Call telephone number 2/IP receiver 2	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
3	Call telephone number 3/IP receiver 3	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
4	Call telephone number 4/IP receiver 4	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
5	Backup on telephone number 1/IP receiver 1	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
6	Backup on telephone number 2/IP receiver 2	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
7	Backup on telephone number 3/IP receiver 3	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
8	Backup on telephone number 4/IP receiver 4	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>

▲ = Default

NOTE: Enable only one option from options 5 to 8 (inclusive).

Partition Alarm/Alarm Restore Event Call Direction

Table 51: Description of Partition Alarm/Alarm Restore Event Call Direction

Option	Description	Partition 1 [3128]		Partition 2 [3228]		Partition 3 [3328]		Partition 4 [3428]		Partition 5 [3528]		Partition 6 [3628]		Partition 7 [3728]		Partition 8 [3828]	
		OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON
1	Call telephone number 1/IP receiver 1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
2	Call telephone number 2/IP receiver 2	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
3	Call telephone number 3/IP receiver 3	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
4	Call telephone number 4/IP receiver 4	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
5	Backup on telephone number 1/IP receiver 1	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
6	Backup on telephone number 2/IP receiver 2	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
7	Backup on telephone number 3/IP receiver 3	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
8	Backup on telephone number 4/IP receiver 4	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>

▲ = Default

NOTE: Enable only one option from options 5 to 8 (inclusive).

Partition Tamper/Tamper Restore Event Call Direction

Table 52: Description of Partition Tamper/Tamper Restore Event Call Direction

Option	Description	Partition 1 [3129]		Partition 2 [3229]		Partition 3 [3329]		Partition 4 [3429]		Partition 5 [3529]		Partition 6 [3629]		Partition 7 [3729]		Partition 8 [3829]	
		OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON
1	Call telephone number 1/IP receiver 1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
2	Call telephone number 2/IP receiver 2	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
3	Call telephone number 3/IP receiver 3	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
4	Call telephone number 4/IP receiver 4	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
5	Backup on telephone number 1/IP receiver 1	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
6	Backup on telephone number 2/IP receiver 2	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
7	Backup on telephone number 3/IP receiver 3	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
8	Backup on telephone number 4/IP receiver 4	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>

▲= Default

NOTE: Enable only one option from options 5 to 8 (inclusive).

Special Arming Exit Delay

Worksheet 45: Special Arming Exit Delay Settings

Description (Decimal Values from 000 to 255)	Partition 1		Partition 2		Partition 3		Partition 4		Partition 5		Partition 6		Partition 7		Partition 8	
	Section	Data	Section	Data	Section	Data	Section	Data	Section	Data	Section	Data	Section	Data	Section	Data
Exit delay for special arming; auto arm, BabyWare/ NEWare arming, etc.) (Data x 1 sec.; Default: 060)	[3130]	__/_/___	[3230]	__/_/___	[3330]	__/_/___	[3430]	__/_/___	[3530]	__/_/___	[3630]	__/_/___	[3730]	__/_/___	[3830]	__/_/___

No Movement Schedule

Worksheet 46: No Movement Schedule Settings

Section	Partition #	Interval	Start Time (From)	End Time (To)	Days of the Week (Turn ON or OFF)							
					S	M	T	W	T	F	S	H
[3131]	1	Schedule A	___ : ___	___ : ___	1	2	3	4	5	6	7	8
		Schedule B	___ : ___	___ : ___	1	2	3	4	5	6	7	8
[3231]	2	Schedule A	___ : ___	___ : ___	1	2	3	4	5	6	7	8
		Schedule B	___ : ___	___ : ___	1	2	3	4	5	6	7	8
[3331]	3	Schedule A	___ : ___	___ : ___	1	2	3	4	5	6	7	8
		Schedule B	___ : ___	___ : ___	1	2	3	4	5	6	7	8
[3431]	4	Schedule A	___ : ___	___ : ___	1	2	3	4	5	6	7	8
		Schedule B	___ : ___	___ : ___	1	2	3	4	5	6	7	8
[3531]	5	Schedule A	___ : ___	___ : ___	1	2	3	4	5	6	7	8
		Schedule B	___ : ___	___ : ___	1	2	3	4	5	6	7	8
[3631]	6	Schedule A	___ : ___	___ : ___	1	2	3	4	5	6	7	8
		Schedule B	___ : ___	___ : ___	1	2	3	4	5	6	7	8
[3731]	7	Schedule A	___ : ___	___ : ___	1	2	3	4	5	6	7	8
		Schedule B	___ : ___	___ : ___	1	2	3	4	5	6	7	8
[3831]	8	Schedule A	___ : ___	___ : ___	1	2	3	4	5	6	7	8
		Schedule B	___ : ___	___ : ___	1	2	3	4	5	6	7	8

WARNING: The Start and End Time of a schedule cannot cross over into another day. For example, to program a shift from 10 PM to 6 AM the next morning, you must program the schedule as follows: Schedule A – start time: 22:00 and end time: 23:59; then program Schedule B – start time: 00:00 and end time: 06:00. The schedule will not be interrupted between 23:59 and 00:00.

Special and Trouble Report Codes

Use the following section to program the special and trouble report codes on your EVO system. Use *Worksheet 47 on page 56*, as well as *Worksheet 48 on page 57* to record your settings.

For Ademco Slow, Silent Knight Fast, Sescoc, or Ademco Express, key-in desired two-digit hex value from 00 to FF.

Ademco Format

- Use section [4034] (Special System Report Codes), [4035] (Special Arming/Disarming Report Codes), [4036] (Special Alarm Report Codes), and [4037] (Trouble/Trouble Restore Report Codes) to program a set of default Ademco report codes, using Table 55 on page 58.
- To program the remaining report codes or change certain defaults, access the individual sections and key-in the desired two-digit hex value, found in Table 59 on page 63.

SIA Format

- Use section [4034] (Special System Report Codes), [4035] (Special Arming/Disarming Report Codes), [4036] (Special Alarm Report Codes), and [4037] (Trouble/Trouble Restore Report Codes) to program a set of SIA report codes, using Table 55 on page 58.
- Codes that have not been set to default can be set as such manually, by entering FF in the appropriate section.
- To disable the reporting of an event, enter 00 in the appropriate section.

Special Report Codes

Worksheet 47: Special Report Code Settings

Type	Section	Data	Description
Special System Report Codes	[3900]	___/___	Power up after total power down
	[3901]	___/___	Software reset (watchdog)
	[3902]	___/___	Test report
	[3903]	___/___	Listen-in to follow (request to start session)
	[3904]	___/___	BabyWare login request (callback only)
	[3905]	___/___	BabyWare log off
	[3906]	___/___	Installer in
	[3907]	___/___	Installer out
	[3908]	___/___	Future use
	[3909]	___/___	Future use
Special Arming Report Codes	[3910]	___/___	Auto-arming
	[3911]	___/___	PC arming
	[3912]	___/___	Late to close (Auto-arming)
	[3913]	___/___	No movement
	[3914]	___/___	Partial arming
	[3915]	___/___	Quick arming
	[3916]	___/___	Early to close (refer to Worksheet 42 on page 49)
	[3917]	___/___	Late to close (refer to Worksheet 42 on page 49)
	[3918]	___/___	Remote arming (ADM2, LSN4)
	[3919]	___/___	Close delinquency

Type	Section	Data	Description
Special Disarming Report Codes	[3920]	___/___	Cancel auto-arm
	[3921]	___/___	Quick disarm
	[3922]	___/___	PC disarming
	[3923]	___/___	PC disarming after alarm
	[3924]	___/___	Cancel alarm
	[3925]	___/___	Future use
	[3926]	___/___	Early to open (refer to Worksheet 43 on page 50)
	[3927]	___/___	Late to open (refer to Worksheet 43 on page 50)
	[3928]	___/___	Remote disarming (ADM2, LSN4)
	[3929]	___/___	Future use
Special Alarm Report Codes	[3930]	___/___	Emergency panic
	[3931]	___/___	Auxiliary panic
	[3932]	___/___	Fire panic
	[3933]	___/___	Recent closing
	[3934]	___/___	Police code
	[3935]	___/___	Zone shutdown
	[3936]	___/___	Duress
	[3937]	___/___	Keypad lockout
	[3938]	___/___	Voice lockout
	[3939]	___/___	Future use

Trouble Report Codes

Worksheet 48: Trouble Report Code Settings

Type	Section	Data	Description
Trouble Report Codes	[3940]	___/___	Future use
	[3941]	___/___	AC failure
	[3942]	___/___	Battery failure
	[3943]	___/___	Auxiliary supply
	[3944]	___/___	Bell output (disconnected or overload)
	[3945]	___/___	Clock loss
	[3946]	___/___	Fire loop trouble
	[3947]	___/___	Future use
	[3948]	___/___	Future use
	[3949]	___/___	Future use
	[3950]	___/___	Combus fault
	[3951]	___/___	Module tamper
	[3952]	___/___	ROM check error
	[3953]	___/___	Module TLM
	[3954]	___/___	Module failure to communicate
	[3955]	___/___	Printer fault
	[3956]	___/___	Module AC failure
	[3957]	___/___	Module battery failure
	[3958]	___/___	Module auxiliary failure
	[3959]	___/___	Future use
	[3960]	___/___	Wireless transmitter battery low
	[3961]	___/___	Wireless transmitter supervision trouble
	[3962]	___/___	Future use
	[3963]	___/___	Future use
	[3964]	___/___	Future use
	[3965]	___/___	Phone number 1 fail to communicate
	[3966]	___/___	Phone number 2 fail to communicate
	[3967]	___/___	Phone number 3 fail to communicate
[3968]	___/___	Phone number 4 fail to communicate	
[3969]	___/___	Future use	

Type	Section	Data	Description
Trouble Restore Report Codes	[3970]	___/___	TLM1 restore
	[3971]	___/___	AC failure restore
	[3972]	___/___	Battery failure restore
	[3973]	___/___	Auxiliary supply restore
	[3974]	___/___	Bell output (reconnected or restored)
	[3975]	___/___	Clock loss restore
	[3976]	___/___	Fire loop trouble restore
	[3977]	___/___	Future use
	[3978]	___/___	Future use
	[3979]	___/___	Future use
	[3980]	___/___	Combus fault restore
	[3981]	___/___	Module tamper restore
	[3982]	___/___	ROM check error restore
	[3983]	___/___	Module TLM restore
	[3984]	___/___	Module failure to communicate restore
	[3985]	___/___	Printer fault restore
	[3986]	___/___	Module AC failure restore
	[3987]	___/___	Module battery failure restore
	[3988]	___/___	Module auxiliary failure restore
	[3989]	___/___	Future use
	[3990]	___/___	Wireless transmitter battery low restore
	[3991]	___/___	Wireless transmitter supervision trouble restore

Additional Settings and Modes

The following section provides information on various other settings and modes applicable to your EVO system.

Table 53: Description of Sections [4000] to [4006]

Section	Name	Description
[4000]	Display serial number of control panel and all modules connected to the combus	After entering section [4000], the keypad will display the eight-digit serial number of the control panel and firmware version. For Keypads K641R/K641LX/K641+ and K656: use the ▲ and ▼ keys to scroll through the serial number of each module connected to the combus. The firmware version of some modules will also be displayed.
[4001]	Module reset	Reset a module's programmed contents to its default settings, by entering its serial number.
[4002]	Locate/unlocate module	Locate a specific module (e.g., detector, zone expander, etc.) connected to the combus, by entering the module's serial number. The green <i>Locate</i> LED on the module will flash until the serial number is re-entered, or the appropriate <i>Tamper</i> or <i>Unlocate</i> switch is pressed on the module.
[4003]	Module programming mode	Enter the serial number of the module you wish to program.
[4004]	Module broadcast	Copy the contents of all programming sections from one module, to one or more modules of the same type. Enter the serial number of the source module, followed by the serial numbers of the modules you wish to program. To begin transferring data, press ACC on the K641R/K641LX/K641+ keypads, or ▲ on the K656 keypad.
	Label broadcast	Copy user, door, and partition labels from the control panel, to all keypads and printer modules connected to the combus. To transmit the labels, enter 0 0 in section [4004]. From the <i>Destination</i> screen, press ACC on the K641R/K641LX/K641+ keypads, or ▲ on the K656 keypad.
[4005]	Quick module scanning	After entering the section, the control panel will scan all addresses assigned to the modules. If any missing modules are detected (i.e., detector removed from the combus), the control panel will erase the module's serial number, thus removing the module from the control panel's memory.
[4006]	Module scanning	After entering the section, the control panel will scan all addresses on the combus. If any missing modules are detected (i.e., detector removed from the combus), the control panel will erase the module's serial number, thus removing the module from the control panel's memory. If new modules are detected, the serial number will be entered in the control panel's memory.

WARNING: The module and label broadcast features will only work when a module is broadcasting its data to a module, or to modules of the same type and model number.

Paradox PMC5 Memory Key

Table 54: Description of the Paradox PMC5 Memory Key Sections

Section	Description
[4010]	Download from the memory key to the control panel, except zone numbering and sections [0501] to [0532].
[4011]	Download from the memory key to the control panel, including zone numbering and sections [0501] to [0532].
[4012]	Download user labels from the memory key to the control panel.
[4013]	Download installer default (used when resetting from memory key to control panel).
[4020]	Copy the control panel sections to the memory key, except zone numbering and sections [0501] to [0532].
[4021]	Copy the control panel sections to the memory key, including zone numbering and sections [0501] to [0532].
[4022]	Copy the control panel user label to the memory key.
[4023]	Copy the control panel installer default to the memory key.

WARNING: When using the PMC3 Memory Key, sections [4010], [4011], [4020] and [4021] will not include the labels. When using a PMC4 or PMC5, use sections [4012] and [4022] to transfer labels.

Figure 4: The PMC5 Memory Key.



Downloading Content from Memory Key to Control Panel

To download content from the memory key to the control panel, proceed as follows:

1. Connect the memory key (PMC5) to the connector labeled **MEM KEY** on the control panel.
2. To download the contents of the memory key, except zone numbering and sections [0501] to [0532], enter programming mode, and then access section [4010]. Depending on the memory key, the labels may or may not be included.
3. To download the contents of the memory key, including zone numbering and sections [0501] to [0532], enter programming mode, and then access section [4011]. Depending on the memory key, the labels may or may not be included.
4. After the keypad emits a confirmation beep, remove the memory key.

Copy Content from Control Panel to Memory Key

To copy content from the control panel to the memory key, proceed as follows:

1. Connect the memory key (PMC5) to the connector labeled **MEM KEY** on the control panel. Ensure that the write-protect jumper on the memory key is ON.
2. To copy the contents to the memory key, except zone numbering and sections [0501] to [0532], enter programming mode, and then access section [4020]. Depending on the memory key, the labels may or may not be included.
3. To copy the contents to the memory key, including zone numbering and sections [0501] to [0532], enter section [4021]. Depending on the memory key, the labels may or may not be included.
4. After the keypad emits a confirmation beep, remove the memory key. Remove the memory key's jumper, so you do not accidentally overwrite its contents.

WARNING: When using the PMC3 Memory Key, sections [4010], [4011], [4020] and [4021] will not include the labels. When using a PMC4 or PMC5, use sections [4012] and [4022] to transfer labels.

Automatic Report Code Programming

When using contact ID or SIA Reporting formats (refer to *Worksheet 26 on page 44*), default report codes can be programmed automatically. After automatic defaults are set, they can be changed and the remaining report codes can be set manually.

Table 55: Description of the Automatic Report Codes

Section	Report Code	Description
[4030]	All report codes reset to 00	Resets all codes from sections [0201] - [0296], [0701] - [0832], [2001] - [2199], and [3900] - [3999], to 00; sections [4031] to [4037] reset all the report codes in the following sections, to their default values which appear in Table 58 on page 60
[4031]	All report codes reset to FF	[0201] to [0296], [0701] to [0832], [2001] to [2199], and [3900] to [3999]
[4032]	Zone alarm/alarm restore and zone tamper/tamper restore	[0201] to [0296]
[4033]	User/keyswitch arming and disarming	[0701] to [0832] and [2001] to [2199]
[4034]	Special report codes	[3900] to [3909]
[4035]	Special arming/disarming report codes	[3910] to [3929]
[4036]	Special alarm report codes	[3930] to [3939]
[4037]	Trouble and trouble restore report codes	[3940] to [3999]

Software Reset

To set specific software parameters back to their initial, default values, proceed as follows:

1. Enter programming mode (refer to *Entering Programming Mode on page 3* for details).
2. Enter section **[4049]** to unlock the software reset function.
3. Enter the four-digit section corresponding to the software reset you wish to perform.

If you want to reset more than one section, enter section **[4049]** to unlock the software reset function once again.

Table 56: Description of Software Reset Sections ([4040] to [4049])






Section	Description
[4040]	Entering this section will reset all programmable sections, from [0001] to [3999] , to their factory default values.
[4041]	Entering this section will reset the system master code to 123456.
[4042]	Entering this section will reset all zone programming, including sections [0961] to [0984] , to their default values.
[4043]	Entering this section will reset all access control sections, from [2201] to [2712] (excluding door labels), to their default values.
[4044]	Entering this section will reset all user code sections, from [1001] to [1999] and [2001] to [2199] , to their default values.
[4045]	Entering this section will reset programming of all dialer sections ([3051] to [3081]), VDMP3 sections ([3087] to [3098]), and control panel sections ([3020] to [3043] and [3900] to [3991]), to their default values.
[4046]	Entering this section will reset all partition sections, from [3101] to [3833] (excluding partition labels), to their default values.
[4047]	Entering this section will reset programming of all PGM sections ([0901] to [0959]) and all keyswitch sections ([0501] to [0632]), as well as all keyswitch arming/disarming report code sections ([0701] to [0832]), to their default values.
[4048]	Entering this section will clear all user labels, door labels, partition labels, module labels, and zone labels, from sections [0301] to [0396] .
[4049]	Entering this section will unlock software reset for sections [4040] to [4048] .

Installer Function Keys

To access the installer functions, press and hold **0**, enter the installer code, and then:

- For keypads K641R/K641LX/K641+ and K656: press the key indicated in *Table 57 on page 59*, that corresponds to the function you wish to activate.

Table 57: Description of Installer Functions for the K641R/K641LX/K641+ and K656 Keypads

Function	Description	K641R/ K641LX/ K641+	K656
Test report	Sends the <i>Test Report</i> report code programmed in section [3902] , to the monitoring station.	STAY	STAY
Call BabyWare software	Will dial the PC telephone number programmed in section [3010] , to initiate communication with a computer using the BabyWare software.	FORCE	SLEEP
Answer BabyWare software	Will force the control panel to answer a call made by the monitoring station, which is using the BabyWare software.	ARM	ARM
Cancel communication	Cancels all communication with the BabyWare software or with the monitoring station, until the next reportable event.	DISARM	OFF
Installer test mode	This mode allows you to perform walk tests, where the bell or siren will squawk to indicate opened zones. To exit, press MEM (for K641R/K641LX/ K641+) or  (for K656). Partitions cannot be armed if the installer test mode is enabled.	MEM	
Start module scan	The keypad will display the serial number of each module on the combus.	TRBL/TBL	
Combus voltmeter	To verify if the combus is supplying sufficient power, press and hold 0 , enter the installer code, and press either ACC or  , depending on the type of keypad. A reading of 12.3V or lower, at the panel's service keypad connector, indicates that the voltage is too low. The voltage may drop during the control panel battery test.	ACC	

Automatic Report Codes

Table 58: List of Automatic Report Codes

System Event	Default Contact ID Report Code (when using sections [4032] to [4037])		Default SIA Report Code (when using sections [4032] to [4037])	
Arming with master code (##)	3 4A1	Close by user	CL	Closing report
Arming with user code (##)	3 4A1	Close by user	CL	Closing report
Arming with keyswitch (##)	3 4A9	Keyswitch close	CS	Closing keyswitch
Auto arming	3 4A3	Automatic close	CA	Automatic closing
Arm with PC software	3 4A7	Remote arm/disarm	CQ	Remote arming
Late to close	3 452	Late to close	OT	Late to close
No movement	3 452	Late to close	NA	No movement arming
Partial arming	1 456	Partial arm	CG	Close area
Quick arming	3 4A8	Quick arm	CL	Closing report
Remote arm (voice)	3 4A7	Remote arm	CQ	Arm with voice module
Delinquency closing	1 654	System inactivity	CD	System inactivity
Disarm with master code (##)	1 4A1	Open by user	OP	Opening report
Disarm with user code (##)	1 4A1	Open by user	OP	Opening report
Disarm with keyswitch (##)	1 4A9	Keyswitch open	OS	Opening keyswitch
Disarm after alarm with master code (##)	1 4A1	Open by user	OP	Opening report
Disarm after alarm with user code (##)	1 4A1	Open by user	OP	Opening report
Disarm after alarm with keyswitch (##)	1 4A9	Keyswitch open	OS	Opening keyswitch
Cancel alarm with master code (##)	1 4A6	Cancel	OR	Disarm from alarm
Cancel alarm with user code (##)	1 4A6	Cancel	OR	Disarm from alarm
Cancel alarm with keyswitch (##)	1 4A6	Cancel	OS	Opening keyswitch
Auto arming cancellation	1 464	Auto-arm time extended	CE	Closing extend
Cancel alarm with PC software	1 4A6	Cancel	OR	Disarm from alarm
Voice disarm	1 4A7	Remote arm/disarm	OQ	Remote disarming
Disarm with PC software	1 4A7	Remote arm/disarm	OQ	Remote disarming
Disarm after an alarm with PC software	1 4A7	Remote arm/disarm	OQ	Remote disarming
Quick disarm	1 4A8	Quick disarm	OP	Opening report
Zone Bypassed (##)	1 57A	Zone bypass	UB	Untyped zone bypass
Zone alarm (##)	1 13A	Burglary alarm	BA	Burglary alarm
Fire alarm (##)	1 11A	Fire alarm	FA	Fire alarm
Early to Disarm by User	1 451	Early to open	OK	Early to open
Late to Disarm by User	1 452	Late to open	OJ	Late to open
Zone alarm restore (##)	3 13A	Burglary alarm restore	BH	Burglary alarm restore
Fire alarm restore (##)	3 11A	Fire alarm restore	FH	Fire alarm restore
24-hr Gas alarm (##)	1 13A	Burglary alarm	GA	Gas alarm
24-hr Heat alarm (##)	1 13A	Burglary alarm	KA	Heat alarm
24-hr Water alarm (##)	1 13A	Burglary alarm	WA	Water alarm
24-hr Freeze alarm (##)	1 13A	Burglary alarm	ZA	Freeze alarm
24-hr Gas alarm restore (##)	3 13A	Burglary alarm restore	GR	Gas alarm restore
24-hr Heat alarm restore (##)	3 13A	Burglary alarm restore	KR	Heat alarm restore
24-hr Water alarm restore (##)	3 13A	Burglary alarm restore	WR	Water alarm restore
24-hr Freeze alarm restore (##)	3 13A	Burglary alarm restore	ZR	Freeze alarm restore
Panic 1: emergency	1 12A	Panic alarm	PA	Panic alarm
Panic 2: medical	1 1AA	Medical alarm	MA	Medical alarm
Panic 3: fire	1 115	Pull station	FA	Fire alarm
Recent closing	3 459	Recent close	CR	Recent closing
Police code	1 139	Burglary alarm	BM	Burglary alarm
Global zone shutdown	1 574	Group bypass	CG	Close area
Duress alarm	1 121	Duress	HA	Hold-up alarm

Table 58: List of Automatic Report Codes (Continued)

System Event	Default Contact ID Report Code (when using sections [4032] to [4037])		Default SIA Report Code (when using sections [4032] to [4037])	
Zone shutdown (##)	1 57A	Zone bypass	UB	Untyped zone bypass
Zone tampered (##)	1 144	Sensor tamper	TA	Tamper alarm
Zone tamper restore (##)	3 144	Sensor tamper restore	TR	Tamper restoral
Keypad lockout	1 421	Access denied	JA	User code tamper
AC failure	1 3A1	AC loss	AT	AC trouble
Battery failure	1 3A9	Battery test failure	YT	System battery trouble
Auxiliary supply trouble	1 3AA	System trouble	YP	Power supply trouble
Bell output current limit	1 321	Bell 1	YA	Bell fault
Bell absent	1 321	Bell 1	YA	Bell fault
Clock lost	1 626	Time/date inaccurate	JT	Time changed
Fire loop trouble	1 373	Fire trouble	FT	Fire trouble
TLM trouble restore	3 351	Telco 1 fault restore	LR	Phone line restoral
AC failure restore	3 3A1	AC loss restore	AR	AC restoral
Battery failure restore	3 3A9	Battery test restore	YR	System battery restoral
Auxiliary supply trouble restore	3 3AA	System trouble restore	YQ	Power supply restored
Bell output current limit restore	3 321	Bell 1 restore	YH	Bell restored
Bell absent restore	3 321	Bell 1 restore	YH	Bell restored
Clock programmed	3 625	Time/date reset	JT	Time changed
Fire loop trouble restore	3 373	Fire trouble restore	FJ	Fire trouble restore
Combus fault	1 333	Expansion module failure	ET	Expansion trouble
Module tamper	1 145	Expansion module tamper	TA	Tamper alarm
Module ROM_RAM_error	1 3A4	ROM checksum bad	YF	Parameter checksum fail
Module TLM trouble	1 352	Telco 2 fault	LT	Phone line trouble
Module fail to communicate to monitoring station	1 354	Fail to communicate	YC	Communication fails
Printer fault	1 336	Local printer failure	VT	Printer trouble
Module AC failure	1 3A1	AC loss	AT	AC trouble
Module battery failure	1 3A9	Battery test failure	YT	System battery trouble
Module auxiliary supply trouble	1 3AA	System trouble	YP	Power supply trouble
Combus fault restore	3 333	Expansion module failure restore	ER	Expansion restoral
Module tamper restore	3 145	Expansion module tamper restore	TR	Tamper restoral
Module ROM_RAM_error restore	3 3A4	ROM checksum bad restore	YG	Parameter changed
Module TLM restore	3 352	Telco 2 fault restore	LR	Phone line restoral
Early to arm by user	3 451	Early to close	CK	Early to close
Late to arm by user	3 452	Late to close	CJ	Late to close
Zone excluded on Force arming	1 57A	Zone bypass	XW	Zone forced
Zone went back to arm status	3 57A	Zone bypass restore	UU	Zone included
Printer fault restore	3 336	Local printer failure restore	VR	Printer restore
Module AC restore	3 3A1	AC loss restore	AR	AC restoral
Module battery restore	3 3A9	Battery test failure restore	YR	System battery restoral
Module auxiliary supply restore	3 3AA	System trouble restore	YQ	Power supply restored
Fail to communicate with monitoring station	1 354	Fail to communicate	YC	Communication fails
Module RF low battery	1 384	RF transmitter low battery	XT	Transmitter battery trouble
Module RF supervision trouble	1 381	Loss of supervision - RF	US	Untype zone supervision
Module RF battery restore	3 384	RF transmitter battery restore	XR	Transmitter battery restoral
Module RF supervision restore	3 381	Supervision restore - RF	UR	Untyped zone restoral
Cold start	1 3A8	System shutdown	RR	Power up
Warm start	1 3A5	System reset	YW	Watchdog reset
Test report engaged	1 6A2	Periodic test report	TX	Test report
Listen-in request	1 606	Listen-in to follow	LF	Listen-in to follow

Table 58: List of Automatic Report Codes (Continued)

System Event	Default Contact ID Report Code (when using sections [4032] to [4037])		Default SIA Report Code (when using sections [4032] to [4037])	
BabyWare login request	1 411	Call back Request	RB	Remote program begin
PC software communication finished	1 412	Successful - download access	RS	Remote program success
Installer on site	1 627	Program mode entry	LB	Local program
Installer programming finished	1 628	Program mode exit	LS	Local program success
Module fail to communicate restore	3 354	Fail to communicate restore	YK	Communication restore
Missing PCS module	1 552	Radio transmitter disabled	YS	Communication trouble
GSM RF jam	1 552	Radio transmitter disabled	YS	Communication trouble
GSM no service	1 552	Radio transmitter disabled	YS	Communication trouble
GPRS FTC IPR512	1 354	Fail to communicate	YA	Communication fails
Missing IP module	1 552	Radio transmitter disabled	YS	Communication trouble
IP no service	1 552	Radio transmitter disabled	YS	Communication trouble
IP Module FTC IPR512	1 354	Fail to communicate	YA	Communication fails
Missing PCS module restore	3 552	Radio transmitter restore	YK	Communication restore
GSM RF jam restore	3 552	Radio transmitter restore	YK	Communication restore
GPRS FTC IPR512 restore	3 354	Fail to communicate restore	YK	Communication restore
Missing IP module restore	3 552	Radio transmitter restore	YK	Communication restore
IP no service restore	3 552	Radio transmitter restore	YK	Communication restore
IP Module FTC IPR512 restore	3 354	Fail to communicate restore	YK	Communication restore

Contact ID Report Codes

If using the Ademco contact ID format, enter the two-digit hexadecimal value (under the column heading *Value* in Table 59 on page 63) to program the desired report codes into sections [0201] to [0296], [0701] to [0832], [2001] to [2199], and [3900] to [3999].

Table 59: List of Ademco Contact ID Report Codes

Type	CID #	Reporting Code	Value
Medical Alarms (100)	100	Medical alarm	01
	101	Personal emergency	02
	102	Fail to report in	03
Fire Alarms (110)	110	Fire Alarm	04
	111	Smoke	05
	112	Combustion	06
	113	Water Flow	07
	114	Heat	08
	115	Pull Station	09
	116	Duct	0A
	117	Flame	0B
	118	Near Alarm	0C
Panic Alarms (120)	120	Panic alarm	0D
	121	Duress	0E
	122	Silent	0F
	123	Audible	10
	124	Duress - access granted	11
Burglar Alarms (130)	125	Duress - egress granted	12
	130	Burglary	13
	131	Perimeter	14
	132	Interior	15
	133	24-hour	16
	134	Entry/exit	17
	135	Day/night	18
	136	Outdoor	19
	137	Tamper	1A
	138	Near alarm	1B
General Alarms (140)	139	Intrusion verifier	1C
	140	General alarm	1D
	141	Polling loop open	1E
	142	Polling loop short	1F
	143	Extension module failure	20
	144	Sensor tamper	21
	145	Expansion module tamper	22
	146	Silent burglary	23
24-hour Non-burglary (150 & 160)	147	Sensor supervision failure	24
	150	24-hour non-burglary	25
	151	Gas detected	26
	152	Refrigeration	27
	153	Loss of heat	28
	154	Water leakage	29
	155	Foil break	2A
	156	Day trouble	2B
	157	Low bottled gas level	2C
	158	High temperature	2D

Table 59: List of Ademco Contact ID Report Codes

Type	CID #	Reporting Code	Value
24-hour Non-burglary (150 & 160) (cont.)	159	Low temperature	2E
	161	Loss of air flow	2F
	162	Carbon monoxide detected	30
	163	Tank level	31
Fire Supervisory (200 & 210)	200	Fire supervisory	32
	201	Low water pressure	33
	202	Low CO2	34
	203	Gate valve sensor	35
	204	Low water level	36
	205	Pump activated	37
	206	Pump failure	38
	System Troubles (300 & 310)	300	System trouble
301		AC loss	3A
302		Low system battery	3B
303		RAM checksum bad	3C
304		ROM checksum bad	3D
305		System reset	3E
306		Panel program changed	3F
307		Self-test failure	40
308		System shutdown	41
309		Battery test failure	42
310		Ground fault	43
311		Battery missing/dead	44
312		Power supply over current	45
Sounder/Relay Troubles (320)	313	Engineer reset	46
	320	Sounder relay	47
	321	Bell 1	48
	322	Bell 2	49
	323	Alarm relay	4A
	324	Trouble relay	4B
	325	Reversing relay	4C
326	Notification appliance chk. #3	4D	
327	Notification appliance chk. #4	4E	

Table 59: List of Ademco Contact ID Report Codes

Type	CID #	Reporting Code	Value	
System Peripheral Troubles (330 & 340)	330	System peripheral	4F	
	331	Polling loop open	50	
	332	Polling loop short	51	
	333	Expansion module failure	52	
	334	Repeater failure	53	
	335	Local printer paper out	54	
	336	Local printer failure	55	
	337	Exp. module DC low	56	
	338	Exp. module low batt	57	
	339	Exp. module reset	58	
	341	Exp. module tamper	59	
	342	Exp. module AC lost	5A	
	343	Exp. module self-test fail	5B	
	344	RF receiver jam detected	5C	
	Communication Troubles (350 & 360)	350	Communication	5D
		351	Telco fault 1	5E
		352	Telco fault 2	5F
353		Long range radio	60	
354		Fail to communicate	61	
355		Loss of radio supervision	62	
356		Loss of central polling	63	
357		Long range radio VSWR problem	64	
Protection Loop Troubles (370)		370	Protection loop	65
		371	Protection loop open	66
	372	Protection loop short	67	
	373	Fire trouble	68	
	374	Exit error alarm	69	
	375	Panic zone trouble	6A	
	376	Hold-up zone trouble	6B	
	377	Swinger trouble	6C	
	378	Cross-zone trouble	6D	
	Sensor Troubles (380)	380	Sensor trouble	6E
381		Loss of supervision - RF	6F	
382		Loss of supervision - RPM	70	
383		Sensor tamper	71	
384		RF transmitter low battery	72	
385		Smoke detector hi sensitivity	73	
386		Smoke detector low sensitivity	74	
387		Intrusion detector hi sensitivity	75	
388		Intrusion detector low sensitivity	76	
389		Sensor self-test failure	77	
391		Sensor watch trouble	78	
392		Drift compensation error	79	
393		Maintenance alert	7A	

Table 59: List of Ademco Contact ID Report Codes

Type	CID #	Reporting Code	Value
Open/Close (400)	400	Open/close	7B
	401	Open/close by user	7C
	402	Group open/close	7D
	403	Automatic open/close	7E
	406	Cancel	7F
	407	Remote arm/disarm	80
	408	Quick arm	81
	409	Keyswitch open/close	82
	Remote Access (410)	411	Callback request made
412		Successful - download access	84
413		Unsuccessful access	85
414		System shutdown	86
415		Dialer shutdown	87
416		Successful upload	88
Access Control (420)	421	Access denied	89
	422	Access report by user	8A
	423	Forced access	8B
	424	Egress denied	8C
	425	Egress granted	8D
	426	Access door propped open	8E
	427	Access point door status monitor trouble	8F
	428	Access point request to exit	90
	429	Access program mode entry	91
	430	Access program mode exit	92
	431	Access threat level change	93
	432	Access relay/trigger fail	94
	433	Access RTE shunt	95
	434	Access DSM shunt	96
	441	Armed stay	97
	442	Keyswitch armed stay	98
Special Troubles (450 & 460)	450	Exception open/close	99
	451	Early open/close	9A
	452	Late open/close	9B
	453	Failed to open	9C
	454	Failed to close	9D
	455	Auto-arm failed	9E
	456	Partial arm	9F
	457	User exit error	A0
	458	User on premises	A1
	459	Recent close	A2
	461	Wrong code entry	A3
	462	Legal code entry	A4
	463	Re-arm after alarm	A5
	464	Auto-arm time extended	A6
465	Panic alarm reset	A7	
466	Service ON/OFF premises	A8	

Table 59: List of Ademco Contact ID Report Codes

Type	CID #	Reporting Code	Value
Sounder Relay Disables (520)	520	Sounder/relay disabled	A9
	521	Bell 1 disable	AA
	522	Bell 2 disable	AB
	523	Alarm relay disable	AC
	524	Trouble relay disable	AD
	525	Reversing relay disable	AE
	526	Notification appliance chk. #3 disabled	AF
	527	Notification appliance chk. #4 disabled	B0
	531	Module added	B1
	532	Module removed	B2
Communication Disabled (550 & 560)	551	Dialer disabled	B3
	552	Radio transmitter disabled	B4
Bypasses (570)	570	Zone bypass	B5
	571	Fire bypass	B6
	572	24-hour zone bypass	B7
	573	Burglary bypass	B8
	574	Group bypass	B9
	575	Swinger bypass	BA
	576	Access zone shunt	BB
577	Access point bypass	BC	

Table 59: List of Ademco Contact ID Report Codes

Type	CID #	Reporting Code	Value
Test/Misc (600)	601	Manual trigger test	BD
	602	Periodic test report	BE
	603	Periodic RF transmission	BF
	604	Fire test	C0
	605	Status report to follow	C1
	606	Listen-in to follow	C2
	607	Walk test mode	C3
	608	Periodic test - system trouble present	C4
	609	Video xmitter active	C5
	611	Point test Ok	C6
	612	Point not tested	C7
	613	Intrusion zone walk tested	C8
	614	Fire zone walk tested	C9
	615	Panic zone walk tested	CA
	616	Service request	CB
	621	Event log reset	CC
	622	Event log 50% full	CD
	623	Event log 90% full	CE
	624	Event log overflow	CF
	625	Time/date reset	D0
	626	Time/date inaccurate	D1
	627	Program mode entry	D2
	628	Program mode exit	D3
	629	32-hour event log marker	D4
	630	Schedule change	D5
	631	Exception schedule change	D6
	632	Access schedule change	D7
	654	System inactivity	D8

Keypad Programming

Use the following section to program keypads on your EVO system. Use *Worksheet 49 on page 66 to Worksheet 51 on page 66* to record your settings.

K641R/K641LX/K641+ and K656

The keypad's serial number can be found on the keypad's PC board. It can also be viewed by pressing and holding **0**, entering the installer code, and then accessing section **[0000]**. The keypad's firmware version is also displayed in this section.

Figure 5: The K641R/K641LX/K641+ and K656 Keypads.



Table 60: Description of Sections [001] to [006] for the K641R/K641LX/K641+ and K656 Keypads

Section	Option	Description	OFF	ON	Section	Option	Description	OFF	ON
Section [001] Keypad Partition Assignment	1	Partition 1	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled	Section [002] Assigning Doors to Partitions	1	Door assigned to partition 1	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled
	2	Partition 2	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled		2	Door assigned to partition 2	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled
	3	Partition 3	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled		3	Door assigned to partition 3	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled
	4	Partition 4	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled		4	Door assigned to partition 4	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled
	5	Partition 5	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled		5	Door assigned to partition 5	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled
	6	Partition 6	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled		6	Door assigned to partition 6	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled
	7	Partition 7	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled		7	Door assigned to partition 7	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled
	8	Partition 8	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled		8	Door assigned to partition 8	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled
Section [003] General Options 1	1	Display code entry	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled	Section [004] General Options 2	1	Mute keypad	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled
	2	Display exit delay	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled		2	Exit delay beep	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled
	3	Display entry delay	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled		3	Door left open pre-arm*	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled
	4	Confidential mode (not for UL installations)	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled		4	Chime on zone closure	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled
	5	Exit confidential mode	<input checked="" type="checkbox"/> Enter code	<input type="checkbox"/> Press button		5	Door left open alarm feedback*	<input type="checkbox"/> Silent	<input checked="" type="checkbox"/> Audible
	6	Future use	<input type="checkbox"/> -	<input type="checkbox"/> -		6	Door left open alarm follows*	<input checked="" type="checkbox"/> Alarm restore	<input type="checkbox"/> Beep timer
	7	Future use	<input type="checkbox"/> -	<input type="checkbox"/> -		7	Door forced alarm*	<input type="checkbox"/> Silent	<input checked="" type="checkbox"/> Audible
	8	Time display option	<input checked="" type="checkbox"/> yy/mm/dd	<input type="checkbox"/> dd/mm/yy		8	Door forced alarm*	<input checked="" type="checkbox"/> Alarm restore	<input type="checkbox"/> Beep timer
Section [005] Beep on Trouble	1	System and clock trouble beep	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled	Section [006] PGM and Tamper Options	1	PGM state**	<input checked="" type="checkbox"/> N.O.	<input type="checkbox"/> N.C.
	2	Communicator trouble beep	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled		2	PGM deactivation mode**	<input checked="" type="checkbox"/> Deactivation event	<input type="checkbox"/> PGM timer
	3	Module and combus trouble beep	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled		3	PGM base time	<input checked="" type="checkbox"/> 1 sec.	<input type="checkbox"/> 1 min.
	4	All zone trouble beep	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled		4	PGM Override**	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled
	5	Future use	<input type="checkbox"/> -	<input type="checkbox"/> -		5	Keypad tamper	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled
	6	Future use	<input type="checkbox"/> -	<input type="checkbox"/> -		6	Future use	<input type="checkbox"/> -	<input type="checkbox"/> -
	7	Time format	<input checked="" type="checkbox"/> 24 hr. clock	<input type="checkbox"/> 12 hr. clock		7	Future use	<input type="checkbox"/> -	<input type="checkbox"/> -
	8	Audible feedback on access request	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled		8	Future use	<input type="checkbox"/> -	<input type="checkbox"/> -
Section [006] General Options 3 (K641R only)	1	Card activates door unlocked schedule	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled					
	2	Door left open alarm	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled					
	3	Door forced open alarm	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled					
	4	Future use	<input type="checkbox"/> -	<input type="checkbox"/> -					
	5	Keypad tamper	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled					
	6	Re-lock door	<input checked="" type="checkbox"/> After opening	<input type="checkbox"/> After closing					
	7	Future use	<input type="checkbox"/> -	<input type="checkbox"/> -					
	8	Unlock on REX	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled					

▲ = Default
 * Section/option is only available on K641R.
 ** Section/option is only available on K641LX, K641+, and K656.

Worksheet 49: Keypad Settings for Sections [007] to [013]

Section	Data	Description	Default Setting
[007]	___/___/___ (005-255 sec.)	Confidential mode timer	120
[008]	___/___/___ (000-255; refer to option 3 in section [006])	PGM timer	005
[008]	___/___/___ (000-255 sec.)	Door unlocked period*	005
[009]	___/___/___ (005-255 sec. added to section [008])	Door unlocked period extension*	015
[010]	___/___/___ (000-255 sec.)	Door left open interval*	060
[011]	___/___/___ (000-255 sec.)	Door left open pre-alarm timer*	015
[012]	___/___/___ (000-255 sec.)	Beep timer for door left open alarm*	005
[013]	___/___/___ (000-255 sec.)	Beep timer for door forced open alarm*	005

* Section/option is only available on **K641R**.

Worksheet 50: Door Unlocked Schedule (K641R only)

Section	Interval	Start Time (From)	End Time (To)	Days of the Week (Turn ON or OFF)							
				S	M	T	W	T	F	S	H
[017]	Schedule A	___ : ___	___ : ___	1	2	3	4	5	6	7	8
	Schedule B	___ : ___	___ : ___	1	2	3	4	5	6	7	8

Table 61: Beeping Assignment Options

Section	Option	Description	OFF		ON	
Section [018] Beeping Assignment	1	Partition 1	<input type="checkbox"/>	Mute	▲	Audible
	2	Partition 2	<input type="checkbox"/>	Mute	▲	Audible
	3	Partition 3	<input type="checkbox"/>	Mute	▲	Audible
	4	Partition 4	<input type="checkbox"/>	Mute	▲	Audible
	5	Partition 5	<input type="checkbox"/>	Mute	▲	Audible
	6	Partition 6	<input type="checkbox"/>	Mute	▲	Audible
	7	Partition 7	<input type="checkbox"/>	Mute	▲	Audible
	8	Partition 8	<input type="checkbox"/>	Mute	▲	Audible

▲ = Default

Worksheet 51: PGM Activation and Deactivation

Description	Event Group		Feature Group		Start #		End #	
	Section	Data	Section	Data	Section	Data	Section	Data
PGM activation	[009]	___/___/___	[010]	___/___/___	[011]	___/___/___	[012]	___/___/___
PGM deactivation	[013]	___/___/___	[014]	___/___/___	[015]	___/___/___	[016]	___/___/___

WARNING: All event groups, except groups 064 to 067, can be used to program the module's PGM. With the K641LX, all event groups can be used to program the module's PGM except group 067. Refer to *Programmable Outputs* on page 21, for details.

Table 62: Testing Keypad's PGM Output

Section	Description
[020]	The keypad's PGM output will be activated for 8 seconds

Worksheet 52: Keypad options 2

[401]	___/___	00 = Follow panel option 01 = EOL Off 02 = EOL On	EOL Option	00
-------	---------	---	------------	-----------

TM50 and TM70

The keypad's serial number can be found on the keypad's backplate. It can also be viewed by pressing Menu >Advanced > Product Info.

Figure 6: The TM50 and TM70 Keypads



Table 63: Description of Sections [001] to [003] for the TM50 and TM70 Keypads

Section	Option	Description	OFF		ON	
Section [001] Keypad Partition Assignment	1	Partition 1	<input type="checkbox"/>	Disabled	<input checked="" type="checkbox"/>	Enabled
	2	Partition 2	<input type="checkbox"/>	Disabled	<input checked="" type="checkbox"/>	Enabled
	3	Partition 3	<input type="checkbox"/>	Disabled	<input checked="" type="checkbox"/>	Enabled
	4	Partition 4	<input type="checkbox"/>	Disabled	<input checked="" type="checkbox"/>	Enabled
	5	Partition 5	<input type="checkbox"/>	Disabled	<input checked="" type="checkbox"/>	Enabled
	6	Partition 6	<input type="checkbox"/>	Disabled	<input checked="" type="checkbox"/>	Enabled
	7	Partition 7	<input type="checkbox"/>	Disabled	<input checked="" type="checkbox"/>	Enabled
	8	Partition 8	<input type="checkbox"/>	Disabled	<input checked="" type="checkbox"/>	Enabled
Section [003] Trouble Warning Beep and Time/Date Display	1	System clock trouble	<input checked="" type="checkbox"/>	Disabled	<input type="checkbox"/>	Enabled
	2	Communication trouble	<input type="checkbox"/>	Disabled	<input checked="" type="checkbox"/>	Enabled
	3	Module trouble	<input checked="" type="checkbox"/>	Disabled	<input type="checkbox"/>	Enabled
	4	Zone trouble	<input checked="" type="checkbox"/>	Disabled	<input type="checkbox"/>	Enabled
	5	Future use	<input checked="" type="checkbox"/>	-	<input type="checkbox"/>	-
	6	Future use	<input checked="" type="checkbox"/>	-	<input type="checkbox"/>	-
	7	Future use	<input checked="" type="checkbox"/>	-	<input type="checkbox"/>	-
	8	Future use	<input checked="" type="checkbox"/>	-	<input type="checkbox"/>	-

Section	Option	Description	OFF		ON	
Section [002] Keypad Options	1	Display user code on enter code screen	<input checked="" type="checkbox"/>	Disabled	<input type="checkbox"/>	Enabled
	2	Display exit delay	<input type="checkbox"/>	Disabled	<input checked="" type="checkbox"/>	Enabled
	3	Display entry delay	<input checked="" type="checkbox"/>	Disabled	<input checked="" type="checkbox"/>	Enabled
	4	Use confidential mode	<input checked="" type="checkbox"/>	Disabled	<input type="checkbox"/>	Enabled
	5	No code needed to exit confidential mode	<input checked="" type="checkbox"/>	Disabled	<input type="checkbox"/>	Enabled
	6	Beep on exit delay	<input type="checkbox"/>	Disabled	<input checked="" type="checkbox"/>	Enabled
	7	Off = Temperature input (automatically broadcasts) On = Zone input	<input type="checkbox"/>	Disabled	<input checked="" type="checkbox"/>	Enabled
	8	Keypad Tamper	<input type="checkbox"/>	Disabled	<input checked="" type="checkbox"/>	Enabled

Worksheet 53: TM50/TM70 Keypad Settings for Sections [004] to [005]

Section	Data	Description	Default Setting
[004]	___/___/___ (005-255 sec.)	Confidential mode timer (TM50/TM70 only)	120
[005]	___/___/___/___/___/___	6-digit serial number (of broadcasting TM50/TM70)	-
[401]	___/___	00 = Follow panel option 01 = EOL Off 02 = EOL On EOL Option	00

* If option [7] in section [002] is enabled, display the outdoor temperature from the keypad serial number entered in [005]. Will automatically display the serial number of the first keypad set to broadcast, or enter a serial number manually.

Note: Sections [201] to [992] apply to the K641LX only.

Wireless Receiver Options

Table 64: Wireless Receiver Options

Section	Option	Description	OFF		ON	
Section [021] Wireless Receiver Options	1	Future use	<input type="checkbox"/>	-	<input type="checkbox"/>	-
	2	Check-in supervision	▲	Disabled	<input type="checkbox"/>	Enabled
	3	Check-in supervision time interval	▲	24 hours	<input type="checkbox"/>	80 min.
	4	RF jamming supervision	▲	Disabled	<input type="checkbox"/>	Enabled
	5	Future use	<input type="checkbox"/>	-	<input type="checkbox"/>	-
	6	Future use	<input type="checkbox"/>	-	<input type="checkbox"/>	-
	7	Future use	<input type="checkbox"/>	-	<input type="checkbox"/>	-
	8	Transmitter tamper signal	▲	Ignores tamper signal	<input type="checkbox"/>	Reports tamper signal

▲ = Default

Remote Control Options

Table 65: Remote Control Options

Section	Option	Description	OFF		ON	
Section [022] Remote Control Options	1	REM2 visual and auditory feedback	<input type="checkbox"/>	REM2 v2.00 and lower	▲	REM2 v2.01 and higher
	2	Future use	<input type="checkbox"/>	-	<input type="checkbox"/>	-
	3	Future use	<input type="checkbox"/>	-	<input type="checkbox"/>	-
	4	Future use	<input type="checkbox"/>	-	<input type="checkbox"/>	-
	5	Future use	<input type="checkbox"/>	-	<input type="checkbox"/>	-
	6	Future use	<input type="checkbox"/>	-	<input type="checkbox"/>	-
	7	Future use	<input type="checkbox"/>	-	<input type="checkbox"/>	-
	8	Future use	<input type="checkbox"/>	-	<input type="checkbox"/>	-

▲ = Default

Viewing Serial Numbers

Table 66: Viewing Serial Numbers

Section	Description
[030]	Press and hold the transmitter's anti-tamper switch to view the 6-digit serial number.

Wireless Zone Assignment

Use the following section to program the wireless zones on your EVO panel. Use *Worksheet 54* on page 68 to record your settings.

Worksheet 54: Wireless Zones

Section	Zone #	Serial #	Section	Zone #	Serial #	Section	Zone #	Serial #
[101]	1	___/___/___/___/___/___	[112]	12	___/___/___/___/___/___	[123]	23	___/___/___/___/___/___
[102]	2	___/___/___/___/___/___	[113]	13	___/___/___/___/___/___	[124]	24	___/___/___/___/___/___
[103]	3	___/___/___/___/___/___	[114]	14	___/___/___/___/___/___	[125]	25	___/___/___/___/___/___
[104]	4	___/___/___/___/___/___	[115]	15	___/___/___/___/___/___	[126]	26	___/___/___/___/___/___
[105]	5	___/___/___/___/___/___	[116]	16	___/___/___/___/___/___	[127]	27	___/___/___/___/___/___
[106]	6	___/___/___/___/___/___	[117]	17	___/___/___/___/___/___	[128]	28	___/___/___/___/___/___
[107]	7	___/___/___/___/___/___	[118]	18	___/___/___/___/___/___	[129]	29	___/___/___/___/___/___
[108]	8	___/___/___/___/___/___	[119]	19	___/___/___/___/___/___	[130]	30	___/___/___/___/___/___
[109]	9	___/___/___/___/___/___	[120]	20	___/___/___/___/___/___	[131]	31	___/___/___/___/___/___
[110]	10	___/___/___/___/___/___	[121]	21	___/___/___/___/___/___	[132]	32	___/___/___/___/___/___
[111]	11	___/___/___/___/___/___	[122]	22	___/___/___/___/___/___			

NOTE: When assigning wireless zones, enter the serial number or press **TAMPER/LEARN**; for the 2WPGM, remove and re-install Jumper 2 (JP2). To delete the serial number, enter **000000**.

Wireless Transmitter Signal Strength

The signal strength test for wireless transmitters is performed in sections [601] to [632]; these sections represent wireless zones 1 to 32, respectively. To view the signal strength of your various wireless devices, proceed as follows:

1. Enter the zone's respective section (e.g., for zone 1, enter section [601]).
2. For all wireless transmitters except 2WPGM: Press the transmitter's anti-tamper switch.
For the 2WPGM: Remove and re-install Jumper 2 (JP2).

Note the number of beeps which are emitted. As shown in *Table 67 on page 69*, the number of beeps correspond to a preset signal strength range.

Table 67: Signal strength Indicator for Wireless Transmitters

Number of Beeps	Signal Strength	Result
4 short beeps	4 to 10	Average to strong signal
1 long beep	3 or less	Weak signal (relocate)

NOTE: The visual representation of a transmitter's signal strength is dependent on the type of keypad. For LED keypads, zones 1 through 10 will illuminate, depending on the signal strength. For instance, a signal strength of 8 will result in zones 1 through 8 to illuminate. For LCD keypads, a ten-level progress bar composed of arrows will appear, followed by the numeric value. For a signal strength of 8, eight arrows will appear, followed by the number 8.

Current Battery Life

The current battery life for wireless transmitters is viewed in sections [701] to [732]; these sections represent wireless zones 1 to 32, respectively. To test the wireless transmitter's strength of your various wireless devices, proceed as follows:

1. Enter the zone's respective section (e.g., for zone 1, enter section [701]).
2. The current battery life of the wireless transmitter is shown in weeks (e.g., 004= 4 weeks).

Previous Battery Life

The previous battery life for wireless transmitters is viewed in sections [801] to [832]; these sections represent wireless zones 1 to 32, respectively. To view the wireless transmitter's previous battery life, proceed as follows:

1. Enter the zone's respective section (e.g., for zone 1, enter section [801]).
2. The previous battery life of the wireless transmitter is shown in weeks (e.g., 004= 4 weeks).

Wireless PGM Signal Strength

The signal strength for wireless PGMs is visible in sections [671] to [678]; these sections represent PGMs 1 to 8, respectively. To view the signal strength, proceed as follows:

1. Enter the wireless PGM's respective section (e.g., for PGM 1, enter section [671]).
2. Press the PGM's **LEARN/TAMPER** switch or remove and re-install Jumper 2 (JP2). As shown in *Table 68 on page 69*, the number of beeps correspond to a preset signal strength range.

Table 68: Signal Strength Indicator for Wireless PGMs

Number of Beeps	Signal Strength	Result
4 short beeps	4 to 10	Average to strong signal
1 long beep	3 or less	Weak signal (relocate)

Wireless 2WPGM Serial Numbers

Use *Worksheet 55 on page 69* to record your settings for 2WPGM serial numbers. To delete a wireless 2WPGM, enter **000000** while in the PGM's respective section. For automatic assignment, remove and re-install the 2WPGM's Jumper 2 (JP2), while in the 2WPGM's respective section.

Worksheet 55: 2WPGM Serial Numbers

Section	2WPGM #	Wireless 2WPGM Serial Number
[901]	2WPGM 1	__/_/_/_/_/_/_/_
[902]	2WPGM 2	__/_/_/_/_/_/_/_
[903]	2WPGM 3	__/_/_/_/_/_/_/_
[904]	2WPGM 4	__/_/_/_/_/_/_/_
[905]	2WPGM 5	__/_/_/_/_/_/_/_
[906]	2WPGM 6	__/_/_/_/_/_/_/_
[907]	2WPGM 7	__/_/_/_/_/_/_/_
[908]	2WPGM 8	__/_/_/_/_/_/_/_

Wireless 2WPGM Activation/Deactivation Events

Use *Worksheet 56 on page 70* to record your settings for the 2WPGM activation/deactivation events.

Worksheet 56: 2WPGM Activation/Deactivation Events

	Section	2WPGM	Event Group	Section	Feature Group	Section	Start #	Section	End #
2WPGM Activation	[910]	2WPGM 1	___/___/___	[911]	___/___/___	[912]	___/___/___	[913]	___/___/___
	[920]	2WPGM 2	___/___/___	[921]	___/___/___	[922]	___/___/___	[923]	___/___/___
	[930]	2WPGM 3	___/___/___	[931]	___/___/___	[932]	___/___/___	[933]	___/___/___
	[940]	2WPGM 4	___/___/___	[941]	___/___/___	[942]	___/___/___	[943]	___/___/___
	[950]	2WPGM 5	___/___/___	[951]	___/___/___	[952]	___/___/___	[953]	___/___/___
	[960]	2WPGM 6	___/___/___	[961]	___/___/___	[962]	___/___/___	[963]	___/___/___
	[970]	2WPGM 7	___/___/___	[971]	___/___/___	[972]	___/___/___	[973]	___/___/___
	[980]	2WPGM 8	___/___/___	[981]	___/___/___	[982]	___/___/___	[983]	___/___/___
2WPGM Deactivation	[914]	2WPGM 1	___/___/___	[915]	___/___/___	[916]	___/___/___	[917]	___/___/___
	[924]	2WPGM 2	___/___/___	[925]	___/___/___	[926]	___/___/___	[927]	___/___/___
	[934]	2WPGM 3	___/___/___	[935]	___/___/___	[936]	___/___/___	[937]	___/___/___
	[944]	2WPGM 4	___/___/___	[945]	___/___/___	[946]	___/___/___	[947]	___/___/___
	[954]	2WPGM 5	___/___/___	[955]	___/___/___	[956]	___/___/___	[957]	___/___/___
	[964]	2WPGM 6	___/___/___	[965]	___/___/___	[966]	___/___/___	[967]	___/___/___
	[974]	2WPGM 7	___/___/___	[975]	___/___/___	[976]	___/___/___	[977]	___/___/___
	[984]	2WPGM 8	___/___/___	[985]	___/___/___	[986]	___/___/___	[987]	___/___/___

2WPGM Delays

Use *Worksheet 57 on page 70* to record your settings for the 2WPGM delays.

Worksheet 57: 2WPGM Delays

Section	2WPGM Delay Value	Range	Description	Default Setting
[918]	___/___/___	(001 to 255 x 1 sec./min.)	2WPGM 1 delay	5 sec./min.
[928]	___/___/___	(001 to 255 x 1 sec./min.)	2WPGM 2 delay	5 sec./min.
[938]	___/___/___	(001 to 255 x 1 sec./min.)	2WPGM 3 delay	5 sec./min.
[948]	___/___/___	(001 to 255 x 1 sec./min.)	2WPGM 4 delay	5 sec./min.
[958]	___/___/___	(001 to 255 x 1 sec./min.)	2WPGM 5 delay	5 sec./min.
[968]	___/___/___	(001 to 255 x 1 sec./min.)	2WPGM 6 delay	5 sec./min.
[978]	___/___/___	(001 to 255 x 1 sec./min.)	2WPGM 7 delay	5 sec./min.
[988]	___/___/___	(001 to 255 x 1 sec./min.)	2WPGM 8 delay	5 sec./min.

2WPGM Options

Table 69: 2WPGM Options

Option	Description	PGM 1 [919]		PGM 2 [929]		PGM 3 [939]		PGM 4 [949]		PGM 5 [959]		PGM 6 [969]		PGM 7 [979]		PGM 8 [989]	
		OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	ON	ON	ON	ON	ON	ON
1	PGM deactivation event after: see options	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
2	PGM base time (On = min. / Off = sec.)	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
3	Future use	□	□	□	□	□	□	□	□	□	□	□	□	□	□	□	□
4	Future use	□	□	□	□	□	□	□	□	□	□	□	□	□	□	□	□
5	Future use	□	□	□	□	□	□	□	□	□	□	□	□	□	□	□	□
6	Future use	□	□	□	□	□	□	□	□	□	□	□	□	□	□	□	□
7	Future use	□	□	□	□	□	□	□	□	□	□	□	□	□	□	□	□
8	Flexible PGM deactivation: see options table	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□

▲ = Default

Table 70: 2WPGM; Options 1 and 8

Option		Description
1	8	
OFF	OFF	Deactivation event
OFF	ON	Deactivation event
ON	OFF	PGM timer
ON	ON	PGM timer or deactivation event

Table 71: 2WPGM Tamper Trouble

Section	Description
[991]	The serial number of the 2WPGM that is in tamper trouble will be displayed.

Table 72: 2WPGM Supervision Trouble

Section	Description
[992]	The serial number of the 2WPGM that is in supervision trouble will be displayed.

Label Programming

Each section, from [101] to [148], [200] to [204], and [301] to [396], contains one label with a maximum of 16 characters. These sections contain the following labels:

- Sections [101] to [148]: zone 01 to zone 48, respectively
- Section [200] = Paradox Security
- Sections [201] to [204]: first area, second area, third area, and fourth area
- Sections [301] to [396]: code 01 to code 96, respectively

After entering the section corresponding to the desired label, the label can be re-programmed to suit your installation needs (refer to Table 73 on page 71). For example, section [101] (Zone 01) can be changed to *Front Door*.

Table 73: Description of the Special Function Keys, used for Programming Labels on the K641R/K641LX/K641+ and K656 Keypads

Function	Description	K641R/ K641LX/ K641+	K656
Insert space	Insert a blank space at the current cursor's position.	STAY	STAY
Delete	Delete the character or blank space found at the cursor's current position.	FORCE	SLEEP
Delete until end of entry	Delete all characters and spaces to the right of the cursor, as well as at the cursor's current position.	ARM	ARM
Numeric/alphanumeric	Toggle from numeric to alphanumeric keys, and vice versa. Numeric: keys 0 to 9 represent numbers 0 to 9; alphanumeric: refer to Table 74 on page 71.	DISARM	OFF
Lower/upper case	Toggle from lower to upper case, and vice versa.	BYP	MENU
Special characters	After pressing this key, the cursor will turn into a flashing black square. Using the special characters outlined in Figure 7 on page 71, enter the three-digit number for the desired character.	MEM	☐

Figure 7: Special Characters for Label Programming.

032	048	064	080	096	112	128	144	160	176	192	208
0	@	P	`	p	Ù	Ê	à	§	∅	*	
033	049	065	081	097	113	129	145	161	177	193	209
!	1	A	Q	a	q	Û	È	í	±	Ł	..
034	050	066	082	098	114	130	146	162	178	194	210
"	2	B	R	b	r	Ü	É	î	∏	Ð	°
035	051	067	083	099	115	131	147	163	179	195	211
#	3	C	S	c	s	Û	Ê	í	↑	β	˘
036	052	068	084	100	116	132	148	164	180	196	212
\$	4	D	T	d	t	ú	ê	ï	↓	ç	˙
037	053	069	085	101	117	133	149	165	181	197	213
%	5	E	U	e	u	ù	è	ì	↩	®	˚
038	054	070	086	102	118	134	150	166	182	198	214
&	6	F	V	f	v	ú	é	ñ	ƒ	□	÷
039	055	071	087	103	119	135	151	167	183	199	215
'	7	G	W	g	w	ô	ë	ñ	£	☐	«
040	056	072	088	104	120	136	152	168	184	200	216
(8	H	X	h	x	ö	ä	ñ	→	μ	»
041	057	073	089	105	121	137	153	169	185	201	217
)	9	I	Y	i	y	ó	ä	ü	⇓	∅	!.
042	058	074	090	106	122	138	154	170	186	202	218
*	:	J	Z	j	z	ø	å	9	↑	ÿ	\
043	059	075	091	107	123	139	155	171	187	203	219
+	;	K	[k	{	ö	å	v	↓	Ä	X
044	060	076	092	108	124	140	156	172	188	204	220
,	<	L	¥	l	l	ö	å	ÿ	↑	€	®
045	061	077	093	109	125	141	157	173	189	205	221
-	=	M]	m	}	ó	å	w	½	ä	©
046	062	078	094	110	126	142	158	174	190	206	222
.	>	N	^	n	→	ö	å	Ω	¼	Ö	☐
047	063	079	095	111	127	143	159	175	191	207	223
/	?	O	_	o	←	ö	å	Æ	¼	ö	≡

Table 74: Description of Alphanumeric Key Inputs

Key	Press Key Once	Press Key Twice	Press Key Three Times
1	A	B	C
2	D	E	F
3	G	H	I
4	J	K	L
5	M	N	O
6	P	Q	R
7	S	T	U
8	V	W	X
9	Y	Z	

Using the Memory Key

Table 75: Description of Memory Key Sections ([510] to [520])


Section	Description
[510]	Download all content from the memory key (keypad sections [001] to [396], as well all labels and messages) to the keypad.
[520]	Copy the keypad sections [001] to [396], as well as labels and messages to the memory key.

Downloading Content from Memory Key to Keypad

To download content from the memory key to the keypad (refer to *Figure 8 on page 72*), proceed as follows:

1. Connect the memory key to the connector labeled **KEY** on the keypad.
2. Enter the keypad's programming mode, and then access section [510].
3. Wait for two separate confirmation beeps, and then remove the memory key.

Figure 8: Downloading from Memory Key to Keypad and Vice-Versa.

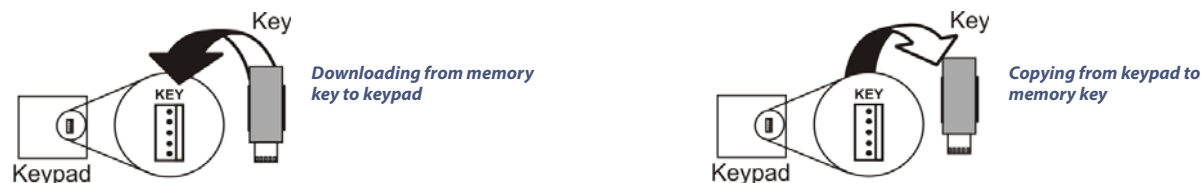

Copying Content from Keypad to the Memory Key

To copy content from the memory key to the keypad (refer to *Figure 8 on page 72*), proceed as follows:

1. Connect memory key to the connector labeled **KEY** on the keypad. Ensure that the write-protect jumper is ON (refer to *Figure 9 on page 72*).
2. Enter the keypad's programming mode, and then access section [520].
3. Wait for two separate confirmation beeps, and then remove the memory key. Remove the memory key's jumper, so you do not accidentally overwrite its contents.

Figure 9: The PMC5 Memory Key.



Combust Voltmeter

To verify if the combus is supplying sufficient power, press and hold **0**, enter the installer code, and press **ACC** on the K641R/K641LX/K641+ keypads, or **🔥** on the K656 keypad. A reading of 10.5V or lower, indicates to a distant module that the voltage is too low. The voltage may drop during the control panel battery test.

Updating Firmware Using BabyWare

To update your system's firmware:

1. Connect the product to your PC, using a 307USB Direct Connect Interface or CV4USB Converter.

NOTE: If you are using the 307USB to upgrade a keypad that features a four-pin serial connector, you must first disconnect the GRN and YEL combus wires.

2. Launch BabyWare.
3. Click the In-Field Programmer icon.
4. Verify the product information located in the In-Field Firmware Programmer window.
5. If the firmware programmer automatically detects your control panel, proceed to the next step. If it does not automatically detect your control panel, click **Com Port Settings** and select the correct *Com* port. Once the correct port has been selected, click the **Refresh Product Info** button to connect with the panel.
6. To check for new firmware updates, click **Download Firmware from the Web**.
7. From the **Select Firmware** drop-down menu, select the firmware version you wish to install. If you have already downloaded the PUF file from paradox.com, click [...], and then select your PUF file from the appropriate location.
8. Click **Update Product Firmware**. When the download process comes to an end, the update is complete.

Hardware Connections for the Control Panel

The following section provides information on certain hardware connections for your EVO192 control panel. For detailed information, including connection diagrams, refer to the *Digiplex EVO192 Installation Guide* available from paradox.com.

Milliamp Consumption

Worksheet 58: Milliamp Consumption of Various Devices

Device	QTY	Consumption for Each	Total (mA)
LCD keypad(s) (K656, K641LX, K641+)	_____	x 110 mA	_____
LCD keypad(s) with built-in reader (K641R)	_____	x 120 mA	_____
Motion detector module(s) (DG85, DM50/60/70)	_____	x 30 mA	_____
Door contact module(s) (ZC1)	_____	x 15 mA	_____
1-Zone expansion module(s) (ZX1)	_____	x 30 mA	_____
4-Zone expansion module(s) (ZX4)	_____	x 30 mA	_____
8-Zone expansion module(s) (ZX8)	_____	x 30 mA	_____
8-Zone expansion modules (ZX82)	_____	x 100 mA	_____
Magellan wireless expansion module(s) (RTX3)	_____	x 35 mA	_____
4-PGM expansion module(s) (PGM4)	_____	x 150 mA	_____
8-PGM expansion module(s) (PGM82)	_____	x 315 mA	_____
Printer module(s) (PRT3/BUS2SER)	_____	x 25 mA	_____
Hub and bus isolator(s) (HUB2)	_____	x 50 mA	_____
Access control module(s) (ACM12) (The ACM12 consumes 130mA from its own power supply and cannot be powered by the combus)	_____	x 120 mA	_____
Internet module	_____	x 110 mA	_____
Plug-in voice module (VDMP3)	_____	x 35 mA	_____
PCS module	_____	x 600 mA	_____
Other devices such as hardwired motion detectors	_____		_____
Grand Total (The maximum available milliamps is 700 mA)			_____

Using *Worksheet 58 on page 73*, proceed as follows:

1. Calculate the total number of milliamps (mA) required by each device, module, and accessory in your EVO system. Make sure to take into account devices connected to the control panel's PGM outputs. Since the bell output has its own power supply, do not include the sirens which are connected to it in your calculation.
2. If the grand total is less than 700 mA, proceed to step 3. If the value is greater, an external power supply will be required to provide the additional power needed.
3. Due to the degradation of a power signal over long distances (if such is the case, the PS17 Paradox Power Supply Module is recommended), each length (or run) of wire in the system can support only a specific number of milliamps (mA). Using *Table 76 on page 74*, determine how many milliamps each run of wire can support.

NOTE: The total number of milliamps (mA) can never surpass 700 mA.

Table 76: Milliamp Reference Table for Different Wire Gauges

Wire Gauge	Length (of each run of wire)	Available Milliamps (mA)	Wire Gauge	Length (of each run of wire)	Available Milliamps (mA)	Wire Gauge	Length (of each run of wire)	Available Milliamps (mA)
18 AWG (Surface: 0.823 sq. mm)	30 m (100 ft.)	700	22 AWG (Surface: 0.326 sq. mm)	30 m (100 ft.)	700	24 AWG (Surface: 0.205 sq. mm)	30m (100 ft.)	700
	61 m (200 ft.)	700		61 m (200 ft.)	682		61m (200 ft.)	429
	91 m (300 ft.)	700		91 m (300 ft.)	454		91m (300 ft.)	286
	122 m (400 ft.)	700		122 m (400 ft.)	341		122m (400 ft.)	214
	152 m (500 ft.)	690		152 m (500 ft.)	273		152m (500 ft.)	171
	183 m (600 ft.)	575		183 m (600 ft.)	227		183m (600 ft.)	143
	213 m (700 ft.)	493		213 m (700 ft.)	195			
	244 m (800 ft.)	431		244 m (800 ft.)	170			
	274 m (900 ft.)	383		274 m (900 ft.)	151			
	305 m (1000 ft.)	345		305 m (1000 ft.)	136			
	457 m (1500 ft.)	230						
	610 m (2000 ft.)	172						
	762 m (2500 ft.)	138						
914 m (3000 ft.)	115							

Connecting the Combus in Noisy Environments


When installing the combus wires in proximity to high electrical interference, such as neon lights, motors, high-voltage wiring, and transformers, or if connecting the combus across separate buildings, you must use shielded cables. Connect the shielded cable as follows:

- **Within the same building:** strip the outer jacket at one end of the shielded cable to expose the shield. Connect the shield to the control panel ground (not the dialer ground), while leaving the shield at the other end of the cable open (floating).
- **Across separate buildings:** strip the outer jacket at one end of the shielded cable to expose the shield. In the same building that houses the control panel, connect the exposed shield to a cold water pipe or any other earth ground available, while leaving the shield at the other end of the cable open (floating). The same configuration applies to any subsequent building.

Built-in RTC

Digiplex EVO panels incorporate an RTC directly on the PC board. The RTC will save the control panel's internal clock when both the AC and battery power have been lost. After power is lost and then restored, the control panel will verify with the RTC and retrieve the time. The control panel will then verify and compare its time with the time stored in the RTC, every hour. If the times differ, the control panel will reset its internal clock to the time saved in the RTC. The RTC uses a 3V lithium battery (CR2032) with a battery life of 11 years. Install the battery as shown in *Figure 10 on page 74*.

Figure 10: Changing the RTC's Lithium Battery.

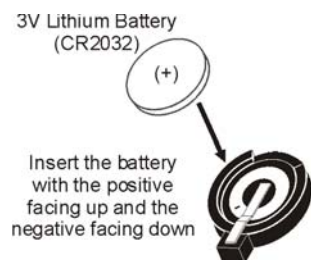

WARNING: When replacing the RTC's battery, beware of the following, possible hazard:

- **If the lithium battery is installed incorrectly, there is the chance that it may explode. Replace only with the same or an equivalent type, recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.**

Trouble Display

The following section provides information on the different trouble groups associated with your EVO192 control panel.

K641R/K641LX/K641+

To view the trouble display on the K641R/K641LX/K641+ keypads:

1. Press **TRBL/TBL**.
2. To view the specific trouble:
 - For K641R/K641LX/K641+, press the trouble’s corresponding number key and use the **▲** and **▼** keys.

K656

To view the trouble display on the K656 keypad:

1. Press **MENU**.
2. Press **5** or scroll to the **View Trouble** sub-menu using the **▲** and **▼** keys, and then press **ENTER**.
3. Press the trouble’s corresponding number key and use the **▲** and **▼** keys to view the specific trouble.

Trouble Groups

Table 77: Trouble Groups for the EVO System

Group	#	Description	Group	#	Description	Group	#	Description	Group	#	Description
1: System	1	AC failure	2: Communicator	1	TLM1	3: Module Trouble	1	Module tamper	4: Network (Combus) Troubles	1	Missing keypad
	2	Battery trouble		2	Fail to Com. 1		2	Module ROM check error		2	Missing module
	3	Aux. current limit		3	Fail to Com. 2		3	Module TLM trouble		3	Missing voice module
	4	Bell current limit		4	Fail to Com. 3		4	Module Fail to Com.		6	General failure
	5	Bell absent		5	Fail to Com. 4		5	Printer trouble		7	Combus overload
	6	ROM check error		6	Fail to Com. PC		6	Module AC failure			
	7	RAM check error			7		Module battery failure				
				8	Module supply output						
5: Zone Tamper		Press 5 to display the tampered zone or zones	6: Zone Low Battery		Press 6 to display the zone(s) assigned to wireless devices with low batteries	7: Zone Fault		Press 7 to display the zone(s) experiencing a communication, a fire loop, or CleanMe™ trouble.	8: Clock Loss		Press 8 to re-program the time
9: GSM Troubles	1	Missing GSM module	9: GSM Troubles (cont.)	6	Fail to communicate with IP receiver 2	10: IP Troubles	1	Missing IP module	10: IP Troubles (cont.)	5	Fail to communicate with IP receiver 3
	3	GSM RF jam supervision		7	Fail to communicate with IP receiver 3		2	No service		6	Fail to communicate with IP receiver 4
	4	No service		8	Fail to communicate with IP receiver 4		3	Fail to communicate with IP receiver 1		7	IP receiver unregistered
	5	Fail to communicate with IP receiver 1		9	IP receiver unregistered		4	Fail to communicate with IP receiver 2			

EN50131 Compliancy

The following sections describe the programming required for your panel to be EN 50131 compliant. To set your panel to be EN 50131 compliant:

1. Enter section [4049] to unlock the software.
2. Enter section [4039] to set all relevant sections to EN 50131 compliant default settings.

When your EVO panel is compliant with EN 50131 standards, the following programming sections are enabled and set as default.

PCS Module Programming

Table 78: PCS Module Programming Section [2950]

Section	Option	Description	OFF		ON	
Section [2950] PCS Module Programming	1	GSM reporting	▲	See PCS manual	<input type="checkbox"/>	See PCS manual
	2	GSM reporting	▲	See PCS manual	<input type="checkbox"/>	See PCS manual
	3	Future use	-	-	-	-
	4	Future use	-	-	-	-
	5	GSM/GPRS no service supervision	<input type="checkbox"/>	Refer to Table 79 on page 76	▲	Refer to Table 79 on page 76
	6		▲		<input type="checkbox"/>	
	7	GSM/GPRS module tamper	<input type="checkbox"/>	Disabled	▲	Enabled
	8	GSM/GPRS RF jamming supervision	<input type="checkbox"/>	Disabled	▲	Enabled

Table 79: GSM/GPRS No Service Supervision (options 5 and 6 for Section [2950] above)

Option		Description
5	6	
OFF	OFF	Disabled
ON	OFF	When disarmed: trouble only; when armed: trouble only
OFF	ON	When disarmed: trouble only; when armed: audible only
ON	ON	Silent alarm becomes audible alarm

Control Panel Settings

Table 80: Control Panel Settings

Section	Data	Description	Default Setting
[3021]	__/_	Trouble shutdown (00-15)	10

System Options

Table 81: Description of Section [3029]

Section	Option	Description	OFF		ON	
Section [3029] System Options 1	1	Enable if using an RTX3 without an K641/ K641+ /K641R	▲	Disabled	<input type="checkbox"/>	Enabled
	2	Future use	-	-	-	-
	3	Future use	-	-	-	-
	4	EN 50131 compliant mode	<input type="checkbox"/>	Disabled	▲	Enabled
	5	Anti-mask supervision	<input type="checkbox"/>	Refer to Table 82 on page 76	▲	Refer to Table 82 on page 76
	6		▲		<input type="checkbox"/>	
	7	Generate anti-mask trouble if detected on bypass zone	▲	Yes	<input type="checkbox"/>	No
	8	Restrict arming on anti-mask trouble	▲	Disabled	<input type="checkbox"/>	Enabled

Table 82: Anti-Mask Supervision (options 5 and 6 for Section [3029] above)

Option		Description
5	6	
OFF	OFF	Disabled
OFF	ON	Generates trouble only (when armed or disarmed)
ON	OFF	When armed: alarm (default) When disarmed: generates trouble only
ON	ON	When armed: alarm When disarmed: generates audible alarm

Table 83: Description of Section [3033]

Section	Option	Description	OFF		ON	
			Symbol	Value	Symbol	Value
Section [3033] System Options 3	1	Multiple actions in user menu	▲	Disabled	<input type="checkbox"/>	Enabled
	2	User code length	▲	Fixed	<input type="checkbox"/>	Flexible
	3	User code length (if option 2 is OFF)*	▲	4 digits	<input type="checkbox"/>	6 digits
	4	Power save mode	<input type="checkbox"/>	Disabled	▲	Enabled
	5	Bypass not displayed if system is armed	<input type="checkbox"/>	Disabled	▲	Enabled
	6	Trouble latch	<input type="checkbox"/>	Disabled	▲	Enabled
	7	EOL resistor on hardwire zones	<input type="checkbox"/>	Disabled	▲	Enabled
	8	Zone doubling (ATZ)	▲	Disabled	<input type="checkbox"/>	Enabled

*All numbers from 000000 to 999999 are valid giving a total of 1,000,000 different possible combinations.

Table 84: Description of Section [3034]

Section	Option	Description	OFF		ON	
			Symbol	Value	Symbol	Value
Section [3034] System Options 4	1	Wireless transmitter supervision	▲	Refer to Table 85 on page 77	<input type="checkbox"/>	Refer to Table 85 on page 77
	2		▲		<input type="checkbox"/>	
	3	Generate supervision failure if detected on a bypass wireless zone	▲	Yes	<input type="checkbox"/>	No
	4	Restrict arming on a wireless transmitter supervision failure	▲	Disabled	<input type="checkbox"/>	Enabled
	5	Zone and module tamper recognition options		Refer to Table 86 on page 77		Refer to Table 86 on page 77
	6					
	7	Generate tamper if detected on bypass zone	<input type="checkbox"/>	Yes	▲	No
	8	Restrict arming on tamper trouble	<input type="checkbox"/>	Disabled	▲	Enabled

Table 85: Wireless Transmitter Supervision (options 1 and 2 for Section [3034] above)

Option		Description
1	2	
OFF	OFF	Disabled (default)
OFF	ON	Generates trouble only (when armed or disarmed)
ON	OFF	When armed: alarm When disarmed: generates trouble only
ON	ON	When armed: alarm When disarmed: generates audible alarm

Table 86: Zone and Module Tamper Recognition (options 5 and 6 for Section [3034])

Option		Description
5	6	
OFF	OFF	Disabled
OFF	ON	Generates trouble only (when armed or disarmed)
ON	OFF	When armed: alarm (default) When disarmed: generates trouble only
ON	ON	When armed: alarm When disarmed: generates audible alarm

Table 87: Description of Section [3035]

Section	Option	Description	OFF		ON	
			Symbol	Value	Symbol	Value
Section [3035] System Options 5	1	Restrict arming on AC failure	▲	Disabled	<input type="checkbox"/>	Enabled
	2	Restrict arming on battery failure	▲	Disabled	<input type="checkbox"/>	Enabled
	3	Restrict arming on bell or auxiliary failure	<input type="checkbox"/>	Disabled	▲	Enabled
	4	Restrict arming on TLM failure	<input type="checkbox"/>	Disabled	▲	Enabled
	5	Restrict arming on module troubles	<input type="checkbox"/>	Disabled	▲	Enabled
	6	Account number transmission	▲	Partition #	<input type="checkbox"/>	Tel #
	7	Transmit zone status on serial port*	▲	Disabled	<input type="checkbox"/>	Enabled
	8	Serial port baud rate	<input type="checkbox"/>	38400	▲	57600

*This option is used by certain event monitoring software, such as Hyperterminal. With BabyWare and printers, it is always being transmitted.

Table 88: Description of Section [3037]

Section	Option	Description	OFF		ON	
Section [3037] System Options 4	1	Call back	▲	Disabled	<input type="checkbox"/>	Enabled
	2	Automatic event buffer transmission	▲	Disabled	<input type="checkbox"/>	Enabled
	3	Autotest report transmission options		Refer to <i>Table 89 on page 78</i>		Refer to <i>Table 89 on page 78</i>
	4					
	5	Keypad beep on successful arming/disarming report	▲	Disabled	<input type="checkbox"/>	Enabled
	6	Alternate dialing	▲	Disabled	<input type="checkbox"/>	Enabled
	7	Dial tone delay (if no dial tone)	▲	Disabled	<input type="checkbox"/>	Enabled
	8	Report zone restore ON = Upon zone closure OFF = Upon bell cut-off	<input type="checkbox"/>	Disabled	▲	Enabled

Table 89: Test Report Transmission (options 3 and 4 for Section [3037])

Option		Description
3	4	
OFF	OFF	Transmit the test report code every time the days programmed in section [3040] have elapsed, at the time programmed in section [3041]; (default)
OFF	ON	When armed: transmit test report code every time the time programmed in section [3042] has elapsed When disarmed: transmit test report code every time the time programmed in section [3043] has elapsed
ON	OFF	The control panel will transmit the test report code every hour, on the minute value programmed in section [3041] (the last two digits); the first two digits of section [3041] will be ignored; for example, if 10:25 was programmed in section [3041], the test report code would be transmitted at the 25th minute of every hour; i.e., 11:25, 12:25, etc.
ON	ON	The test report code will be transmitted when one or more of the conditions of the second and third options, listed above, are met; i.e., option 3 = OFF and option 4 = ON, or option 3 = ON and option 4 = OFF

Partition Timers

Worksheet 59: Partition Timers (Partitions 1 - 4)

Description (Decimal Values from 000 to 255)	Partition 1		Partition 2		Partition 3		Partition 4	
	Section	Data	Section	Data	Section	Data	Section	Data
Number of invalid codes before lockout (default: 010)	[3105]	_/_/_	[3205]	_/_/_	[3305]	_/_/_	[3405]	_/_/_
Keypad lockout duration (default: 02)	[3106]	_/_/_	[3206]	_/_/_	[3306]	_/_/_	[3406]	_/_/_
Auto-zone shutdown (default: 010)	[3114]	_/_/_	[3214]	_/_/_	[3314]	_/_/_	[3414]	_/_/_

Worksheet 60: Partition Timers (Partitions 5 - 8)

Description (Decimal Values from 000 to 255)	Partition 5		Partition 6		Partition 7		Partition 8	
	Section	Data	Section	Data	Section	Data	Section	Data
Number of invalid codes before lockout (Data x 1 attempt; default: 010)	[3505]	_/_/_	[3605]	_/_/_	[3705]	_/_/_	[3805]	_/_/_
Keypad lockout duration (default: 02)	[3506]	_/_/_	[3606]	_/_/_	[3706]	_/_/_	[3806]	_/_/_
Auto-zone shutdown (default: 010)	[3514]	_/_/_	[3614]	_/_/_	[3714]	_/_/_	[3814]	_/_/_

The whole Paradox team wishes you a successful and easy installation. We hope this product performs to your complete satisfaction.
Should you have any questions or comments, please contact us at support@paradox.com.
Additional information can be found on our website www.paradox.com/support

PARADOX

Printed in Canada - 10/2023

PARADOX.COM

EVO-EP09