

RTX3

Wireless Expansion Module

Installation Manual
V6.30 and higher



Introduction

The RTX3 is a 2-way, 32 zone wireless expansion module which enables EVO and SP Series control panels to support wireless hardware such as sirens, motion detectors, water detectors, and remote controls.

RTX3 Board and Connectors

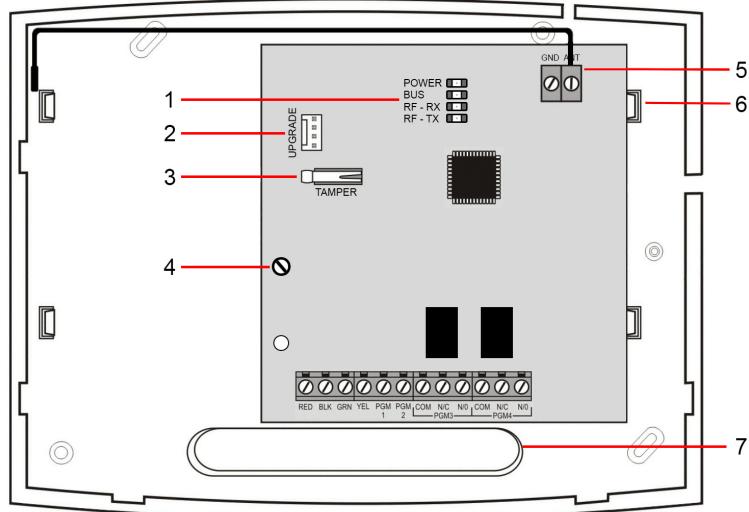


FIGURE 1

1. LED display	4. PCB screw
2. Firmware upgrade serial connector	5. Antenna
3. Anti-tamper switch	6. Mounting clips (2)
	7. Wiring slot

Installation

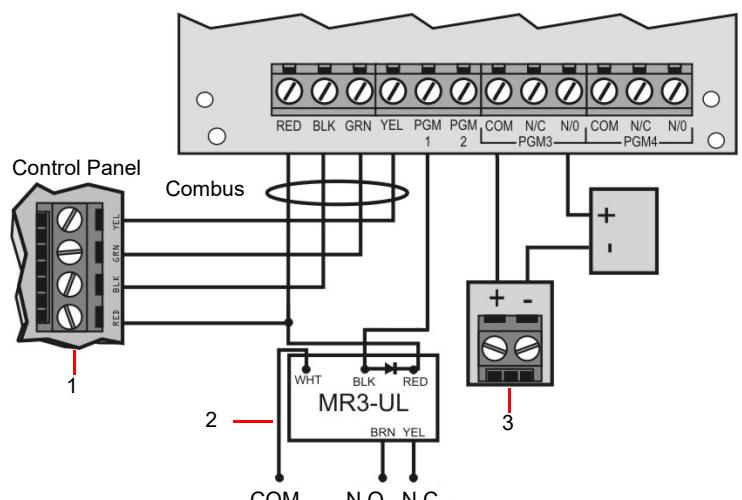


FIGURE 2

Installation Notes

Refer to the Figure 2 for the following connections and instructions.

1. Control panel Digiplex connection.
2. Use a relay if the current draw exceeds 150mA on PGM1 or PGM2. Connect the RTX3's RED connector to the relay's RED connector, and the RTX3's PGM connector (PGM1 or PGM2) to the relay's BLK connector.
3. Connect PGM3 and PGM4 to external power supplies if additional power is required. A PS25 is recommended. Connect the PGM's N.O. connector to the external power supply's "+" connection. Connect the power supply's "-" connector to the device's "-" connector. Connect the PGM's COM connector to the device's "+" connector.

Write down the serial number of all wireless modules used with the RTX3.

System Reset for EVO Panels

1. Press and hold the [0] key.
2. Enter the [INSTALLER CODE].
3. Enter section [4001].
4. Enter the module [SERIAL NUMBER].

System Reset restores the RTX3's factory settings.

LED Feedback

LED	OFF	ON
POWER	OFF	OK (10.5V to 16V)
BUS	No clock or data exchange	Clock and data OK
RF - RX	Not receiving data	Flashes green when receiving data
RF - TX	Not transmitting data	Flashes green when transmitting data

Programming RTX3 for SP Series Panels

When connected to a SP Series control panel, RTX3 settings are programmed through control panel programming sections. For detailed instructions refer to the *SP Series Programming Guide*.

Notes:

- Only one RTX3 module can be connected to a SP Series panel.

Programming for EVO Series Panels

Program RTX3 settings for EVO panels with either a keypad or BabyWare PC software.

Programming RTX3 with a Keypad

When connected to an EVO panel, program RTX3 settings through the keypad by entering Module Programming Mode.

To enter Module Programming mode:

1. Press and hold the [0] key.
2. Enter the [INSTALLER CODE].
3. Enter section [4003].
4. Enter the module [SERIAL NUMBER].
5. Enter the required [DATA].

After Programming RTX3 for EVO Control Panels

Program the zones, PGMs, sirens and remote controls into the EVO panel. Refer to EVO section [3034] and RTX3 section [001] options [2] and [3] for wireless transmitter supervision options. **Requirement:** Configure all wireless sirens in an EVO system to a single RTX3.

RTX3 Programming Sections for EVO Panels

Section	Feature	Details
[001]	Option	
	[1] Low battery supervision	For RTX3 version 1.5 and higher, this option is always on ON: default
	[2] Check-in supervision	OFF: default
	[3] Check-in supervision time interval	OFF: 24 hours (default) ON: 80 minutes
	[4] RF Jamming supervision	OFF: default
	[5] On-board module tamper supervision	OFF: default
	[6] PGM1 initial state	OFF: Normally Open (default) ON: Normally Closed
	[7] PGM2 initial state	OFF: Normally Open (default) ON: Normally Closed
[002]	Remote Control Options	
	[1] REM2 visual and auditory feedback compatibility options*	OFF: Old visual and auditory feedback (Supported by REM2 v2.00 or lower) ON: New visual and auditory feedback (default) Note: Requires REM2 v2.01 and higher
[030]	View Transmitter, Remote Control and PGM Serial Numbers	To view a transmitter's 6-digit serial number: Press and hold the transmitter's anti-tamper switch
	[101] to [132]	Assign Wireless Transmitters [101] = Zone Input 1; [132] = Zone Input 32 Enter 6-digit serial number or press and release the transmitter's tamper switch. To delete an assigned transmitter, enter 000000 as the serial number.
See Details	Remote Controls	To program remotes controls: <ul style="list-style-type: none"> • Refer to <i>User Code and Remote Control Programming sections in the EVO Programming Guide</i> OR: • Program through BabyWare

Section	Feature	Details
[601] to [632]	Transmitter signal strength	[601] = Zone input 1 [632] = Zone input 32 <ul style="list-style-type: none"> • 3 or less: weak (move transmitter) • 4 to 10: ok
[701] to [732]	Current battery life	[701] = Zone input 1 [732] = Zone input 32 View number of weeks the batteries have been in the transmitter
[801] to [832]	Previous battery life	[801] = Zone input 1 [832] = Zone input 32 View number of weeks the previous batteries were in the transmitter
[671] to [678]	2WPGM Signal Strength	Sections [671]-[678] correspond to Zone inputs 1 - 8 Signal Strength: <ul style="list-style-type: none"> • 3 or less: weak (move transmitter) • 4 to 10: ok
[991]	View two-way PGM Tamper Trouble	PGM # in tamper trouble is displayed
[992]	View two-way PGM Supervision Trouble	PGM # in supervision trouble is displayed
[901] to [908]	Assign 2WPGMs	Sections [901]-[908] correspond to Zone inputs 1 - 8 To assign 2WPGMs: Enter a 6-digit serial number or press and release the transmitter's tamper switch To delete an assigned 2WPGM: Enter 000000 as a serial number Note: If a section between [901] to [904] is empty, the RTX3 uses the on board PGM

PGM Programming for EVO

This applies to EVO panels version 6.90 and below.

1. Enter section [0901] - [0932].
2. Enter the 8-digit serial number and 3-digit output number.
3. Enter the 3-digit Event Group, Feature Group, Start # and End # for PGM activation.
4. Enter the 3-digit Event Group, Feature Group, Start #, and End # for PGM deactivation.
5. Define the PGM Delay Value (001 to 255 x 1 sec./min.). Default set to 15 minutes.
6. Set your PGM options, refer to the table below.

OPTION	DESCRIPTION	PGM #	
		OFF	ON
1	PGM deactivation after (OFF = deactivation event; ON = PGM timer)	n	▲
2	PGM base time (OFF = seconds; ON = minutes)	n	▲
3	Flexible PGM deactivation option (OFF = PGM timer only; ON = PGM timer and/or deactivation event)	▲	n
4	PGM initial state (OFF = normally open; ON = normally closed)	▲	n
5	PGM time base (OFF = follow option 2, ON = hour)	▲	n
6 to 8	Future use	-	-

Note: Supervision is not provided to devices connected to the PGM.



PGM Option Programming for EVO

PGM Activation*			
Event Group	Feature Group	Start #	End #
PGM1	[910]	[911]	[912]
PGM2	[920]	[921]	[922]
PGM3	[930]	[931]	[932]
PGM4	[940]	[941]	[942]
PGM5	[950]	[951]	[952]
PGM6	[960]	[961]	[962]
PGM7	[970]	[971]	[972]
PGM8	[980]	[981]	[982]
Default Data	000	000	000

PGM Deactivation*			
Event Group	Feature Group	Start #	End #
PGM1	[914]	[915]	[916]
PGM2	[924]	[925]	[926]
PGM3	[934]	[935]	[936]
PGM4	[944]	[945]	[946]
PGM5	[954]	[955]	[956]
PGM6	[964]	[965]	[966]
PGM7	[974]	[975]	[976]
PGM8	[984]	[985]	[986]
Default Data	000	000	000

PGM Delay		
Delay (000 to 255)		Options
PGM1	[918]	[919]
PGM2	[928]	[929]
PGM3	[938]	[939]
PGM4	[948]	[949]
PGM5	[958]	[959]
PGM6	[968]	[969]
PGM7	[978]	[979]
PGM8	[988]	[989]
Default Data	005	OFF

The following options apply to sections [919], [929]...[989]:

Option [1]: PGM deactivation after, refer to table.

Option [2]: PGM Base Time: On = minutes; Off = seconds (default)

Option [8]: Flexible PGM deactivation**, refer to table

[1]	[8]	Details
OFF	OFF	Deactivation event
OFF	ON	Deactivation Event
ON	OFF	PGM Timer
ON	ON	PGM Timer or Deactivation event

* For a complete list of events, refer to the PGM programming section of your EVO Programming Guide.

** In order to use the "Flexible PGM deactivation" option [8], the PGM deactivation after option [1] must be ON.

Firmware Upgrade

Upgrade RTX3 firmware using a serial connection (307USB). For firmware upgrade instructions see the *Firmware Upgrade Instructions* document at: Paradox.com > Software > BabyWare.

Hardware Compatibility

	EVO	SP Series
Zones	32	32
Remotes	32/999	32
Remote Control Type		REM1 RAC1 REM2 REM3 REM15 REM25
Wireless PGMs	8	16
Wireless Keypads	-	8
Wireless Siren	8	4
Wireless Repeater	-	2

Technical Specifications

Power input voltage	12 Vdc
Frequency	433 or 868 MHz
Sensitivity	-120 dBm
Current consumption	50 mA
Dimensions and weight	15 x 16 x 3 cm (6 x 6 x 1.1 in.) / 24g
Operating temperature	0°C to 49°C (32°F to 120°F)
Humidity	5 - 90%
PGM outputs	PGM1 and PGM2 - 150mA PGM transistor outputs PGM3 - Form C relay output rated at 5A/28Vdc, N.O./N.C. (PGM4 optional)
Range	Refer to the appropriate transmitter instructions
Other	Di-pole antenna; error correction algorithm
Approvals	CE, EN 50131-1 and EN 50131-3, Security Grade 2, Environmental Class II

FCC and Industry Canada Compliance Statement

This device complies with FCC Rules Part 15 and with Industry Canada license exempt RSS standard(s). Operation is subject to two conditions:

1. This device may not cause harmful interference
2. This device must accept any interference that may be received or that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. l'appareil ne doit pas produire de brouillage, et
2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

FCC ID: KDYRTX3
IC: 2438A-RTX3

FCC WARNING

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance (Paradox Security Systems Ltd.) could void the user's authority to operate the equipment.

Warranty

For complete warranty information on this product, please refer to the Limited Warranty Statement which can be found on paradox.com/terms or contact your local distributor.

Patents

US, Canadian and international patents may apply. Paradox is a trademark or registered trademark of Paradox Security Systems (Bahamas) Ltd.

©2020 Paradox Security Systems (Bahamas) Ltd. All rights reserved. Specifications may change without prior notice.

REM2

Two-Way Remote Control

Instructions / Instrucciones V3.0



English

What's New in V3.0

- When pressing the [i] button, the status of the system is now available for the first five minutes after being received from the control panel.

Introduction

The REM2 is a water-resistant 5-button remote control that provides the user with the status of their system by pressing the [i] button. The remote control provides both auditory and visual feedback in an attractive streamlined style. To activate the remote's backlight, press any button twice.

The feedback provided for the user is separated into two categories: security feedback and accessory feedback. Security feedback deals with actions concerning arming and disarming, system in alarm, and panic alarms.

Accessories feedback deals with actions concerning the FM tuner and PGMs. If the remote fails to communicate with the system, the LED will flash red rapidly, and a fail beep will occur.

The REM2 is available in a 433MHz or 868MHz version. The 868MHz version is not UL approved.

Compatibility

- MG6250
- MG5000 / MG5050
- RPT1
- RTX3

ID Label

Use the space provided on the back of the unit to identify the remote control's owner.

Range

- 30m (100 ft) with the MG6250
- 45m (150 ft) with the MG5000, MG5050 / RPT1 / RTX3

Battery

One 3V lithium battery (2032). Battery life expectancy is a minimum of 2 years.

How to Replace the Battery

- Remove the screw from the back of the remote control and carefully remove the back cover.
- Use a non-metallic object, or any plastic device, to push the battery out from under the battery plate (see Figure 1). Avoid using metal as it may cause a short in the board.
- Insert the new battery. Make sure the positive side of the battery is inserted face up.
- Set the back cover in place, and fasten it with the two screws.

Warning: Danger of explosion exists if the lithium battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

This product contains a coin cell battery. If the coin cell battery is swallowed, it can cause severe internal burns in under two hours and can lead to death.

Español

Novedades de la Versión 3.0

- Al presionar el botón [i], el estado del sistema está ahora disponible solo durante los primeros cinco minutos después de haber sido recibida la información desde el panel de control.

Introducción

El REM2 es un control remoto de 5 botones resistente al agua que permite que el usuario conozca el estado de su sistema con tan solo pulsar el botón [i]. El control remoto provee información de manera visual y audible y viene en un atractivo diseño aerodinámico. Para activa la luz del fondo del control remoto, pulsar cualquier botón dos veces.

La información brindada al usuario puede dividirse en dos categorías: información sobre la seguridad e información sobre los accesorios. La información sobre la seguridad tiene que ver con el armado y desarmado, las alarmas del sistema y las alarmas de pánico. La información sobre los

accesorios tiene que ver con las acciones respecto al sintonizador FM y las PGMs. Si hay un error de comunicación entre el control remoto y el sistema, la luz LED roja parpadea rápidamente, y se escucha un tono de fallo.

El REM2 está disponible en versión de 433MHz ó 868MHz. La versión de 868MHz no está homologada por UL.

Compatibilidad

- MG6250
- MG5000 / MG5050
- RPT1
- RTX3

Etiqueta de Identificación

Usar el espacio disponible en la parte trasera de la unidad para identificar al propietario del control remoto.

Alcance

- 30 m (100 ft) con MG6250
- 45m (150 ft) con MG5000, MG5050 / RPT1 / RTX3

Batería

Una batería de litio de 3V (2032). La esperanza de vida de la batería es de mínimo 2 años.

Cómo Cambiar la Batería

- Retirar el tornillo de la parte trasera del control remoto y retirar con cuidado la cubierta trasera.
- Emplear un objeto no metálico, o algún útil plástico, para sacar la batería de debajo de la placa de batería (ver la Figura 1). Evitar el uso de objetos de metal pues podrían causar un corto en la placa.
- Insertar la nueva batería. Verificar que el lado positivo de la batería este mirando hacia arriba.
- Reponer la cubierta trasera en su lugar y reajustarla con el tornillo.

Aviso: Hay peligro de explosión si la batería de litio es cambiada incorrectamente. Reemplazar solo con baterías del mismo tipo o un equivalente recomendado por el fabricante. Deshacerse de las baterías usadas siguiendo las instrucciones del fabricante.

Este producto contiene una batería de celda de moneda. Si la batería de celda de moneda es ingerida, puede causar quemaduras internas graves en menos de dos horas y puede llevar a la muerte

Français

Du nouveau avec la V3.0

Lorsque vous appuyez sur la touche [i], l'état du système est maintenant disponible pendant les cinq premières minutes après avoir été reçu par le panneau de contrôle.

Introduction

La REM2 est une télécommande à 5 boutons résistante à l'eau qui permet à l'utilisateur de connaître l'état de son système en appuyant simplement sur le bouton [i]. En plus d'avoir une forme profilée attrayante, la télécommande offre une rétroaction sonore et visuelle. Pour activer le rétroéclairage de la télécommande, appuyer deux fois sur n'importe quel bouton.

La rétroaction conçue pour l'utilisateur est divisée en deux catégories : la rétroaction pour les fonctions de sécurité et la rétroaction pour les fonctions accessoires. La rétroaction pour les fonctions de sécurité donne suite aux actions concernant l'armement et le désarmement du système, le déclenchement d'une alarme ainsi que les alarmes de panique. La rétroaction pour les fonctions accessoires donne suite aux actions concernant le syntoniseur FM et les sorties PGM. Si la télécommande ne peut entrer en communication avec le système, la DEL rouge clignotera rapidement et un signal de rejet se fera entendre.

La REM2 est disponible en version 433 MHz et en version 868 MHz. La version de fréquence 868 MHz n'est pas homologuée par les UL.

Compatibilité

- MG6250
- MG5000 / MG5050
- RPT1
- RTX3

Étiquette d'identification

Utiliser les espaces disponibles au dos de l'unité pour identifier le propriétaire de la télécommande.

Portée

- 30 m (100 pi) avec le MG6250
- 45 m (150 pi) avec le MG5000, MG5050 / RPT1 / RTX3

Batterie

Une batterie au lithium de 3 V (2032). La durée de vie minimale de la batterie est de 2 ans.


Comment remplacer la batterie

1. Retirer la vis à l'arrière de la télécommande et enlever le couvercle arrière avec soin.
2. Utiliser un objet non métallique ou tout dispositif de plastique pour retirer la batterie de la plaque pour batterie (voir Figure 1). Éviter d'utiliser du métal, car cela pourrait causer un court-circuit dans la carte électronique.
3. Insérer la nouvelle batterie. S'assurer que le côté positif de la batterie est inséré vers le haut.
4. Mettre le couvercle arrière en place et le fixer avec la vis.

Avertissement : Il y a danger d'explosion si la batterie au lithium n'est pas remplacée correctement. La remplacer seulement avec une batterie du même type ou d'un type équivalent recommandé par le fabricant. Jeter les batteries usagées selon les instructions du fabricant.

Ce produit contient une pile bouton. Si la pile bouton est avalée, elle peut provoquer de graves brûlures internes en moins de deux heures et peut entraîner la mort.

Figure/Figura 1

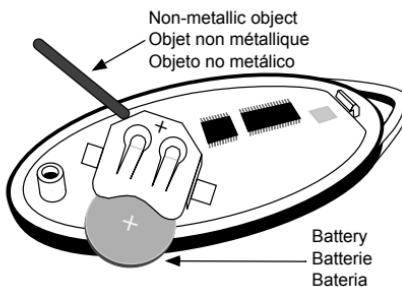

Warranty

For complete warranty information on this product please refer to the Limited Warranty Statement found on the website www.paradox.com/terms. Your use of the Paradox product signifies your acceptance of all warranty terms and conditions.

Magellan is a trademark or registered trademark of Paradox Security Systems Ltd. or its affiliates in Canada, the United States and/or other countries. For the latest information on products approvals, such as UL and CE, please visit www.paradox.com.

© 2019 Paradox Security Systems Ltd. All rights reserved. Specifications may change without prior notice. One or more of the following US patents may apply: 7046142, 6215399, 6111256, 6104319, 5920259, 5886632, 5721542, 5287111, 5119069, 5077549 and RE39406 and other pending patents may apply. Canadian and international patents may also apply.

Garantía

Para una información detallada acerca de la garantía de este producto consultar la Declaración de Garantía Limitada (en inglés) que se encuentra en el sitio web de paradox: www.paradox.ca/terms. El uso de este producto Paradox significa la aceptación de todos los términos y condiciones de la garantía.

Magellan es una marca de comercio o marca registrada de Paradox Security Systems Ltd. o de sus afiliados en Canadá, Estados Unidos y/o otros países. Para información de último minuto respecto a la homologación de productos, como UL y CE, sírvase visitar nuestro sitio Web en www.paradox.com.

© 2019 Paradox Security Systems Ltd. Todos los derechos reservados. Las especificaciones pueden cambiar sin previo aviso. Una o más de las siguientes patentes EE.UU. podría aplicarse: 7046142, 6215399, 6111256, 6104319, 5920259, 5886632, 5721542, 5287111, 5119069, 5077549 y RE39406 y otras patentes pendientes podrían aplicarse. Patentes canadienses e internacionales también podrían aplicarse.

Garantie

Pour tous les renseignements sur la garantie de ce produit, se référer aux Déclarations sur les garanties restreintes qui se trouvent sur notre site Web www.paradox.com/terms. L'utilisation de ce produit Paradox signifie l'acceptation de toutes les modalités et conditions de la garantie.

Magellan est une marque de commerce ou une marque de commerce déposée de Systèmes de sécurité Paradox Ltée ou de ses affiliés au Canada, aux États-Unis et/ou dans d'autres pays. Pour les renseignements les plus récents concernant l'approbation des produits telle que UL et CE, veuillez visiter le www.paradox.com.

© Systèmes de sécurité Paradox Ltée, 2019. Tous droits réservés. Spécifications sujettes à changement sans préavis. Un ou plusieurs des brevets américains suivants peuvent s'appliquer : 7046142, 6215399, 6111256, 6104319, 5920259, 5886632, 5721542, 5287111, 5119069, 5077549 et RE39406 et d'autres brevets en instance peuvent également s'appliquer. Des brevets canadiens et internationaux peuvent aussi s'appliquer.