

Specifications PRXK38-T7W

The PRXK38-T7W is a 32-Zone Wireless Fixed LCD Keypad.

Features:

- Powered by 2 "AA" batteries, with built-in backup battery (PA6 is optional)
- A 6VDC power adaptor (PA6-C6F not included) is not required but can be used as an alternative power source
- Provides real-time zone and system status, and can be used to program the panel using only battery power (2 "AA" alkaline batteries)
- Goes into sleep mode after 20 seconds to save battery life, but remains synchronized with the panel in order to automatically wake up upon an entry delay or an alarm to provide full functionality (system status, zone display and buzzer)
- Fixed message display that guides you in the operation of the system
- Displays the status of 32 zones in 2 partitions
- Displays Arm, Sleep, Stay and Disarmed status for each partition
- Displays StayD, troubles, bypassed zones and alarm memory
- In-field firmware upgrade via 307USB
- Adjustable backlight
- Built-in transceiver (433MHz)
- Wireless range in a typical residential environment: 40m (130ft)
- 8 one-touch action buttons
- 3 keypad-activated panic alarms
- Compatible with MG6250, MG5000 / MG5050 V3.22, MG5075, Spectra SP V3.22 (except SP4000) and RTX3 V1.42

P ▲ R ▲ D O X™

K38 - User's Quick Reference Guide

KEYPAD OVERVIEW

TX

Fast Flash = Communication with panel in progress

StayD

On = StayD enabled
Off = StayD disabled

Zone Status

Keys



= Press once + [MASTER CODE] for Quick Menu programming




= Press & hold for keypad settings



= Press & hold for chime programming

Partition Status

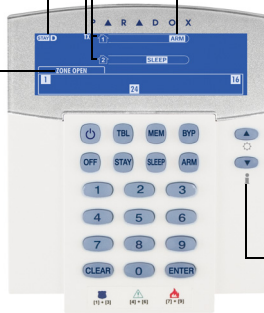

Arm / Sleep / Stay:

On = Partition armed
Off = Partition disarmed
Flash = Exit Delay
Fast Flash† = Exit Delay (final 10 sec.)
Fast Flash† = Partition in alarm

†Audible Indicators:

Continuous beep = Alarm
Variable beep = Fire alarm
Intermittent beep = Beginning of exit delay
Fast beep = Final 10 sec. of exit delay

Info:

Refresh display to see all open zones

Zone Display:

Numbers [1] to [32] correspond to zones 1 to 32 respectively. Open or entry delay zones are illuminated, and flash in alarm.

[TBL] Trouble display

On = Trouble(s) occurring

[MEM] Alarm memory display

On = Alarm(s) occurred

[BYP] Bypass programming

On = Zone(s) bypassed

ARMING AND DISARMING

**TO ARM
WHEN LEAVING...**



To Regular Arm:

1. Close all zones in the desired partition.
2. Enter your [ACCESS CODE]† or [ARM] + [ACCESS CODE]

**TO ARM
WHEN STAYING...**



To Stay Arm:

1. Press the [STAY] key.
2. Enter your [ACCESS CODE]†.

To Sleep Arm:

1. Press the [SLEEP] key.
2. Enter your [ACCESS CODE]†.

To Disarm:

[OFF] + [ACCESS CODE]†

† If needed, press button(s) corresponding to desired partition(s). For two partitions, press the other key after the confirmation beep.

PANIC ALARMS

To send a silent or audible alarm to your monitoring station, press and hold one of the following combinations for 3 seconds.

Panic Alarm Type	Button Combinations
Police	Press [1] & [3]
Medical	Press [4] & [6]
Fire	Press [7] & [9]

ALARM MEMORY DISPLAY

To view the alarms that occurred during the last armed period:

1. Disarm the system.
2. Press the [MEM] key.
3. The corresponding zone numbers that were in alarm the last time the system was armed will appear on the screen.
4. To exit, press [CLEAR].

TROUBLE DISPLAY

1. Press the [TBL] key. The word 'Trouble' and the number(s) corresponding to the trouble(s) are displayed on the screen.
2. Read the corresponding explanation of the trouble from the trouble list in the MG/SP User Guide. If no repair instructions are given, call your security company for repairs.
3. To exit, press [CLEAR].

KEYPAD SETTINGS

To mute the keypad:

Press and hold the [CLEAR] key for 10 seconds to enable or disable Keypad Muting.

To adjust the backlight level:

1. Press and hold the [▲] key for 4 seconds.
2. Keys [1] and [2] flash.
3. Press [1], then use the [▲] and [▼] to adjust.
4. To save and exit, press [CLEAR] or [ENTER].

To adjust the backlight delay:

1. Press and hold the [▲] key for 4 seconds.
2. Keys [1] and [2] will flash.
3. Press [2], then use the [▲] and [▼] to adjust.
4. To save and exit, press [ENTER].

BYPASS PROGRAMMING

Bypassed zones remained unarmed when the partition is armed.

1. Press the [BYP] key.
2. Enter your [ACCESS CODE].
3. The corresponding zone number will be displayed on the screen when open. Select the zone(s) you want to bypass by entering the two-digit zone number. For example, to enter zone 3, enter [0] then [3]. The corresponding zone indicator will flash.
4. To save and exit, press [ENTER].

CHIME PROGRAMMING

A Chime Enabled zone will advise you every time it is opened by causing your keypad to beep.

1. Press & hold the [🔔] key. The word 'Chime' appears on the screen.
2. Select the zones you want to Chime by entering the two-digit zone number. The corresponding zone number flashes. For example, to chime zone 2 enter [0] then [2]. The keypad automatically saves once the 2-digit zone number is entered.
3. To save and exit, press [ENTER].

Warranty

For complete warranty information on this product please refer to the Limited Warranty Statement found on www.paradox.com/terms. Your use of the Paradox product signifies your acceptance of all warranty terms and conditions.

Patents

US, Canadian and international patents may apply. Paradox is a trademark or registered trademark of Paradox Security Systems (Bahamas) Ltd.
© 2022 Paradox Security Systems Ltd.