

Replacement Lens Installation

To install a motion detector replacement lens:


1. Open detector and remove lens bezel.
2. Insert new lens with smooth side out. The writing on the groove side of the lens should be readable in the upright position.
3. Replace the bezel with the arrow at the top. Ensure the lens is properly seated and centered to the detector.

WARNING: Always walk test the detector after changing lenses.




WIDE ANGLE-2 (WA-2)

TOP VIEW

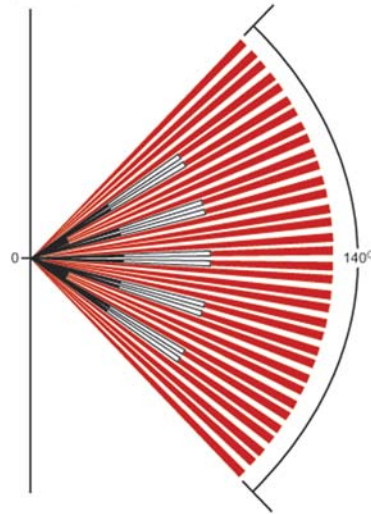


SIDE VIEW

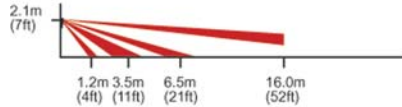


WIDE ANGLE-3 (WA-3)

TOP VIEW

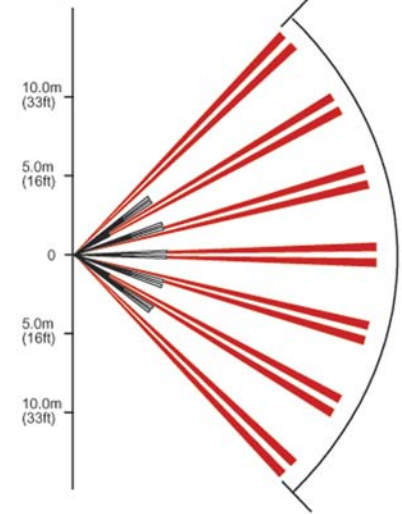


SIDE VIEW

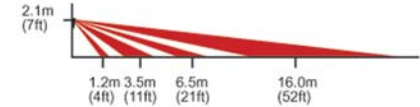


WIDE ANGLE-1 (WA-1)

TOP VIEW

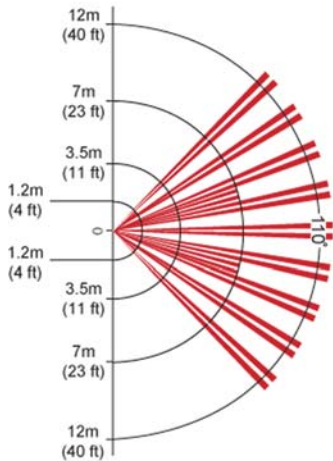


SIDE VIEW

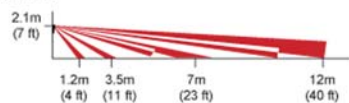


LONG RANGE-1 (LR-1)

TOP VIEW

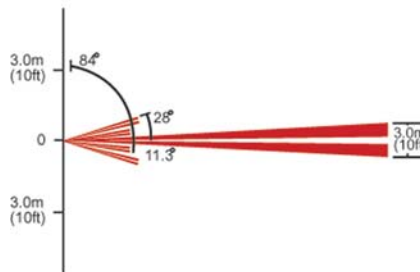


SIDE VIEW

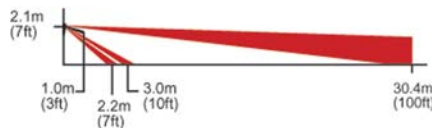


LONG RANGE-2 (LR-2)

TOP VIEW

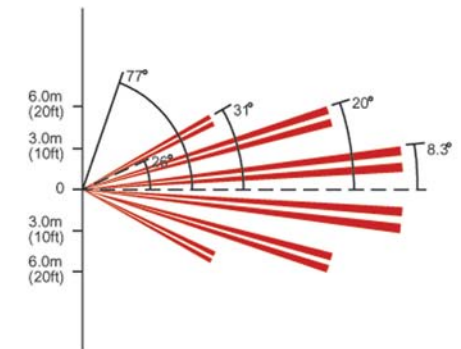

SIDE VIEW

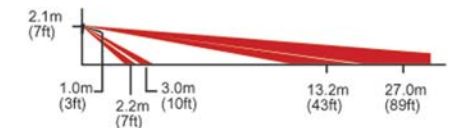


CURTAIN-1 (CU-1)

TOP VIEW




SIDE VIEW

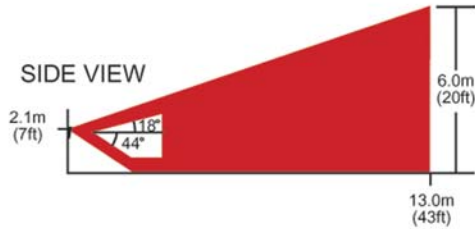

PET ALLEY (PE-1)

TOP VIEW

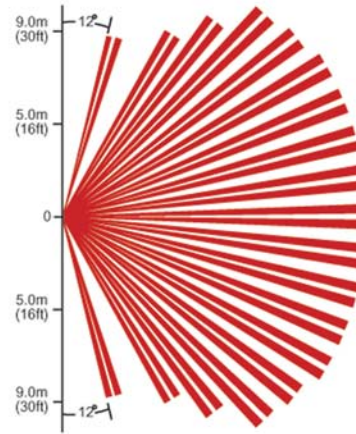


SIDE VIEW




LONG RANGE-3 (LR-3)

TOP VIEW

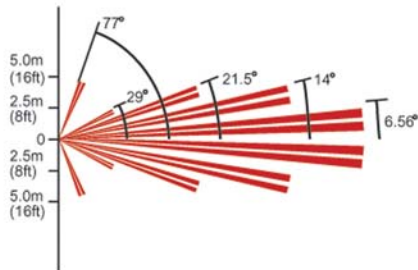


SIDE VIEW

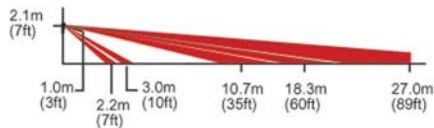


LONG RANGE-4 (LR-4)

TOP VIEW

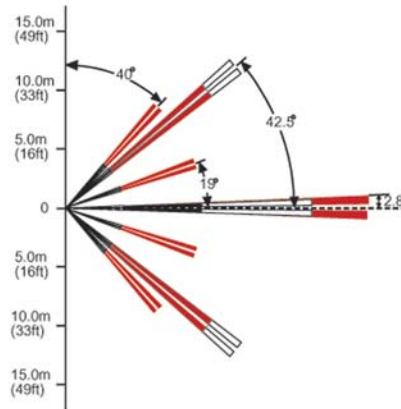

SIDE VIEW

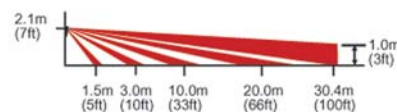

Warranty

For complete warranty information on this product please refer to the Limited Warranty Statement found on the website www.paradox.com/terms. Your use of the Paradox product signifies your acceptance of all warranty terms and conditions.
 © 2007 Paradox Security Systems Ltd. All rights reserved. Specifications may change without prior notice. One or more of the following US patents may apply: 7046142, 6215399, 6111256, 6104319, 5920259, 5886632, 5721542, 5287111, 5119069, 5077549 and RE39406 and other pending patents may apply. Canadian and international patents may also apply.